

fetchtv universal remote instructions:

Remote 2





Programming your fetchtv remote to
control your TV and DVD




Simple Remote Set Up

Welcome to the fetchtv remote setup guide. Follow the Simple Remote Set Up steps to program your fetchtv remote to control your TV. If the Simple Remote Set Up does not work, try the Direct Remote Set Up.

- 1 Hisense
- 2 LG
- 3 NEC
- 4 Palsonic
- 5 Panasonic
- 6 Samsung
- 7 Sanyo
- 8 Soniq
- 9 Sony
- 0 Teac







- 1 Hold down the  button for 3 seconds.  will flash once, then, after a pause, twice more, to indicate the remote is in Simple Remote Set Up mode.
- 2 Hold down the number next to the brand of your TV.  will flash every time a new code is sent.
- 3 Keep holding the number until your TV turns off. As soon as your TV turns off, stop pressing the number on the remote.
- 4 Press  to turn your TV back on. If you have turned the TV back on using the fetchtv remote, the setup has been a success.

 If your TV brand is not listed or this set up did not work, you may wish to try the Direct Remote Set Up ([see Page 3](#))

Direct Remote Set Up

Before you start, find your TV brand and related codes in the list ([see Page 5](#)). You may need to try each code to find the best match for your TV.



- 1** Hold down  for 3 seconds until  flashes twice, and  flashes once.
- 2** On your remote, press the first of the 4 digit codes for your brand of TV.
 - If the code is valid,  flashes twice.
 - If the code is invalid,  flashes once only on the last digit entry. You will need to repeat from Step 1.
- 3** Press  to turn your TV off and back on.
 - If this does not work, repeat from Step 1 using the next code on the list for your TV brand.
 - If you have turned the TV back on using the fetchtv remote, the setup has been a success.




How to use your remote






After setting up your fetchtv remote, you can control many functions of your TV.



Volume Up/Down - Once set up your fetchtv remote will control your TV volume.

- To switch your fetchtv remote back to control the volume on your set top box, hold down  and  for 3 seconds until  flashes once, then, after a pause, four times.

- To switch your fetchtv remote to control the volume on your TV again, hold down  and  for 3 seconds until  flashes once, then, after a pause, twice more.




Mute – Toggles the sound on or off on your TV or set top box.



AV Source – Changes the input source – e.g. HDMI – on your TV.

To find out your **TV brand & code** from A to Z.

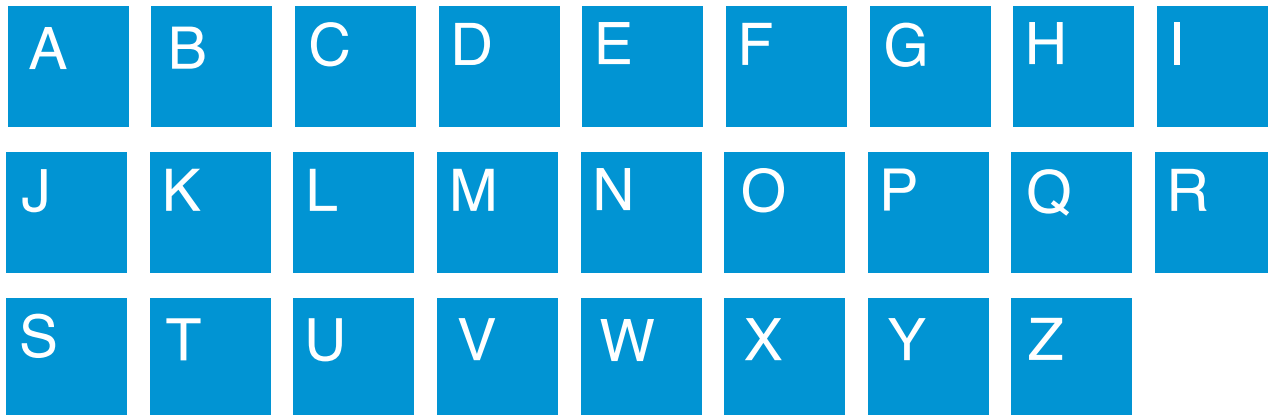

eg. if your TV brand is “Universum”, click on “U”.

TV Brands and Codes

- A -

A.R. Systems	0037, 0374, 0455
Accent	0037, 0009
Acer	1339, 1509
Acoustic Solutions	1149, 1865
Admiral	0093, 0264
AEG	1324, 2239
Agashi	0264
Aiko	0037, 0264, 0371, 0009, 0880, 1681
Aim	0037, 0455, 0753
Airis	1531
Akai	0037, 0208, 0264, 0371, 1865, 1537, 1326, 0806, 0753, 0729, 0714, 0606, 0602, 0480, 0377, 0218, 0009
Akashi	0009
Akiba	0037, 0218, 0455
Akira	2241, 0418, 0753
Akito	0037
Akura	0037, 0264, 0009, 0218, 0412, 0668, 0714, 1363, 1709, 1770, 1820, 1983, 2239

Alba	0037, 0587, 0371, 0009, 0036, 0218, 0247, 0418, 0443, 0480, 0668, 0714, 1865, 2104
All-Tel	0865, 1269
Allstar	0037
Allure	2714
Amitech	1281
Amstrad	0037, 0264, 0371, 0009, 0218, 0412, 1820
Anam	0037, 0250, 0009
Anam National	0037, 0250
Andersson	1149
Anglo	0264, 0009
Anitech	0037, 0264, 0009
Ansonic	0037, 0009, 0374, 0668
AOC	0625, 1588, 2111, 2214
Apollo	2239
Arc En Ciel	0109
Ardem	0037, 0714
Arena	0037
Aristona	0037

Art Mito	1820
Asberg	0037
Asora	0009
Astra	0037
Asuka	0264, 0218
ATD	0698
Atlantic	0037
Atori	0009
Audiosonic	0037, 0264, 0009, 0109, 0218, 0374, 0714, 0820, 0858, 0865, 1681, 1703, 1802, 1983, 2104
Audioton	0264
Audioworld	0698
Auriga	1531
Autovox	0247
Avol	1820
Awa	2241, 0888, 0108, 0264, 0009, 0036, 0374, 0606, 1681, 1813, 1985, 2039, 2480
Axxent	0009

[Go Back](#)

TV Brands and Codes

- B -

Baier	2239
Baird	0208, 0109
Bang & Olufsen	0565
Basic Line	0037, 0009, 0218, 0374, 0455, 0668, 1149
Baur	0037, 0512, 0146, 0195, 0455
Beko	0037, 0418, 0606, 0714
Belson	0698, 2241
BenQ	1562, 1574
Bensten	1326
Beon	0037, 0418
Berthen	0668
Bestar	0037, 0374
Bestar-Daewoo	0374
Bestwell	1326
Bexa	2493
Black Diamond	0587, 0753, 0820
Black Star	0247

Blackway	0218
Blaupunkt	0170, 0036, 0195, 0455
Blue Sky	0037, 0218, 0455, 0624, 0625, 0668, 0714, 1149, 1324, 1363, 1709
Boman	1324
Bondstec	0247
Boots	0009
Bork	1363
BPL	0037, 0208, 0896
Brandt	0109, 0335, 0560, 0625, 0714
Brimax	1709
Brinkmann	0037, 0418, 0668
Brionvega	0037
Brother	0264
BTC	0218
Bush	0037, 0698, 2241, 0208, 0587, 0264, 0371, 0009, 2214, 2104, 1983, 1865, 1682, 1645, 1441, 1149, 0714, 0036, 0668, 0443, 0374, 0218

[Go Back](#)

TV Brands and Codes

- C -

Camper	0037
Canton	0218
Capsonic	0264
Carad	0668
Carena	0037, 0455
Carrefour	0037, 0036
Carver	0170
Cascade	0037, 0009
Casio	0037
Cat	1682, 2155
Cathay	0037
CCE	0037
Celestial	0819, 0820
cello	1770, 1802, 1820
Centrex	0891, 1203, 1536, 1702
Centurion	0037
Century	0247

CGE	0247, 0418
Chimei	1666
Cimline	0009, 0218
City	0009
Clarivox	0037, 0418
Clatronic	0037, 0264, 0371, 0009, 0218, 0247, 0714, 1324
Concorde	0009
Condor	0037, 0264, 0009, 0247, 0418
Conia	2483, 0754, 0820, 1702
Contec	0037, 0009, 0036
Continental Edison	0109
Cosmel	0037, 0009
CPTEC	0625, 1363
Crosley	0247
Crown	0037, 0053, 0208, 0712, 0009, 0412, 0418, 0606, 0668, 0714
CS Electronics	0218, 0247
CTC	0247
Curtis Mathes	0093
Cybertron	0218

TV Brands and Codes

- D -

D-Vision	0037
Daewoo	0037, 0009, 0218, 0374, 0624, 0634, 0865, 0880, 1203, 2098
Daijitsu	2804
Dainichi	0218
Dansai	0037, 0208, 0009, 0036
Dansette	0412
Dantax	0714
Datsura	0208
Dawa	0037, 0009
Dayton	0009
Daytron	0037, 0009, 0374
De Graaf	0208
DEC	0891, 1326, 1709
Decca	0037
Deitron	0374
Denko	0264

Denver	0037, 0587, 1709, 1770, 1820
Desmet	0037, 0009
Dew	1770
DGM	2239
Diamant	0037
Diamond	0698, 0371, 0009, 0820, 0896
Dick Smith Electronics	0698, 2241, 1326, 1985, 2658
Digatron	0037
Digihome	1149
Digiline	0037, 0668
DigiMax	0891
Digital Life	0891, 0872
Digitek	1709
Digitex	0820
Digitor	0037, 0698, 0888, 1497, 1703, 1985
Digix Media	0880
Dikom	1703
diVision	2239
Dixi	0037, 0009, 0247

DL	0891, 0587, 0872, 1203, 1326, 1363
Domeos	0668
Dream Vision	1704
DSE	0698, 2241, 0888, 0820, 1326, 1497, 1703, 1985, 2155, 2480, 2484, 2658
DTS	0009
Dual	0037, 2241, 1149
Durabrand	0714
Dux	0037
DVX	0891
Dynatron	0037

[Go Back](#)

TV Brands and Codes

- E -

e-motion	1709
E:max	1324, 1531
Easy Living	1666, 1709, 2023, 2104, 2157
Ecco	0773
ECE	0037
Elbe	0037, 0218
Elcit	0247
Electroview	2706
Elekta	0264, 0009
ELG	0037
Elin	0037, 0009
Elite	0037, 0218
Elta	0264, 0009
Emco	0247
Emerson	0037, 0371, 0247, 0624, 0668, 0714
Enmar	2023
Enzer	0753

Erisson	1682
Erres	0037
ESC	0037
Etron	0009, 0820
Eurofeel	0264
Euroman	0037, 0264
Europa	0037
Europhon	0037
Evesham	1248, 1536
Excello	1326
Exquisit	0037, 0247

[Go Back](#)

TV Brands and Codes

- F -

Fenner	0009, 0374
Ferguson	0037, 0053, 0109, 0195, 0335, 0443, 0560, 0625, 1865
Fidelity	0037, 0264, 0512, 0371, 0412
Finlandia	0208
Finlux	0037, 0480, 0714, 1248
Firstline	0037, 0208, 0009, 0247, 0374, 0624, 0668, 0714, 1363
Fisher	0208, 0036
Flint	0037, 0264, 0218, 0455
Force	1149
Formenti	0037
Fortress	0093
Fraba	0037
Friac	0037, 0009
Frontech	0264, 0009, 0247
Fujimaro	0865
Fujitsu	0009, 0683, 0853

Fujitsu General

0009, 0683

Fujitsu Siemens

1248, 1666

Funai

0264, 0668, 0714, 1666

Futronic

0264, 1531

[Go Back](#)

TV Brands and Codes

- G -

G-Hanz	1363
Gaba	0858, 1183
Galaxi	0037
Galaxis	0037
Gateway	1755
GBC	0009, 0218, 0374
GE	0093, 0335, 0560, 0625
GEC	0037
Geloso	0009, 0247, 0374
General	0109
General Technic	0009
Genesis	0037, 0009
Genexxa	0037, 0009, 0218, 0412
Gericom	0865, 0880
Giant	0009
Gold	1770, 2023, 2039, 2157
Goldfunk	0668

GoldStar	0037, 0109, 0247, 0377, 0455, 0606, 0714
Goodmans	0037, 0264, 0371, 1985, 1983, 1795, 1720, 1682, 1645, 1149, 0880, 0714, 0668, 0634, 0625, 0624, 0560, 0480, 0374, 0335, 0218, 0036, 0009
GP	0753
GPM	0218
Gradiente	0037, 0053, 0170
Graetz	0371, 0714
Granada	0037, 0208, 0108, 0226, 0036, 0146, 0560
Grandin	0037, 0009, 0218, 0374, 0455, 0624, 0668, 0714, 0865, 0880
Grundig	0037, 0587, 0009, 0036, 0195, 0443, 1223, 1645, 2239
GVA	1326, 1363, 2098

[Go Back](#)

TV Brands and Codes

- H -

Haier	0698, 0891, 0869, 1203, 1983
Halifax	0264
Hanimex	0218
Hanseatic	0037, 0009, 0377, 0625, 0634, 0714
Hantarex	0037, 0009, 0865
Hantor	0037
Harsper	0865
Harwa	0773, 1269
Harwood	0037, 0009, 0412
Hauppauge	0037
Havermy	0093
HB	1324
HCM	0037, 0264, 0009, 0218, 0412, 0418
Hema	0009
Hicon	2483, 1467
Hifivox	0109
Highlander	1531

Highline	0037, 0264
Hikona	0218, 1983
Hinari	0037, 0208, 0264, 0009, 0036, 0218, 0443
Hisawa	0218, 0455, 0714
Hisense	0208, 2341, 0009, 1069, 1363, 2098, 2371, 2658
Hitachi	0037, 0108, 0036, 0109, 0225, 0480, 0563, 0576, 0634, 0744, 0797, 1149, 1576, 1772, 2214
Hitachi Fujian	0108
Hitsu	0009, 0218, 0455
Hoeher	0714, 0865
Home Electronics	0606
Hornyphon	0037
Hoshai	0218, 0455
Huanyu	0374
Hugoson	1666
Hyper	0009, 0247
Hypson	0037, 0264, 0455, 0668, 0714
Hyundai	0698, 0888, 0865, 1281, 1326, 1531, 1681, 1720, 1770, 1820

[Go Back](#)

TV Brands and Codes

- | -

Iberia	0037
ICE	0037, 0264, 0371, 0218
ICeS	0218
Imperial	0037, 0247, 0418, 2092
Indiana	0037
Ingelen	0714
Ingersol	0009
Inno Hit	0009, 0218, 0247
Innowert	0865
Inotech	0773, 0820
Interbuy	0037, 0264, 0009, 0247
Interfunk	0037, 0512, 0109, 0247
Internal	0624
Intervision	0037, 0264, 0009, 0218, 0247, 0377, 0455
Irradio	0037, 0371, 0009, 0218, 0247
Isukai	0037, 0218, 0455
ITS	0037, 0264, 0371, 0218

ITT

0208, 0480

ITT Nokia

0208, 0480, 0606

ITV

0037, 0264, 0247, 0374

[Go Back](#)

TV Brands and Codes

- J -

Jean	0036
JGC	1709
JMB	0443, 0634
JNC	0896, 1536, 1702
Jocel	0712
JVC	0093, 0053, 0371, 0036, 0218, 0418, 0606, 0683, 1818, 2714

[Go Back](#)

TV Brands and Codes

- K -

Kaisui	0037, 0009, 0218, 0455
Kambrook	0377
Karcher	0264, 0606, 0714, 1324
Kathrein	0880
Kawa	0371
Kendo	0037, 0247, 0377, 1149
Keydo	1702
Keymat	1326
Kiota	0371, 0455
Kiton	0037, 0668
Kneissel	0037, 0374
Kobra	1467
Koenig	0037
Kolster	0037, 0218, 0247
Konichi	0009
Konka	0037, 0587, 0371, 0218, 0418, 0641, 0714, 0726, 0754, 0779, 0816, 1190, 2267, 1404

Korpel	0037
Kosmos	0037
Kotron	0412
Koyoda	0009
Kross	1536
Kyoshu	0412, 0418

[Go Back](#)

TV Brands and Codes

- L -

L&S Electronic	0714, 0865
Lavic	1363
Leader	0009
Lecson	0037
Legend	0009
Lenco	0037, 0587, 0374, 0721, 1983
Lenoir	0009
Lentec	1531
Lesa	0247
Level	2023
Lexsor	1507
Leyco	0037, 0264
LG	0037, 0698, 2182, 0714, 1149, 1637, 1681
Liesenkoetter	0037
Lifetec	0037, 0009, 0218, 0374, 0668, 0683, 0714
Lloyd's	0009
Local India TV	0208

Lodos	1149
Loewe	0037, 0512, 0633
Logik	0698, 2241, 0371, 0009, 0773, 0880, 1865
Logix	0668
Luker	1985
Luma	0009, 0374
Lumatron	0037, 0264, 0668, 2023
Lumenio	0037
Lux May	0037, 0009
Luxor	0208, 0480

[Go Back](#)

TV Brands and Codes

- M -

M Electronic	0037, 0512, 0009, 0109, 0195, 0247, 0374, 0480, 0634, 0714
Madison	0037
Magnadyne	0247
Magnavox	0036, 0729, 0753, 1069, 1203
Magnum	0037, 0714, 2023
Mandor	0264
Manesth	0037, 0264
Manhattan	0037, 0668
Maqma	1467, 1702
Marantz	0037, 0412
Mark	0037, 0009, 0374, 0714
Marks and Spencer	1770
Masuda	0037, 0264, 0371, 0009, 0218
Materin	0858
Matsui	0037, 0208, 0371, 0009, 0036, 0195, 0335, 0443, 0455, 0714, 0744, 0880, 1666, 2155
Matsushita	0250

Maxdorf	0773
Maxent	1755
Maxess	2493
MCE	0009
Mediator	0037
Medion	0037, 0698, 0512, 0245, 0668, 0714, 0880, 1149, 1248
Memorex	0250, 0009
Memory	1983
Memphis	0009
Mercury	0037, 0009
Metronic	0625
Metz	0037, 0587, 0195, 0447, 0668
MGA	0218, 0374
Micromaxx	0037, 0668, 0714, 1324
Microtek	0820
Mikomi	0744, 1149
Minato	0037
Minerva	0108, 0195, 1248

Minoka	0037, 0412
Mirai	1666
Mitsubishi	0037, 0093, 0108, 0512, 0036
Mogen	1820
Monaco	0009
Moree	0037
Morgan's	0037
Motorola	0093
MTC	0512
MTlogic	0714
Multitec	0037, 0668
Multitech	0037, 0264, 0009, 0247
Musikland	0218, 0247
Mx Onda	1820, 1983
Myrica	1666

[Go Back](#)

TV Brands and Codes

- N -

NAD	0037, 0865
Naiko	0037, 0606, 0753
Nakimura	0037, 0374
NAT	0226
National	0226
NEC	0053, 0170, 2461, 0009, 0036, 0245, 0374, 0455, 1704, 1784
Neckermann	0037, 0247, 0418
NEI	0037, 0371
NEO	0754, 1324
Neovia	0865
Nesco	0247
Netsat	0037
Neufunk	0037, 0009, 0218, 0714
New Tech	0037, 0009
New World	0218
Nikkai	0037, 0264, 0009, 0036, 0218
Nikkei	0714

Nintaus	0891
Nogamatic	0109
Nokia	0208, 0374, 0480, 0606
Norcent	1588
Nordmende	0037, 0891, 0109, 0195, 0560, 0714
Normerel	0037
Nortek	0668
Novatronic	0037, 0374
Nu-Tec	0698, 0455, 0820, 2481

[Go Back](#)

TV Brands and Codes

- O -

O.K.Line	1324
Oceanic	0208, 0563
Odeon	0264
Odys	1795
Okano	0037, 0264, 0009, 2982
Olevia	1588
Omega	0264
Omni	0698, 0891, 0872
Onida	0053
Onimax	0714
Onix	0698
Onn	1709, 1770, 2112
Onwa	0371, 0218, 0602
Onyx	1709, 1770
Opera	0037, 0714, 1770
Optimus	0250
Orbit	0037

Orion	0037, 0264, 0412, 0443, 0714, 0880
Orline	0037, 0218
Ormond	0668
Osaki	0037, 0264, 0218, 0374, 0412
Osio	0037
Oso	0218
Osume	0037, 0036, 0218
Otic	1203, 1326, 1983
Otto Versand	0037, 0093, 0226, 0512, 0036, 0109, 0195, 0247

[Go Back](#)

TV Brands and Codes

- P -

Pacific	0443, 0714, 1324
Palladium	0037, 0247, 0418, 0714
Palsonic	0037, 0698, 2461, 0264, 0218, 0377, 0418, 0773, 0779, 1183, 1269, 1326, 1507, 1795, 1813, 2481
Panama	0037, 0264, 0009, 0247
Panasonic	0037, 0250, 0108, 0226, 0853, 1310
Panavision	0037
Pathe Marconi	0109
Pausa	0009
Perdio	0037
Perfekt	0037
Petters	0037
Philco	0037, 0247, 0418
Philips	0037, 0009, 0374, 0605, 0721, 1867, 1887
Phocus	0714
Phoenix	0037
Phonola	0037
Phonotrend	2155

Pioneer	0037, 0170, 0512, 0109, 1457
Plantron	0037, 0264, 0009
Playsonic	0037, 0714
Plustron	1770
Polaroid	1645, 1720
Poppy	0009
Portland	0374, 0624
Powerpoint	0037, 0698, 1770, 1802, 1820
Prandoni-Prince	0247
Premier	0891, 0264, 0009
Prima	0264, 0009, 0412, 0753, 1269, 1507
Princess	0773, 1326
Profex	0009
Profi	0009
Profitronic	0037
Proline	0037, 0625, 0634
Prosonic	0037, 0371, 0374, 0606, 0668, 0714, 0880, 1324, 1507, 1709, 1770, 1784, 1820, 1865
Protech	0037, 0264, 0009, 0247, 0418, 0668
ProVision	0037, 0714, 1324, 1531

Pye

0037, 0374, 0412, 2456

Pymi

0009

[Go Back](#)

TV Brands and Codes

- Q -

Quadral

0218

Quadro

0753, 0796, 1149, 1326, 1531

Quasar

0250, 0009, 0247, 0865

Quelle

0037, 0512, 0109, 0195, 0247, 0668

Questa

0036

[Go Back](#)

TV Brands and Codes

- R -

R-Line	0037
Radialva	0218
Radiola	0037
Radiomarelli	0037, 0247
RadioShack	0037
Radiotone	0037, 0264, 0009, 0412, 0418, 0668
Rank Arena	0036, 0602, 0753, 0796
RCA	0093, 0560, 0625, 0753, 0796
Recor	0037, 0418
Rectiligne	0037
Rediffusion	0036
Redstar	0037
Reflex	0037, 0668
Relisys	0865, 1645
Remotec	0037, 0250, 0093
Reoc	0714
Revox	0037

Rex	0264, 0247
RFT	0037, 0264
Rinex	0773
Roadstar	0037, 0264, 0009, 0218, 0418, 0668, 0714
Rolson	0819, 2098
Rover	0036
Rowa	0698, 0712, 0587, 0264, 0009, 1441
Royal Lux	0335, 0412

[Go Back](#)

TV Brands and Codes

- S -

Saba	0250, 0109, 0335, 0560, 0625, 0714, 1588
Sagem	0455
Saisho	0264, 0009
Saivod	0037, 0712, 0668
Sakura	1203, 1326
Sakyno	0455
Salora	0208, 0480, 2239
Salsa	0335
Sampo	1755
Samsung	0037, 2051, 0093, 0587, 0264, 0009, 0644
Sansui	0037, 0888, 0371, 0455, 0602, 0714, 0729, 0753, 0806, 1248, 1531, 1537, 1682, 1703, 2239, 2804
Santon	0009
Sanyo	0208, 0170, 2461, 0108, 0009, 0036, 0146, 0721, 1149, 1507
SBR	0037
Schaub Lorenz	0374, 0606, 0714, 1324, 1363
Schneider	0037, 0371, 0218, 0247, 0668, 0714

Scott	1983
Sears	0146
Seaway	0634
SEG	0037, 0264, 0009, 0036, 0218, 0247, 0624, 0668, 1149
SEI	0037
Sei-Sinudyne	0037
Seleco	0371
Sencora	0009
Serino	0093, 0455
Sharp	0093, 0053, 0036, 2214
Sherwood	1784
Shinelco	2104
Shintoshi	0037
Shivaki	0037, 0443
Show	0009, 0418
Siemens	0037, 0146, 0195
Siera	0037
Silva	0037
Silva Schneider	0037

Silvano	0587
Silver	0036, 0455
Simz	1820
Singer	0891, 0371, 0009, 0247, 0335, 0806, 1537
Sinotec	0773
Sinudyne	0037
SKY	0037, 0880
SKY Brazil	0880
Skysonic	0753, 0796
Sliding	0865, 0880, 1324
SLX	0668
SmartVision	1183
Soemtron	0865
Sogo	0606
Solavox	0037
Sonawa	0218
Soniko	0037
Soniq	2493, 1467, 1702, 2474, 2829
Sonitron	0208

Sonneclair	0037
Sonoko	0037, 0264, 0009
Sonolor	0208
Sontec	0037, 0009
Sontech	1983
Sony	1825, 0036, 1685
Sound & Vision	0218, 0374
Soundwave	0037, 0418
Soyea	0773
Spectra	0009
Ssangyong	0009
Staksonic	0009
Standard	0037, 0009, 0218, 0374, 1709
Starlite	0037, 0264, 0009
Stenway	0218
Stern	0264
Strato	0037, 0264, 0009
Strong	1149
Sungoo	1248

Sunkai	0218, 0455, 0865
Sunstar	0037, 0264, 0371, 0009
Sunwatt	0455
Sunwood	0037
Supersonic	0208, 0009, 0455
SuperTech	0037, 0009, 0218
Supra	0009, 0374
Susumu	0218, 0335
Sutron	0009
SVA	0587, 0865, 0872
Svasa	0208, 0455
Swisstec	0865, 0880, 2104
Sysline	0037

[Go Back](#)

TV Brands and Codes

- T -

T+A	0447
Tandberg	0109
Tandy	0093, 0218, 0247
Tashiko	0170, 0036, 0146
Tatung	0037, 1248, 1324, 1720
TCL	0892, 2958
TCM	0714
Teac	0037, 0698, 2241, 0170, 0712, 0587, 0264, 0512, 1709, 1755, 1770, 1794, 1795, 1820, 1983, 1985, 2607, 2714, 2761, 3084, 3163, 1701, 1645, 1637, 1363, 1203, 1149, 0892, 0721, 0714, 0668, 0624, 0455, 0418, 0412, 0009
Tec	0037, 0009, 0247, 0335
Tech Line	0037, 0668
Techica	0218
Technics	0250
Technika	1865, 1983
TechniSat	2155
Technisson	0714

Techno	2267
Technosonic	0625, 0880, 1324, 1326
Technotrend	1531, 1702, 2155
Techvision	1709
Tedelex	0208, 0891, 0009, 0418, 0606, 0726, 0806, 1537, 1681, 1709
Teiron	0009
Tek	0820
Telecor	0037, 0218
Telefunken	0037, 0698, 0712, 0587, 1703, 1681, 1588, 1536, 1326, 0896, 0820, 0819, 0754, 0753, 0714, 0625, 0560, 0335, 0109
Telefusion	0037
Telegazi	0037, 0264, 0218
Telemeister	0037
Telesonic	0037
Telestar	0037, 0009
Teletech	0037, 0009, 0247, 0668
Teleton	0036
Teleview	0037

Telstar	1702
Tempest	0264, 0009, 0455
Tennessee	0037
Tensai	0037, 0371, 0009, 0218, 0247, 0374, 0377
Tenson	0009
Tesla	0037, 0714
Tevion	0037, 2241, 0668, 0714, 1190, 1248, 1645, 2023
Texet	0009, 0218, 0374
Thes	2039
Thomson	0037, 0109, 0335, 0560, 0625, 1588
Thorn	0037, 0512, 0036, 0109, 0335
Thorn-Ferguson	0335
Time	1702
Tiny	1269
Tobishi	0218
Tokai	0037, 0009, 0374, 0668
Tomashi	0218
Tongtel	0587
Topline	0668

Toshiba	1508, 0009, 0036, 0109, 0195, 2732
Tosumi	1770
Toyoda	0264, 0371, 0009, 1709
Trakton	0264
TRANS-continents	0037, 0668, 0865, 2023
Transonic	0037, 0698, 0712, 0587, 0264, 0512, 0009, 0418, 0455, 0858, 1069, 1326, 1363, 2112, 2354
Trevi	2112
Triad	0218
Trio	1248
Tristar	0264, 0218
Triumph	0037
TVE	2239

[Go Back](#)

TV Brands and Codes

- U -

Uher	0037, 0374, 0418, 0480
Ultravox	0037, 0247, 0374
Unic Line	0037, 0455
Uniden	2122
United	0037, 0587, 0714, 1770, 1820, 1983
Unitek	1709
Universal	0037
Universum	0037, 0170, 0264, 0512, 0009, 0036, 0109, 0146, 0195, 0247, 0418, 0480, 0668
Univox	0037

[Go Back](#)

TV Brands and Codes

- V -

V2max	0865
V7 Videoseven	0880, 1666, 1755
Venturer	1865
Venus	1326
Vestel	0037, 0668
Vexa	0037, 0009
Victor	0250, 0053, 0036
Videologic	0218
Videologique	0218
Videomac	0009
Videosat	0247
VideoSystem	0037
Videotechnic	0374
Viewpia	1784
Viewsonic	1542, 1588, 1755, 2111
Vision	0037, 0264
Vistron	1363

Vivax	1326, 1709
Vortec	0037
Voxson	0037, 0418, 2706

[Go Back](#)

TV Brands and Codes

- W -

Walker	1149
Waltham	0037, 0109, 0418, 0443, 0668
Watson	0037, 0009, 0218, 0668, 0714
Wega	0037, 0036
Wegavox	0009
Welltech	0714
Wharfedale	0037, 0891, 0896, 1324, 1681, 1983
White Westinghouse	0037, 0624
Windsor	0668
Wintel	0714
World-of-Vision	0865, 0880
Worldview	0455

[Go Back](#)

TV Brands and Codes

- X -

Xenius	0634
---------------	------

Xi-En	1770
--------------	------

Xiron	1983
--------------	------

XLogic	0698
---------------	------

XMS	1441
------------	------

Xomax	1770
--------------	------

Xoro	1507
-------------	------

Xrypton	0037
----------------	------

[Go Back](#)

TV Brands and Codes

- Y -

Yamaha	0797, 1576
Yamishi	0037, 0218, 0455
Yapshe	0250
Yokan	0037
Yoko	0037, 0264, 0009, 0218, 0247
Yorx	0218
Ytawai	1531

[Go Back](#)


TV Brands and Codes

- Z -

Zenith	0624
---------------	------

Ziggo	1818
--------------	------

[Go Back](#)

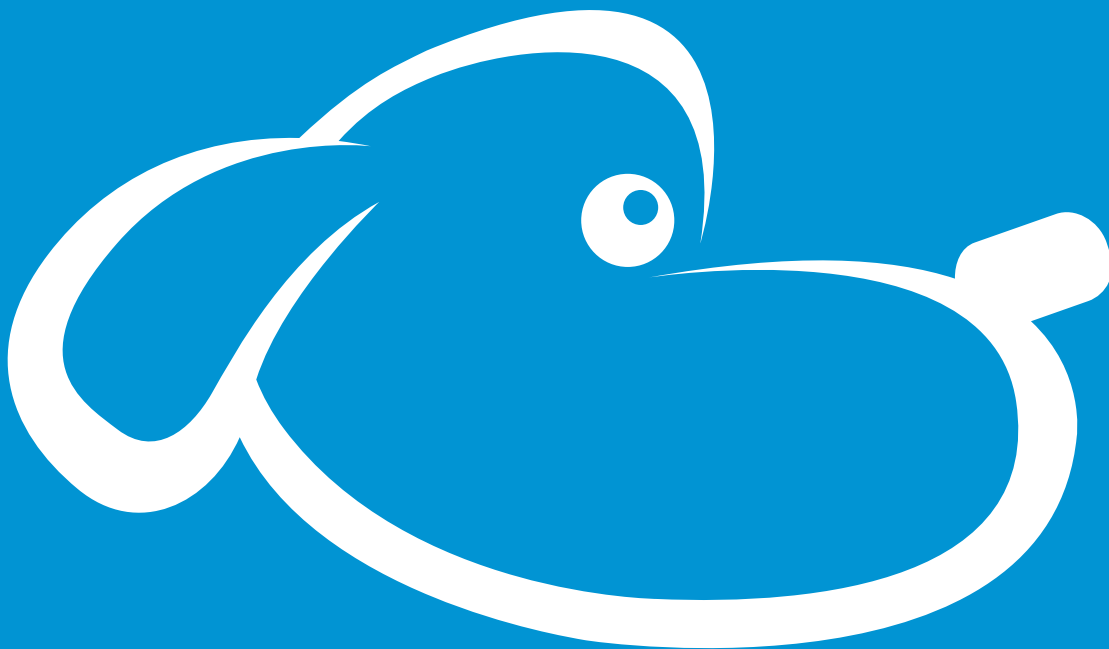

www.fetchtv.com.au

©FetchTV Pty Limited. ABN 36 130 669 500. All rights reserved. FetchTV Pty Limited is the owner of the trade marks fetchtv and the Dogs Head Device. The set top box and the fetchtv service may only be used lawfully and in accordance with relevant terms of use of which you are notified by your service provider. You may only use the recording functionality of the set top box for the purpose of viewing programs at your address at a more convenient time. You must not use any recording or the electronic program guide, or any part of it, for any purpose other than private and domestic purposes and you must not sub-licence, sell, lease, lend, upload, download, communicate or distribute it (or any part of it) to any person.