

Fetch Voice Remote

**fetch**

# What's inside

What's inside .....	2
Welcome .....	3
Things to know .....	4
Pair your Remote when you set up your new Fetch Mighty or Fetch Mini .....	5
Pair your Remote for Voice Control and Search .....	6
Pairing Tips and Troubleshooting .....	8
Universal Remote Set Up .....	10
Controlling the TV Volume .....	11
TV Power and AV .....	12
Simple Remote Set Up .....	13
Direct Remote Set Up .....	14
Reset remote to control Fetch Box only .....	15
Setup for Soundbars .....	16
To find out your TV brand and code from A to Z .....	17

# Welcome

Welcome to the Fetch Voice Remote Setup Guide. The remote features a microphone and voice button for voice control. Pair your remote for Voice Control and Search. You can do this when you set up your new Fetch Box (Page 5) or later if you buy a remote to use with your existing Fetch Box (Page 6). This guide will also show you how to program your Fetch remote to control your TV (Page 10).



# Things to know

- The remote uses both Bluetooth and IR (Infrared) to communicate with the Fetch Mighty or Fetch Mini.
- The remote works with any Fetch Box in Infrared mode straight away (no need to pair).
- The remote uses Infrared to connect to the Fetch Box and pair using Bluetooth, so you will need to be in front of your box to pair the remote.
- You can pair one Fetch Mighty or Fetch Mini at a time to use voice control through the remote.
- Fetch will prompt you to pair the remote using Bluetooth the first time you use it with your Fetch Mighty or Fetch Mini.
- Bluetooth pairing is not supported on Gen 2 Fetch boxes. The remote can only be used in Infrared mode with the Gen 2 Fetch box.

## Note


The Voice Remote is available for purchase at [www.fetchtv.com.au/voice](http://www.fetchtv.com.au/voice)

# Pair your Remote when you set up your new Fetch Mighty or Fetch Mini

Fetch will automatically pair your remote when you first set up your Fetch Mighty or Fetch Mini.

For everything you need to get up and running with Fetch, see the Quick Start Guide you got with Fetch. Then follow on screen to pair.

To pair your Fetch Voice Remote with your Fetch Mighty or Fetch Mini during start-up:

- 1 Follow the prompts in the Welcome screen.
- 2 You'll see a "Pairing Remote..." message on screen. You may be asked to hold  on the remote.
- 3 Once the remote is paired, Fetch will let you know and continue to set up.
- 4 Next, you'll need to connect to your Wi-Fi network (if not using a Wired connection) and enter the Activation Code for your Fetch box.
- 5 Fetch will also prompt you to set up the remote to control your TV, or you can do this later (see [Universal Remote Set Up](#) on Page 10).
- 6 Continue through the rest of the Welcome screen steps to complete set up. Your box will restart and load the Fetch menu.

## Can't pair the remote?

If pairing or remote set up fails, don't worry as you can do this later (Page 6).


# Pair your Remote for Voice Control and Search

Pairing your remote via Bluetooth enables voice control and voice search.

Your remote should pair automatically when you first set up your Fetch box (Page 5). Follow these steps if the remote didn't pair during start up or you buy a Fetch Voice Remote later to use with your existing Fetch box.

## Pair your remote

To pair your Fetch Voice Remote with your Fetch Mighty or Fetch Mini:

- 1 Press and hold  on the remote while pointing at the Fetch box to pair.

You'll see a "Pairing Remote..." message and confirmation once the remote is paired. Once paired, the light at the top of the remote will flash green on each button press

If you can't pair the remote, please try to pair again. See the pairing tips on Page 8 or try a remote re-pair on Page 9.


## Voice Control

Press and hold  on the remote while pointing at the Fetch box.

When you see "I'm Listening..." on screen, keep holding the voice button and ask Fetch to do something.

You can say "Fetch action movies" or "Play BBC First". Or you can just say the name of the program, app or channel like "Bluey", "Netflix" or "Discovery Turbo".


Your search results will be displayed in a Search if there are multiple results.

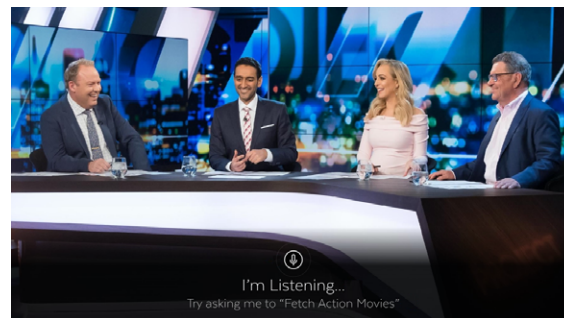

Here's a list of some of the things you can say:

	Voice Command	What it does
<b>Change channels:</b>	"Fetch BBC First" or just "BBC First"	Launches BBC First channel
	"Play Discovery Turbo"	Launches Discovery Turbo channel
	"Seven HD"	Launches 7HD channel
<b>Control playback:</b>	"Pause"	Pause playback
	"Play"	Resume playback
	"Rewind eight times"	Rewind playback eight times
	"Fast forward"	Fast forward playback
<b>Search for content:</b>	"Fetch Masterchef" or just "Masterchef"	Launches a Search on Fetch for this title
	"Search YouTube for funny videos"	Launches a Search of YouTube
	"Harry Potter and the Order of the Phoenix"	Launches a Search on Fetch for this title
	"Search for The Expanse on Prime Video"	Launches the title on Amazon Prime Video
	"Search for The West Wing"	Launches a Search and shows all the ways to watch this title
<b>Launch an app:</b>	"Fetch Netflix" or just "Netflix"	Launches Netflix
	"Open Amazon Prime"	Launches Amazon Prime Video
	"Go to SBS on Demand"	Launches SBS on Demand
<b>Navigate Fetch:</b>	"Fetch recordings" or just "Recordings"	Opens <a href="#">Menu &gt; My Stuff &gt; Recordings</a>
	"Fetch Kids Movies"	Opens <a href="#">Menu &gt; Movies &gt; Genre &gt; Kids</a>
	"Go to Movie Store"	Opens <a href="#">Menu &gt; Movies &gt; Movie Store</a>
	"Movie Box"	Opens <a href="#">Menu &gt; Movies &gt; Movie Box</a>
	"Open Settings"	Opens <a href="#">Menu &gt; Manage &gt; Settings</a>


## Note

- While you can launch apps through voice commands, you can't control or search using voice commands within apps.
- You can only search for Netflix Exclusive Content through text entry, voice search isn't supported for this content.
- For more voice commands hold  and say "Voice Help".

# Pairing Tips and Troubleshooting

## Voice control tips

If Fetch can't recognise your voice commands, see the following tips

- Make sure you hold down the voice button  while saying a command. The remote can listen for up to 15 seconds.
- Say it in another way.
- Hold the remote closer to your mouth.
- Speak clearly into the microphone at the top of the remote.

## Pairing tips

If you can't pair the remote or use voice control, here are some things to try.

- Check your remote is paired (Page 6) by pressing any button on the remote. The light at the top of the remote should flash green on each button press. In Infrared mode, the light will flash red on each button press.
- If your remote is paired but voice control still isn't working, see Page 9.
- At the start of each session, allow for a couple of button presses to re-connect to your Fetch box.
- Once paired through Bluetooth, make sure you use the remote within 10 metres of the Fetch box. In Infrared mode you need to be in front of and within 6 metres of your box.
- Check the battery level at [Menu > Manage > Settings > Remote Control](#). If the battery level is below 10 percent, change the batteries.
- Update the remote software at [Menu > Manage > Settings > Remote Control](#).
- Re-pair the remote and try to use voice control again (Page 9).

### Bluetooth Mode

Light flashes red and green when pairing. Flashes green on button press when paired.

### Infrared Mode

Light flashes red when not paired to Fetch Box using Bluetooth.







## Re-pair the Bluetooth connection

If you have trouble pairing the remote for voice control, you can re-pair the remote.

To reset and re-pair the remote:

- 1 Point your remote at your Fetch box. Press and hold  and  on the remote, until the light on the remote flashes red and green.
- 2 You'll see a pairing prompt on screen and a confirmation once the remote is paired. Once paired, the light at the top of the remote will flash green on each button press.

## Remote is paired but voice control isn't working

If you have paired the remote but voice control still won't work, follow the steps below.

- 1 Reset your remote at [Menu > Manage > Settings > Remote Control > Factory Reset Remote](#) (Page 15).
- 2 After the remote is reset, take out the batteries.
- 3 Press any buttons on the remote for 5-10 seconds until the light at the top of the remote no longer flashes on button presses.
- 4 Put the batteries back into the remote.
- 5 Pair the remote again and see if voice control works (Page 6).

## Still can't pair?

- If can't still pair your remote after following the reset steps, you may need to contact your Fetch Service Provider to arrange a replacement remote.
- To set up the remote to control your TV, even if the remote is not paired, you can use the Simple Remote Set Up (Page 13).

### Note

If you do a soft or hard reset of your box by pressing the four colour buttons on the remote (for example, as part of troubleshooting an issue on your box) you'll need to follow the steps below to re-pair your remote. If you reset your box through [Menu > Manage > Settings > Device Info > Options](#) you should be able to pair using the voice button (Page 6).

# Universal Remote Set Up

Fetch will prompt you to program the Fetch remote to control your TV when you first set up your Fetch box (Page 5). You can also do this later on your Fetch box.



1 Go to [Menu > Manage > Settings > Remote Control](#).

2 Select [Universal Setup](#) and press 

If you don't see the option your remote may not be paired yet. Reset and re-pair the remote (Page 9) then repeat from step 1.

3 Fetch may prompt you to "Select your TV Type" so that it can set up the remote.

4 Next, follow the prompts to test the remote set up.

You'll be asked to press the Vol+ button on the remote. Then, press  if the remote changed the volume on your TV or  if this did not work.

Fetch may ask you to test other buttons too such as the Vol -, AV/Source and TV Power.

## Changed your TV?

If you connect a different TV to your Fetch box, go to [Menu > Manage > Settings > Remote Control](#) and select [Change TV](#) to program your remote to control the new TV. Follow from step 3 above.

## Using a soundbar?

If you are using a soundbar in your setup, and are having trouble setting up the universal remote or getting the volume to work, please see Page 16.

# Controlling the TV Volume

 Volume Up

 Mute - Toggles the sound on/off

 Volume down

There are 2 ways you can switch volume control from your TV to your Fetch box.

## 1. To switch control through the Fetch menu

Switch control from the TV to the Fetch box:

- Go to [Menu > Manage > Settings > Remote Control](#) and choose [Set to Fetch Box](#).

Switch control from the Fetch box to the TV:

- Go to [Menu > Manage > Settings > Remote Control](#) and choose [Set to TV](#).

## 2. To switch control through the Fetch Voice Remote

Switch control from the TV to the Fetch box:

- Hold down  and  until the remote flashes twice.

Switch control from the Fetch box to the TV:

- Hold down  and  until the remote flashes once.

# TV Power and AV

Fetch Power: Press  to turn on/off Fetch box.

TV Power: Press  then press  to turn on/off TV.

AV Source: Press  then press  to change the input source, e.g. HDMI switch on TV.

# Simple Remote Set Up

If you can't pair and set up your voice remote (Page 6) you can still use the Simple Remote Set Up steps to program your Fetch remote to control your TV. If the Simple Remote Set Up doesn't work, try the Direct Remote Set Up.

**Step 1** Hold down  for 3 seconds. The red light remote will flash twice.

**Step 2** Find your TV brand below and hold down the number key, until TV turns off.

 - Hisense     - LG     - NEC     - Palsonic     - Panasonic  
 - Samsung     - Sanyo     - Soniq     - Sony     - Teac

## Note

If your TV brand is not listed or this setup did not work, you may wish to try the Direct Remote Set Up (Page 14).

**Step 3** Wait a moment and your TV will turn back on automatically.

# Direct Remote Set Up

Before you start, find your TV brand and related codes in the list (see Page 17). You may need to try each code listed against the brand to find the best match for your TV.

**Step 1** Hold down  and  for 3 seconds. The remote flashes twice and backlights come on.

**Step 2** Press the first of the 4 digit codes for your brand of TV.

- ✓ If the code is valid, the remote flashes twice.
- ✗ If the code is invalid, the remote flashes once only on the last digit entry.

**Step 3** Press  then  to turn your TV off and back on.

- If this doesn't work, repeat from Step 1 using the next code on the list for your TV brand.
- If you have turned the TV back on using the Fetch remote, the setup has worked.

# Reset remote to control Fetch Box only

## Paired remote



If the remote is paired via Bluetooth, you can clear the remote of the TV code programmed at [Menu > Manage > Settings > Remote Control > Factory Reset Remote](#).

Or if you connect a different TV to your Fetch box, choose [Change TV](#) to program the remote to control the new TV (Page 10).

## Remote not paired

To clear the remote of the TV code programmed through Simple or Direct Remote Set Up (Pages 13 and 14) follow these steps:

### Step 1

Hold down  and  for 3 seconds. The remote flashes twice and backlights come on. This will put the remote control into programming mode, where you'll have 10 seconds to reset it.

### Step 2

Press the following buttons on your remote in order:   

### Step 3

After you press the 9 button, then the 7 button and then the 7 button again, the remote will flash four times.

If you want to program the Fetch remote to control your TV again, follow the Simple Remote Set Up process (Page 13).

# Setup for Soundbars

## Recommended Universal Remote setup for Soundbars

If you have:

- Your Fetch Box connected directly to your TV via HDMI, and
- Your soundbar connected to your TV via an HDMI cable into the ARC port (Audio Return Channel),

You may need to turn the soundbar off during the Universal Remote Set Up (Page 10) to successfully complete the process.


On successful completion of the process with a soundbar, the remote control should be able to change the volume of the TV, which in turn should change the volume of the soundbar.

## If your Fetch Box is connected directly to your soundbar via HDMI

It is not recommended you try the troubleshooting steps where we ask you to turn your soundbar off.

## To set up the Universal Remote when using a soundbar

If the Universal Remote Set Up didn't work and you are using a soundbar as recommended above, follow these steps to set up your universal remote:

- 1 Power off your soundbar.
- 2 Go to [Menu > Manage > Settings > Remote Control](#).
  - Select [Universal Setup](#) or [Change TV](#) and press .
  - If you don't see either the [Universal Setup](#) or [Change TV](#) options your remote may not be paired yet. Reset and re-pair the remote (Page 9) then repeat from step 1.
- 3 Follow the on screen instructions. Fetch may prompt you to "Select your TV Type" and test the Vol+, Vol -, AV/Source and TV Power buttons on the remote control.
- 4 If this doesn't work, your TV brand may not be supported.
- 5 Turn on your soundbar.

Check that the volume controls on the remote correctly adjust the TV volume (which should pass through to the soundbar).



# To find out your TV brand and code from A to Z

Find your TV brand from the list and use corresponding code to setup your remote (Page 14).

Brand	Code
A.R. Systems	1696, 0037, 0373, 0556, 0352, 0374, 0455
Accent	0009, 0037
Acer	1339, 1509, 1403, 1644
Acoustic Solutions	1149, 1523, 1037, 1865
Acronn	3000
Adcom	0625
ADL	1217, 0890
Admiral	0093, 0363, 0418, 0087, 0163, 0264
Advent	0876
Adyson	0217, 0216
AEA	0037
AEG	0606, 1556, 1037, 1149, 1372, 1163, 1324, 2239
Aftron	0891
Agashi	0216, 0264, 0217
AGB	0516
Agef	0087
Agfaphoto	3001
Aiko	0009, 0069, 0037, 0371, 0216, 0035, 0433, 0880, 0072, 0361, 0191, 0264, 0217, 1681
Aim	0037, 0072, 0412, 0037, 0753, 0208, 0698, 0698, 0634, 0374, 0451, 0455, 0606
Airis	0844, 1531
Aiwa	1908, 1505

Brand	Code
Akai	0361, 1326, 0208, 0371, 0037, 0803, 0433, 0191, 0035, 0009, 0072, 0753, 0218, 0552, 0714, 0163, 0698, 0488, 0516, 0715, 0602, 0548, 0581, 0480, 0217, 0631, 0216, 0264, 0448, 0178, 0377, 0606, 1908, 0473, 1248, 0729, 0806, 1537, 1865
Akashi	0009
Akiba	0218, 0282, 0455, 0037, 0294
Akira	0190, 0418, 0753, 0037, 2241
Akito	0037, 0556
Akura	0037, 0668, 1523, 1770, 0412, 0009, 0218, 0282, 0358, 0264, 0714, 1363, 1709, 1820, 1983, 2239
Alaron	0179, 0216
Alba	0037, 0714, 0009, 0418, 0370, 0235, 0371, 0668, 0355, 0218, 0216, 0247, 0431, 0163, 0487, 0211, 0581, 0036, 1908, 0443, 0551, 1731, 0480, 0587, 1865, 2104
Alcyon	0211
AlfaView	1206
Alien	3002
Alkos	0035
Allorgan	0206, 0294, 0217
Allstar	0037
All-Tel	0865, 1269
Allure	2714
Altus	3003
Ambassador	0177
Amitech	1281, 0655, 1468
Amoi	1529
Amplivision	0217, 0370, 0320
Amstrad	0177, 0009, 0516, 0264, 0354, 0371, 0218, 0037, 0433, 0412, 0362, 0581, 1820
Anam	0037, 0009, 0650
Anam National	0037, 0650
Andersson	1163, 1149, 1585
Anex	0421
Anglo	0009, 0264

Brand	Code
Anitech	0009, 0264, 0037, 0282, 0102
Ansonic	0370, 0037, 0009, 0668, 0374, 0163, 0292, 0102, 0411, 0259, 0247, 0428, 0104
AOC	1365, 1089, 1588, 0625, 2111, 2214
Apollo	0473, 2239
AquaVision	3004
Aquivo	3004
Arc En Ciel	0109, 0196
Arcam	0216, 0217
Arcelik	0714
Ardem	0486, 0714, 0633, 0037
Arena	0037
Aristona	0037
ART	3002
Art Mito	1585, 1820
Arthur Martin	0163, 0237
AS	3005, 3023, 3035, 3053, 3007, 3002
ASA	0105, 0346, 0070, 0104, 0087, 0163, 0179
Asberg	0037, 0102
ASK	1747
Asora	0009
Astra	0037
Asuka	0218, 0217, 0216, 0264, 0282
ATD	0698
Atec	1606, 1728
Atlantic	0037, 0216, 0206, 0320, 0259
Atori	0009
Auchan	0163
Audiola	3006
Audiosonic	0009, 0037, 0374, 0820, 1800, 0109, 1703, 0714, 0715, 0217, 0370, 0337, 0264, 0218, 0486, 0428, 0858, 0865, 1681, 1802, 1983, 2104
Audioton	0217, 0486, 0370, 0264, 0428
Audiovox	0451
Audioworld	0698

Brand	Code
Aumark	0060
Auriga	1531
Autovox	0087, 0206, 0237, 0349, 0217, 0247, 0336
Avol	1820
AVP	1908
Awa	0011, 0036, 0009, 0157, 0374, 0451, 0412, 0037, 0216, 0606, 0217, 0108, 0264, 1985, 1376, 0178, 0698, 0888, 1681, 1813, 2039, 2241, 2480
Axdia	3001, 3006, 3025, 3011, 3020
Axxent	0009
Axxon	0714
Aya	3007, 3023
B&D	1217
Baier	0876, 1372, 2239
Baird	0109, 0343, 0190, 0192, 0072, 0073, 0217, 0208, 1196, 0606
Bang & Olufsen	0565, 0087, 0275
Barco	0552, 0163
Base	1570, 0780
Baseline	1244
Basic Line	0374, 0037, 0163, 0668, 0009, 0218, 0282, 0217, 0455, 0339, 1149
Bastide	0217
Bauer	0009, 0698, 0706, 0264
Bauhn	1301, 1302
Baur	0009, 0303, 0535, 0195, 0512, 0037, 0554, 0191, 0361, 0349, 0810, 0146, 0455
Bazin	0217
BBK	1741
Beaumark	0178
Beko	0714, 0486, 0035, 0715, 0037, 0418, 0428, 1800, 0370, 0606, 0808, 1652
Belson	1191, 0698, 2241
Belstar	3002
Bennett	0037

Brand	Code
BenQ	1212, 1562, 1032, 1574
Bensten	1570, 1326
Beon	0037, 0418
Berthen	0668
Best	0337, 0370, 0421
Bestar	0037, 0370, 0374
Bestar-Daewoo	0374
Bestwell	1326
Bexa	2493
Binatone	0217
Black Diamond	0820, 0037, 0753, 1163, 0587
Black Panther	0102
Black Star	0247
Black Strip	0035
Blackway	0282, 0218
Blaupunkt	0554, 0195, 0191, 0535, 0200, 0327, 0328, 0448, 0455, 0170, 0036
Blauren	0374
Blu:sens	3008
Blue Media	1728, 1606
Blue Sky	0037, 1372, 1709, 0714, 1149, 0487, 1771, 0668, 0715, 0625, 1652, 1909, 0218, 0282, 0455, 1908, 1191, 0808, 1363, 1232, 1739, 0624, 1324
Blue Star	0282
BlueDiamond	3009
BlueH	1745
Bluesky	3010, 3002, 3047, 3031, 3041
Bluetech	3000, 3006
bogo	3011, 3000, 3019
Boman	1324
Bondstec	0247
Boots	0217, 0009
Bork	1363
Bosch	0320, 0327
BPL	0037, 0282, 0373, 0208, 0896

Brand	Code
Brandt	0625, 0109, 0237, 0196, 0287, 0335, 0471, 0343, 0560, 1365, 0714
Brandt Electronique	0287, 0335
Brimax	1709
Brinkmann	0037, 0556, 0668, 0418, 0486
Brionvega	0037, 0556, 0362, 0087, 1514
Britannia	0216, 0217
Brother	0264
Bruns	0087, 0428, 0486
BSR	0163, 0294, 0552, 0361
BTC	0218
BuBuGao	3025, 3053
Bush	0037, 1326, 0714, 0668, 1652, 0218, 0163, 0349, 0009, 0036, 0371, 0235, 0282, 0355, 0363, 0374, 0264, 0361, 0487, 0211, 0208, 0217, 1556, 0698, 0581, 0294, 0552, 1900, 1908, 0778, 1248, 1682, 1731, 1166, 0587, 0443, 1441, 1523, 1865, 1983, 2104, 2214, 2241
Cabletech	3012
Caihong	3002
Cameron	1523, 0556
Camper	0037, 0486
Candle	0186
Canox	3013
Canton	0218
Capsonic	0264
Carad	0610, 0037, 0668
Carena	0455, 0037
Carrefour	0036, 0070, 0037
Carver	0170
Cascade	0009, 0037
Casio	0037, 0163, 0349
Cat	1682
Cathay	0037
CCE	0037, 0217
Celcus	3007, 3023

Brand	Code
Celestial	0820
cello	1770, 1802, 1820
Centrex	0780, 0891, 1536, 0698, 1731, 1203, 1702
Centrum	1037
Centurion	0037
Century	0087, 0247, 0238
CGE	0074, 0084, 0418, 0247, 0552, 0370, 0163
Changhong	3014, 3012
Chimei	1666
CHL	3015
Cimline	0009, 0235, 0218
Cineral	0451
Cinex	1166, 1556
Citizen	0451, 0060, 0186
City	0009
Clarity	3016
Clarivox	0418, 0037, 0070, 0102
Clatronic	0037, 0370, 0371, 0714, 0218, 0264, 0556, 0217, 0247, 0009, 0102, 0320, 0606, 1163, 1324
Clayton	0385, 1037
CMS	0216
CMS hightec	0217
CMX	3012, 3006, 3015
Cobolt	0891
Combitech	1908
Concorde	0009
Condor	0320, 0037, 0370, 0216, 0009, 0282, 0102, 0247, 0418, 0314, 0411, 0163, 0264
Conia	1523, 0820, 0754, 1702, 2483
Conrac	0808
Conrad	0037
Contec	0216, 0009, 0157, 0011, 0036, 0264, 0037
Continental Edison	0109, 0237, 0196, 0287, 0487
Cosmel	0009, 0337, 0037
CPTEC	0625, 1363

Brand	Code
Crosley	0087, 0247, 0074, 0084, 0552, 0163
Crown	0009, 0712, 0370, 0486, 0037, 0556, 0487, 0714, 0606, 0715, 0421, 0373, 0418, 0208, 0653, 0339, 1037, 1652, 0668, 0053, 0412
Crypton	3005
Crystal	0431
CS Electronics	0216, 0218, 0247
CTC	0247
Currys Essentials	3017
Curtis Mathes	0060, 0093, 0451, 0166
CWR-Tech	1372
CyberHome	0794, 1176
Cyberpix	3005
Cybertron	0218
Cytronix	1298
D.Boss	1390, 0037
Daewoo	0634, 0661, 1203, 0037, 0374, 1909, 0009, 0216, 0218, 0217, 0451, 1137, 1908, 0880, 0178, 0876, 0865, 0698, 0714, 0624, 2098
Daewoo Display	3018
Daijitsu	2804
Dainichi	0218, 0216
Dansai	0037, 0556, 0264, 0035, 0216, 0009, 0036, 0217, 0208
Dansette	0412
Dantax	0370, 0486, 1652, 0714, 0606, 0715, 1908
Datsura	0373, 0208
Dawa	0009, 0037, 0556
Days	3000
Daytek	0698, 1207, 0264, 1376
Dayton	1207, 1374, 0009
Daytron	0009, 0374, 0037
De Graaf	0208, 0163, 0548, 0363
DEC	0891, 1326, 1190, 0896, 1709
Decca	0072, 0516, 0037, 0037, 0217, 1137, 1908, 1056
Deitron	0037, 0374, 0218



Brand	Code
Dell	1403
Denko	0264
Denver	0037, 1372, 0606, 1189, 0587, 1709, 1770, 1820
DER	0190
Desmet	0320, 0037, 0009, 0087
Dew	1770
DEXP	3019, 3014
DGM	1435, 2239
Dgtec	3020
Diamant	0037
Diamond	0264, 0009, 0216, 0371, 0820, 0896, 0698
DiBoss	0037
Dick Smith Electronics	0698, 2241, 1326, 1985, 2658
Differo	3007
Digatron	0037
Digihome	1149
Digiline	0037, 0105, 0668
DigiLogic	0037
Digimate	0890
DigiMax	0891
Digital Device	1606
Digital Life	0891, 0872
Digitek	1709, 1771
Digitex	0820
Digitor	0037, 0888, 1985, 1497, 1703, 0698
Digitrex	3021, 3015
Digivision	0361
Digix Media	0880
DiK	0037
Dikom	1703, 1696
DiVision	2239
Dixi	0009, 0037, 0247, 0217, 0087
DK digital	1662
DL	0891, 0780, 0037, 0587, 0865, 1363, 1326, 1203, 0872
DMTECH	1338

Brand	Code
DNS	3019, 3014
Doffler	3019, 3014
Domeos	0668, 0037
Domland	0394
Donghai	3013, 3019, 3047, 3002
Doric	0349
Dream Vision	0673, 1704
DSE	0888, 1556, 1261, 1985, 1497, 0820, 1277, 1703, 1166, 1563, 1631, 0698, 1682, 1326, 2241, 2480, 2484, 2658
DTS	0009
Dual	0349, 0217, 0343, 0336, 0037, 0259, 0352, 0394, 0303, 0552, 0163, 1137, 0631, 1149, 0778, 1372, 1163, 2241
Dumont	0087, 0104, 0102, 0217, 0070 0072
Dunai	0163
Dunlop	3006
Durabase	3007, 3002
Durabrand	0037, 1652, 0714
Dux	0037
D-Vision	0037
DVX	0891
DW Display	3018
Dynatron	0037
Dyon	3011, 3020, 3025, 3006
E:max	0606, 1531, 1372, 1324
Easy Living	1248, 1709, 1217, 0037, 1376, 0877, 1166, 1556, 1666, 1294, 2023, 2104, 2157
Ecco	0773, 0698
ECE	0037
ECG	3022, 3046, 3012, 3019, 3010, 3002, 3014
Edison	3007, 3025, 3020, 3011, 3023, 3034
Edison-Minerva	0487
EGL	3013
Eiki	0735
Elbe	0411, 0362, 0435, 0630, 0238, 0610, 0259, 0292, 0370, 0163, 0037, 0556, 0218, 0191, 0551, 0217, 0516, 0361, 0552

Brand	Code
Elbe-Sharp	0516
Elcit	0087, 0247, 0516, 0102, 0552, 0163
Electrion	1585
Electrolux	3023
Electronia	3007, 3005
Electroview	2706
Elekta	0009, 0037, 0264, 0282
Elfunk	1208, 1037
ELG	0037
Elin	0216, 0037, 0105, 0104, 0548, 0361, 0448, 0349, 0163, 0009
Elite	0218, 0037, 0320
Elman	0102
Elonex	1776
Elta	0009, 0264, 0216, 0431, 1662
Emco	0247
Emerson	0177, 0714, 0178, 0179, 0087, 0247, 0037, 0371, 0070, 0282, 0320, 0361, 1909, 0486, 0370, 0163, 0321, 0668, 0624
e-motion	1709
Emperor	0282
Engel	3011
Enmar	2023
Enox.	3024
Enzer	0753, 0773
Epson	0833, 1379
Epworth	3011, 3014
Erae	1371, 1191
Erisson	1682
Erres	0037
ESC	0037, 0217
Essentials	3017
e-Star	3019
Estele	0552, 0163
Etron	0037, 0820, 0009, 0163

Brand	Code
Eurofeel	0264, 0217
EuroLine	0037
Euroman	0216, 0264, 0037, 0217, 0421, 0370
Europa	0037
Europhon	0037, 0516, 0102, 0163, 0217, 0314, 0247, 0552, 0431, 0216
Everline	3011
Evesham	1248, 1728, 1606, 1536
Evotel	3000, 3028, 3057
Excel	0037
Excello	1037, 1326
Expert	0206, 0259, 0163
Exquisit	0037, 0247
F&U	3025, 3007
Fagor	0037
FairTec	1191, 1373
Family Life	0037
Fenner	0374, 0009
Ferguson	0073, 0625, 0287, 0192, 0190, 0335, 0238, 0109, 0560, 0037, 0035, 0343, 0653, 0104, 0108, 0361, 0471, 0548, 0443, 1908, 0053, 0195, 1865
Ffalcon	1601
Fidelity	0163, 0512, 0363, 0037, 0371, 0412, 0037, 0216, 0264, 1908, 0361
Filsai	0217
Finlandia	0208, 0346, 0548, 0361, 0163, 0363, 0072, 0287, 0343, 0045
Finlux	0105, 0104, 0037, 0714, 0346, 0217, 0072, 0552, 0163, 0516, 0715, 0070, 0087, 0179, 0102, 0314, 0411, 0631, 0492, 0480, 1556, 0629, 0473, 0418, 0606, 0808, 1248
Fintec	1982
Firstline	0037, 0374, 0668, 0714, 0163, 0009, 0294, 0321, 0216, 0385, 0247, 0552, 1909, 0314, 0102, 0217, 0411, 0349, 0238, 0072, 0235, 0208, 0361, 1191, 0808, 1363, 1163, 1232, 1371, 0624
Fisher	0104, 0217, 0036, 0208, 0370, 0555, 0045, 0087, 0157,

Brand	Code
	0361, 0552, 0163, 0303, 0349, 0072
Flint	0037, 0610, 0072, 0218, 0455, 0264
FNR	0102
Foehn & Hirsch	3026
Force	1149
Formenti	0163, 0037, 0486, 0216, 0087, 0320, 0552
Formenti-Phoenix	0216, 0320, 0552
Fortress	0093, 0087
Fox	3019
Fraba	0037, 0037, 0370
Friac	0009, 0037, 0102, 0421, 0370, 0610
Frontech	0247, 0264, 0349, 0363, 0431, 0448, 0217, 0009, 0163
Fuchsware	0780
Fujicom	1709
Fujimaro	0865
Fujitsu	0179, 0683, 0853, 0186, 0809, 0206, 0072, 0102, 0314, 0217, 0163, 0009, 0352, 0037, 0361, 0259
Fujitsu General	0009, 0186, 0217, 0206, 0163, 0683
Fujitsu Siemens	1666, 1298, 1248, 1373, 1163, 0808, 0809
Funai	0179, 1394, 1037, 1666, 0668, 0264, 0294, 0303, 0412, 1505, 0714
Funai United	3025, 3007
Futronic	0264, 0698, 1531
Futura	3012
Gaba	0037, 0858, 1183
Galatec	3019
Galaxi	0102, 0037, 0361, 0163
Galaxis	0370, 0418, 0037, 0102
Galeria	0009
Gateway	1755
GBC	0552, 0163, 0009, 0374, 0218, 0363
GE	0343, 0735, 0178, 0282, 0451, 0560, 0287, 0109, 0335, 0625, 0093
Geant Casino	0163
GEC	0163, 0361, 0349, 0037, 0516, 0043, 0072, 0217

Brand	Code
Geloso	0247, 0009, 0363, 0552, 0163, 0374
General	0109, 0287, 0471, 0186
General Electric	0343, 0287
General Technic	0009
Genesis	0009, 0037
Genexxa	0218, 0037, 0412, 0163, 0009
Gericom	0865, 1606, 1298, 1206, 1217, 0880, 0808
Gevalt	1371, 1191
G-Hanz	1363
Giant	0217, 0009
G-Luxon	0844
GoGen	3007, 3023, 3005
Gold	1770, 2023, 2039, 2157
Goldfunk	0668
Goldhand	0216
Goldline	0337
GoldStar	0037, 0009, 0370, 0377, 0217, 0247, 0178, 0216, 0431, 0163, 0361, 0109, 0363, 0606, 0714, 0715, 0455
Gooding	0487
Goodmans	0634, 0715, 1248, 0037, 0714, 0668, 1909, 0374, 0036, 0264, 0072, 0516, 0009, 0179, 0487, 0371, 0343, 0235, 0035, 0480, 0560, 0217, 0335, 0218, 0451, 1908, 0630, 0661, 1900, 0880, 0037, 0587, 1376, 1985, 1149, 1523, 1682, 0624, 0625, 1720, 1795, 1983
Gorenje	0370, 0421
GP	0753
GPM	0218
Gradiente	0653, 0170, 0037, 0053
Graetz	0714, 0361, 0371, 0163, 0037, 0339, 1163
Gran Prix	3022
Granada	0037, 0226, 0356, 0035, 0072, 0108, 0208, 0217, 0036, 0339, 0516, 0473, 0335, 0560, 0163, 0363, 0225, 0343, 0548, 0146
Grandin	0037, 0037, 0009, 0163, 0610, 0714, 0715, 0668, 0374, 0320, 0282, 0218, 0455, 0037, 0865, 1191, 0880, 1207,

Brand	Code
	1375, 1377, 1380, 1232, 0624
Gronic	0102, 0217, 0163
Grundig	0195, 0508, 1371, 0035, 1191, 1223, 0535, 0191, 1582, 0554, 0070, 0037, 0487, 0443, 0698, 0237, 0587, 0009, 0036, 0370, 0740, 1908, 0630, 0178, 1376, 1800, 0343, 1248,1523, 2239
Grunkel	1163
Grunpy	0179
GVA	1326, 1363, 2098
H & B	3027, 3048
H&B	0808
Haaz	0706
Haier	0698, 0264, 0869, 0891, 1203, 1983
Halifax	0264, 0216, 0217
Hammerstein	0264, 0060
Hampton	0216, 0217
Handic	3007
Hanimex	0218, 0294, 1908
Hannspree	1776
Hanseatic	0037, 0349, 0163, 0361, 0292, 0282, 0394, 0320, 0634, 0428, 0370, 0661, 0009, 0294, 0217, 0373, 0431, 0087, 0377, 0336, 0714, 0808, 0486, 0625
Hantarex	0009, 0037, 0102, 0516, 0238, 0829, 1338, 0865
Hantor	0037
Harley Davidson	0179, 0043
Harper	3011, 3019
Harsper	0865
Harwa	0773, 1196, 1269
Harwood	0009, 0412, 0037, 0487
Hauppauge	0037
Havermy	0093
HB	1324
HB Ingelen	3010
HCM	0009, 0412, 0037, 0217, 0218, 0418, 0282, 0264
Hedzon	0037

Brand	Code
Helix	3019
Hema	0217, 0009
Hemmermann	0349
Hicon	1467, 2483
Hifivox	0109, 0196
Higashi	0216
Highlander	1531
Highline	0264, 0037
Hikona	0218, 1983
Hinari	0208, 0037, 0009, 0218, 0036, 0179, 0163, 0355, 0443, 0211, 0487, 0235, 0294, 0264, 1908
Hisawa	0282, 0218, 0455, 0610, 1908, 0714
Hisense	1363, 1232, 0208, 0576, 0698, 0891, 0780, 0009, 1069, 2098, 2341, 2371, 2658, 9088, 5486, 5485, 5417, 5417, 0037, 4156
Hit	0087
Hitachi	1576, 1484, 0481, 0578, 0150, 0225, 0349, 0108, 0744, 0037, 0356, 0576, 1225, 0634, 0473, 0036, 0163, 0552, 0343, 0196, 1163, 1194, 1149, 0797, 0043, 0194, 0480, 0516, 0072, 0109, 0363, 0548, 0178, 1137, 0105, 0492, 0361, 0512, 0629, 0877, 0217, 0563, 2214
Hitachi Fujian	0828, 0108, 0150, 0037, 0225, 0576
Hitsu	0009, 0610, 0455, 0218
HKC	3011
HMV	0087
Hoeher	0714, 1556, 0865, 1163
Hoher	3005, 3007, 3010, 3032, 3046, 3014
Home Electronics	0606
HomeTech	3005
Horizon	3007
Horizont	3010
Hornyphon	0037
Hoshai	0218, 0455, 0282
Huanyu	0374, 0216
Hugoson	0890, 1666, 1217



Brand	Code
Humax	1535
HYD	1376
Hygashi	0217, 0216
Hyper	0009, 0216, 0217, 0247
Hypersonic	0361
Hypson	0037, 0714, 0715, 0264, 0217, 0282, 0455, 0238, 1908, 0668, 0486
Hyundai	0037, 0803, 0865, 1669, 0698, 0753, 1326, 1531, 1244, 1294, 1281, 1770, 1277, 1468, 0264, 1556, 0587, 0888, 0037, 1606, 1376, 0778, 1248, 1681, 1720, 1820
Iberia	0037
ICE	0264, 0037, 0371, 0009, 0218, 0217, 0216
ICeS	0218, 0216
Ict	0037, 1137
IDEAL	1556
i-INN	3019
IISonic	1376
Iiyama	1217, 0890
i-Joy	3019, 3011, 3015, 3053
Imperial	0037, 0163, 0370, 0074, 0084, 0508, 0630, 0411, 0361, 0349, 0418, 0247, 0196, 0431, 0552, 2092
Indesit	0237
Indiana	0037, 0556
InFocus	0752, 1164, 1206, 1430, 1747
Ingelen	0487, 0610, 0714, 0163, 0361
Ingersoll	0009
Inno Hit	0009, 0037, 0072, 0218, 0217, 0516, 0247, 0102, 0282, 1163
Innovation	0037, 0556
Innowert	0865, 1298
Inotech	0773, 0820
Inspira	1372, 1556
Interactive	0037, 0087, 0512, 0275, 0327, 0163, 0361, 0370, 0109, 0411
Interbuy	0009, 0037, 0264, 0247, 0512

Brand	Code
Interfunk	0037, 0087, 0512, 0275, 0327, 0163, 0361, 0370, 0109, 0349, 0247, 0200
Internal	0037, 0374, 1909, 0624
International	0216
Intervision	0282, 0217, 0455, 0037, 0371, 0377, 0448, 0486, 0370, 0394, 0487, 0218, 0102, 0431, 0163, 0264, 0247, 0009
Inves	3019, 3011
Irradio	0009, 0037, 0218, 0247, 0371, 0724
Isis	3007
Isukai	0218, 0037, 0282, 0455
ITC	0217, 0552, 0320
ITS	0037, 0371, 0218, 0282, 0264, 0216, 0009
ITT	0163, 0480, 0349, 0361, 0473, 0548, 0346, 0339, 0208, 0179, 0610
ITT Nokia	0361, 0548, 0163, 0473, 0480, 0349, 0346, 0208, 0179, 0339, 0606, 0610, 0631, 0363, 0431
ITV	0037, 0264, 0247, 0374
Izumi	3014, 3019
Jay-tech	3013, 3015
JDV	1982
Jean	0036
JEC	0035
JGC	1709
JMB	0037, 0634, 0374, 0037, 0443, 1908
JNC	0876, 1536, 0896, 1702
Jocel	0712
Jouge	1435
JTC	3013, 3015
Jubilee	0556
JVC	0653, 1153, 0606, 1653, 0371, 0731, 0683, 0036, 0190, 0192, 0218, 0418, 0069, 0093, 0650, 0053, 1818, 2714
Kaisui	0218, 0282, 0037, 0556, 0216, 0455, 0217, 0009
Kambrook	0377, 0431, 0264
Kamp	0216
Kapsch	0163, 0361, 0206, 0259, 0104

Brand	Code
Karcher	0037, 0421, 0370, 0610, 0163, 0282, 0102, 0314, 0264, 0778, 0714, 1556, 0606, 1324
Kathrein	0037, 0880
Kawa	0371
Kawasho	0216
KB Aristocrat	0163
Kendo	0610, 0037, 0163, 0512, 0370, 0377, 0363, 0428, 0411, 0102, 0235, 0247, 0362, 0551, 0037, 0486, 1149, 1163, 1137
Kenmark	3028, 3049
Kennedy	0163, 0206, 0552, 0435
Kennex	1037
Kenstar	3029
Kenwood	0105
Keydo	1702
Keymat	1771, 1326, 1570
KIC	0217
Kingsbrook	1037
Kingsley	0216
Kiota	0371, 0455
Kiton	0556, 0037, 0668
Kneissel	0037, 0385, 0370, 0610, 0411, 0374, 0435, 0259, 0292, 0238, 0362, 1908
Kobra	1298
Koenig	0037
Kogan	5963, 5980, 0035, 2267
Kolster	0037, 0556, 0102, 0349, 0247, 0218
Konichi	0009
Konka	0037, 0371, 0714, 0418, 0218, 0641, 0587, 1190, 0606, 0726, 0754, 0779, 0816, 1404, 2267
Kontakt	0487
Korpel	0037
Korting	0087, 0421, 0370, 0320
Kosmos	0037
Kotron	0412, 0264, 1900
Koyoda	0009

Brand	Code
Kraking	0238
Kross	1536
Kruger&Matz	3012, 3033
KTV	0217
Kuba	0349, 0163
Kuba Electronic	0303, 0349, 0163
Kunft	3014
Kuppersbusch	3007
Kuro	0373
Kyoshu	0412, 0418, 0264
Kyoto	0385, 0163, 0216, 0217
L&S Electronic	0865, 0714
L&S Electronic	3010, 3027
LaSAT	0486, 0370
Lava	3022
Lavis	0037, 0163, 1363
Leader	0009
Lecson	0037
Legend	0009, 0337
Leiker	3007
Lemair	0411
Lenco	0009, 0721, 0037, 0163, 0374, 0104, 0587, 1376, 1983
Lenoir	0009, 1189
Lenoxx	1189
Lentec	1531, 1696
Lesa	0247
Level	2023
Levis Austria	0037
Lexsor	1196, 1507
Leyco	0264, 0072, 0037 0294
LG	0178, 1232, 0037, 0876, 0370, 0377, 0009, 0714, 0217, 0216, 0431, 0163, 0606, 0109, 0698, 0715, 0823, 0829, 1637, 1191, 0247, 0361, 1149, 1681, 9155, 6208, 4084, 4019, 4003, 4051, 4088, 4131, 4171, 4261, 4093
Liesenkotter	0037, 0327, 0328, 0556

Brand	Code
Lifetec	0037, 0668, 1137, 0374, 0009, 0512, 0714, 0218, 0264, 0683, 1248
Linden	3012, 3019
Linetech	3007, 3005
Linsar	3007, 3005, 3023, 3013
Lloyd's	0009
LME	0431
Local India TV	0208
Lodos	1037, 1149
Loewe	0512, 0633, 0790, 0037, 0370, 0087, 0292, 0551, 0362, 0516, 0791
Logik	0011, 0698, 0060, 0773, 0009, 0264, 0371, 0880, 1217, 1037, 1645, 1865, 2241
Logix	0668
Lowry	3030
Luker	1982, 1985
Luma	0037, 0363, 0206, 0163, 0411, 0556, 0374, 0009, 0362, 0259
Lumatron	0363, 0206, 0037, 0556, 0362, 0163, 0259, 0361, 0217, 0264, 0073, 0668, 2023
Lumenio	0037
Lux May	0037, 0009, 0556, 0581
Luxor	0194, 1163, 0237, 0363, 0480, 0492, 0349, 0361, 0208, 0356, 0548, 0163, 0346, 0473, 0179, 1037, 0217, 0631
LXI	0037
Madison	0037, 0556
Magnadyne	0087, 0247, 0516, 0102, 0552, 0163
Magnafon	0516, 0102, 0314, 0216, 0073
Magnavox	0037, 0556, 0036, 0179, 0780, 1139, 1203, 0753, 0729, 1069
Magnum	0714, 0037, 0715, 1289, 2023
Majestic	3013, 3011, 3006
Manata	3011
Mandor	0264
Manesth	0037, 0235, 0217, 0264, 0320, 0035, 0294, 0163, 0363

Brand	Code
Manhattan	0037, 0876, 0668, 0163, 0778
Manta	3019, 3011
Maqma	1298, 1709, 1606, 1702
Marantz	0037, 0412
Marelli	0087
Mark	0037, 0217, 0216, 0374, 0009, 0714, 0715
Marks & Spencer	3024, 3050
Marks and Spencer	1770
Mascom	1556, 0037
Master's	0037
Masuda	0371, 0218, 0009, 0264, 0037, 0217, 0556
Materin	0858
Matrix	1277
Matsui	0037, 1163, 0487, 0443, 0009, 0235, 0177, 0011, 0355, 0072, 0036, 0211, 0217, 0354, 0294, 0371, 0433, 0363, 0455, 0163, 0349, 0516, 0035, 0431, 0208, 0195, 0191, 0335, 0714, 1908, 0629, 1666, 0880, 0744
Matsushita	0650
Matsuiyama	0587
Maxam	0264
Maxdorf	0773, 0698, 0264
Maxent	1755
Maxess	2493
Maxim	1166, 1982, 1556
MAXIVIDEO	0314
Maxton	3002
MCE	0009
McMichael	0043
McTronics	1662
Medialine	1206
Mediator	0037
MediaVision	1391
Medion	0714, 0808, 0037, 0668, 0512, 1137, 0698, 1908, 1900, 1248, 0245, 0631, 0880, 1289, 1166, 1556, 1149, 1523
MegaDrive	1259

Brand	Code
Megas	0610
Megatron	0178
MEI	1037, 0037, 0556
Melectronic	0346, 0037, 0512, 0109, 0343, 0247, 0105, 0104, 0374, 0009, 0217, 0480, 0492, 0216, 0411, 0349, 0163, 0287, 0634, 0361, 0191, 0195, 0661, 0714, 1652
Memorex	0009, 0150, 0178, 0650, 0060
Memory	1983
Memphis	0337, 0072, 0009, 0385
Mercury	0037, 0009, 0264, 0037, 0698, 0060
Merritt	0548, 0361, 0163
Metronic	0625
Metz	0746, 0388, 0447, 0367, 0087, 1163, 0195, 0535, 0554, 0191, 0037, 0587, 0275, 0668
MGA	0150, 0178, 0037, 0218, 0104, 0374
Micromaxx	0037, 0668, 0630, 0808, 0714, 1372, 1324
Microstar	0808
Microtek	0820, 0698, 0706, 0264
Miia	3011
Mikomi	1149, 1163, 0744
Minato	0037
Minerva	1248, 0487, 0535, 0195, 0070, 0191, 0554, 0237, 0516, 0108, 0150
Ministry Of Sound	3005
Minoka	0412, 0037
Mirai	1666, 1651
Mirror	1900
Mitsai	1556
Mitsubishi	0108, 0150, 0093, 0512, 0037, 0178, 0354, 0087, 0036, 0237, 0358, 0535, 0691, 0208, 1522
Mitsubishi Electric	3031, 3002
Mitsuri General	0163
Mivar	0292, 0370, 0216, 0609, 0516, 0217
Mogen	1683, 1820
Monaco	0009

Brand	Code
Moree	0037
Morgan's	0037
Motorola	0093
mp man	3015, 3012
MTC	0060, 0370, 0349, 0512, 0163, 0216, 0361, 0448
MTlogic	0714, 1308
Multimat	0314
Multistandard	0102, 0314
Multitec	0037, 0486, 0668, 1556
Multitech	0349, 0009, 0363, 0486, 0037, 0370, 0217, 0216, 0247, 0102, 0314, 0264, 0552
Murphy	0104, 0216, 0072, 0163
Musikland	0037, 0218, 0247
Mx Onda	1645, 1820, 1983
MyCom	1376, 0178
Myrica	1666
Myryad	0037
Mystery	3012, 3025, 3019
NAD	0166, 0178, 0865, 0361, 0163, 0037
Naiko	0037, 0606, 0753
Nakimura	0374, 0037
Naonis	0363, 0163
Narita	1982
NAT	0226, 0340, 0214, 0000
National	0214, 0226, 0237, 0340, 6001, 6003, 6017, 6029, 4131, 6055, 6104, 6216, 6220
NEC	0170, 0587, 0036, 0320, 1232, 0876, 1709, 0455, 0009, 0374, 0217, 0037, 0011, 0704, 0245, 0237, 1704, 0653, 0771, 1370, 1135, 0661, 0882, 0053, 2461
Neckermann	0037, 0191, 0370, 0810, 0200, 0554, 0552, 0163, 0327, 0418, 0349, 0087, 0247, 0217, 0411, 0320, 0363, 0512
NEI	0037, 0337, 0431, 0371, 0163
NEO	1372, 0754, 1324
Neon	1732
Neovia	1206, 0865, 1373, 1371, 0876, 1376, 1390, 1384, 1338, 1191



Brand	Code
Nesco	0247, 0179, 1908
Nesons	3019
Nesx	1732
Netsat	0037, 0556
Network	0337
Neufunk	0037, 0009, 0556, 0610, 0218, 0282, 0714
Nevir	3019, 3007, 3006
New Tech	0037, 0009, 0556, 0343, 0217, 0448
New World	0218
Next	3007
Nicamagic	0216
Nikkai	0072, 0218, 0037, 0217, 0264, 0035, 0337, 0216, 0009, 0036
Nikkei	0714, 1594
Nikko	0178
Nintaus	0891
Nishi	0482
Nobliko	0102, 0070, 0216, 0314
Nogamatic	0109, 0196
Nokia	0361, 0163, 0480, 0349, 0548, 0492, 0473, 0339, 0208, 0374, 0631, 0606, 0346, 0179, 0320, 0610, 0109, 0551
Norcent	1588
Nordic	0217
Nordmende	0109, 0891, 0287, 0196, 0560, 0343, 0195, 0037, 0335, 0163, 0471, 1248, 0714, 1289, 0490, 0443
Norfolk	0163
Normerel	0037
Nortek	0668
Northern Star	1206
Novak	0037
Novatronic	0037, 0105, 0374
Novex	1523
Novita	1384, 1585
NPG	3014
Nurnberg	0163, 0361

Brand	Code
Nu-Tec	0455, 0698, 0820, 0037, 0264, 2481
O.K.Line	1037, 1372, 1556, 1324
Ocean	3014
Oceanic	0163, 0361, 0294, 0208, 0473, 0548, 0480, 0563
Odeon	0264
Odys	1795
OK Line	3032, 3002
OK.	3033, 3007, 3014
Okano	0370, 0037, 0556, 0264, 0072, 0488, 0009, 2982
Okeah	3014
OKI	1037
Olidata	1376
Olivia	1588
Omega	0264
Omni	0780, 0891, 0698, 1570, 0872
Onei	3005
Onida	0053
Onimax	0714
Onix	0698
Onn	1149, 1709, 0556, 1770, 2112
Onwa	0371, 0602, 0218, 0433, 0581, 0102, 0431
Onyx	1709, 1770
Opera	0037, 0714, 1770
Opticum	3013
Optimus	0650, 0166, 0250
Optoma	1622
Optonica	0093
Orava	0552, 1037
Orbit	0037
Orion	0179, 0037, 0443, 0355, 0714, 0235, 0294, 0177, 0320, 0011, 0009, 0321, 0211, 0314, 0102, 0264, 0412, 0516, 1908, 0880, 1196
Online	0037, 0218
Ormond	0385, 0668, 0037
Orsowe	0516

Brand	Code
Osaki	0072, 0218, 0217, 0264, 0037, 0412, 0374, 0211, 0355
Osio	0037
Oso	0218
Osume	0157, 0072, 0036, 0218, 0037, 0556
OTIC	1203, 1006, 1645, 1326, 1983
Otto Versand	0810, 0036, 0093, 0512, 0037, 0535, 0195, 0349, 0554, 0191, 0361, 0235, 0109, 0294, 0226, 0247, 0303, 0320, 0217, 0009, 0282, 0336, 0343, 0373, 0428, 0431, 0516, 0552
Pace	1908
Pacific	0037, 1137, 0714, 0443, 1324
Packard Bell	1314
Pael	0216
Palladium	0370, 0037, 0411, 0630, 0714, 1137, 0191, 0810, 0200, 0418, 0554, 0349, 0247, 0327, 0087, 0552, 0163, 0217, 0363
Palsonic	0264, 0412, 0037, 0217, 0377, 0218, 0698, 0448, 0488, 0773, 0418, 0778, 1489, 1196, 1507, 1269, 1705, 1326, 0779, 1183, 1795, 1813, 2461, 2481, 9055, 9066
Panache	1585
Panama	0009, 0217, 0264, 0216, 0037, 0556, 0247
Panasonic	0650, 0108, 0226, 1310, 1210, 0340, 0214, 0361, 0853, 0237, 0367, 0516, 0037, 0163, 0548, 0771, 9066, 6004, 6208, 0264, 4003, 9002, 9003, 9025, 9031, 9094, 9096, 9123, 4064, 4101, 4141, 4021, 4151, 4019, 4152
Panavision	0037, 0411
Papouw	0037
Pathe Cinema	0163, 0238, 0216, 0320, 0292, 0349, 0431, 0552, 0370
Pathe Marconi	0109, 0196, 0237
Pausa	0009
Pendo	3014
Perdio	0072, 0320, 0163, 0037, 0216, 0282
Perfekt	0037
Petters	0037
Philco	0087, 0084, 0074, 0418, 0247, 0552, 0163, 0370, 0037,

Brand	Code
	0186
Philex	0551, 0163
Philharmonic	0217
Philips	0037, 0238, 0721, 0605, 0772, 1304, 0554, 0043, 0087, 0423, 0343, 0374, 0009, 0200, 0361, 1867, 1887
Phocus	1289, 1308, 0714, 1652, 1800
Phoenix	0037, 0370, 0486, 0163, 0087, 0072, 0216, 0320, 0385, 0552
Phonola	0037, 0087, 0216
Phonotrend	1594
Pilot	0037, 0712, 0698
Pioneer	0166, 0760, 0011, 0170, 0037, 0423, 0428, 0370, 0343, 0361, 0109, 0163, 0287, 0486, 0512
Pionier	0370, 0486
Pixxel	1529
Plantron	0037, 0264, 0009
Playsonic	0714, 0037, 0217, 0339, 0715, 1800, 1652
Plus	0771, 1552
Plustron	1770
Polar	0037
Polaroid	1523, 1720
Policom	0102, 0109, 0196, 0206, 0237, 0238, 0275, 0361, 0163, 0070, 0074, 0084, 0087, 0535
Polytron	0282
Poppy	0009
Portland	0374, 1909, 0624
Powerpoint	0487, 0037, 0556, 0698, 1770, 1802, 1820
Pragma Digital	3027
Prandoni-Prince	0247, 0516, 0361, 0363
Precision	0217
Premier	0009, 0264, 0891
Prima	0009, 0264, 0303, 0412, 1269, 1507, 1196, 0753
PrimeView	1606
Princess	0698, 1326, 0773
Prinston	1037

Brand	Code
Prinz	0072, 0349, 0361, 0194
Pro Vision	3010, 3022
Profex	0009, 0163, 0431, 0361, 0363
Profi	0009
Profilo	1556
Profitronic	0037, 0314, 0102
Proline	0037, 0625, 0634, 0630, 0411, 0321, 0072, 1376
Proscan	3011, 3000
Prosonic	0037, 1739, 0370, 0374, 0371, 0880, 1376, 0668, 0714, 0451, 0216, 0214, 1770, 1232, 0217, 1709, 1732, 0606, 1507, 1324, 0876, 1820, 1865
Protech	0037, 0217, 0009, 0247, 0349, 0102, 0264, 0431, 0418, 0337, 0668, 0282, 0552, 0163, 0486
Proton	0178
Proview	1645
Provision	0037, 0714, 1531, 1324
Proxima	0735, 1747
Pulier	3013
PVision	1191, 0876, 1218
Pye	0037, 0087, 0554, 0374, 0349, 0412, 2456
Pymi	0009
Q.Bell	3000
Q.Media	3006
QONIX	1594
Quadral	0218
Quadro	0753, 1326, 0037, 1149, 1163, 0796, 1531
Quartek	3004
Quasar	0247, 0650, 0865, 0009
Quelle	0037, 0810, 0011, 0109, 0512, 0535, 0349, 0554, 0191, 0361, 0036, 0217, 0247, 0074, 0327, 0084, 0328, 0070, 0104, 0105, 0668, 0157, 0195, 0200, 0264, 0294, 0346, 0421, 0552, 0009
Questa	0036
Radialva	0109, 0218, 0431, 0163, 0037, 0287, 0337
Radiola	0037, 0217

Brand	Code
Radiomarelli	0087, 0516, 0247, 0037
Radionette	3010
RadioShack	0037, 0178
Radiotone	0009, 0037, 0428, 0370, 0418, 0412, 0668, 0264
Rainbow	3002
Rank	0070
Rank Arena	0036, 0157, 0602, 0753, 0796
RBM	0070
RCA	0625, 0093, 0560, 0335, 0343, 0753, 0796
Realistic	0178
Recor	0037, 0418
Rectiligne	0037
Red	3005
Red Star	1556
Rediffusion	0361, 0548, 0036, 0346
Redstar	0037
Reflex	0037, 0668
RefleXion	3015
Relisys	0865, 0876, 0877, 1206, 1207, 1213, 1209, 1298, 1376, 1585, 1741, 1740, 1645
Remotec	0037, 0093, 0250
Reoc	0714, 0634, 1909
Revox	0037, 0808, 0556, 0370
Rex	0206, 0363, 0411, 0247, 0163, 0259, 0264, 0551
RFT	0087, 0292, 0370, 0428, 0072, 0264, 0037, 0556, 0486
Rhapsody	0216
Ricoh	0037, 0556
Rinex	0773, 0418, 0698, 0264, 0706
R-Line	0037, 0556, 0163
Roadstar	0037, 0715, 0009, 0418, 0714, 0668, 0218, 0264, 0282, 1189, 1900, 1326
Robotron	0087
Rodex	0037, 0556
Rolsen	1371, 1191, 0037, 0556
Rolson	2098

Brand	Code
Rover	0036, 0877
Rowa	0264, 0698, 0217, 0712, 1441, 0009, 0216, 0587, 0037
Roxy	0448
Royal	0418, 0606
Royal Lux	0421, 0370, 0412, 0335
Rubin	3019
Rukopir	0556, 0037
Saba	0625, 1166, 0109, 0560, 0343, 0287, 0087, 0163, 0516, 0361, 0498, 0196, 0335, 0548, 0471, 0650, 0714, 1588
Sacccs	0238
Saga	3022
Sagem	0610, 0455, 0282, 0830, 1313, 0618
Saisho	0235, 0634, 0374, 0516, 0177, 0009, 0011, 0217, 0431, 0163, 0264, 0211, 0354
Saivod	0037, 1982, 1163, 0556, 0668, 1556, 0712, 1037
Sakai	0163
Sakura	1203, 1326
Sakyno	0455
Salora	0194, 0349, 0163, 0356, 0361, 0516, 0363, 0373, 0548, 0339, 0208, 0552, 0480, 0631, 1166, 1556, 0778, 1371, 2239
Salsa	0335
Sambers	0516, 0102, 0314
Sampo	1755
Samsung	0178, 0618, 0587, 0093, 0037, 0060, 0009, 0217, 0448, 0482, 0370, 0488, 0814, 0072, 0264, 0587, 0216, 0163, 9037, 9043, 9055, 4021, 9068, 9141, 6004, 6110, 6115, 6143, 8039, 6192, 6200, 6208, 6242, 6242, 4090, 4051, 4083, 4160, 4003, 4004, 4030, 4093, 8035, 8037, 8039, 8041, 8045
Sandra	0216, 0217
Sandstrom	3033, 3051, 3022
Sanela	0238
Sansei	0451
Sansui	0037, 0556, 0706, 0655, 0371, 0602, 0421, 0455, 0888,

Brand	Code
	0753, 1371, 1191, 1531, 1697, 1553, 1594, 0698, 0264, 0714, 1384, 1248, 1556, 0729, 0806, 1537,1682, 1703, 2239, 2804
Santon	0009
Sanyo	0208, 0157, 0292, 0721, 0036, 0011, 0370, 1507, 0339, 0072, 0216, 0217, 0104, 0035, 0555, 0009, 0163, 0373, 0037, 0108, 0486, 0735, 0893, 0170, 0704, 1647, 1648, 1649, 1654, 1149, 1163, 0146, 2461, 6004, 6012, 6034, 6080, 6104, 6113, 6115, 6122, 6134, 6208, 9055, 9056, 9057, 9096, 9104, 9110, 0225, 4004, 4031, 4003, 4027, 4018, 4083, 4127, 4160, 4131, 4029, 4030, 4043
Save	0037, 0556
Saville	1908
SBR	0037, 0556, 0043
ScanSonic	3007
Schaub Lorenz	0548, 0714, 0361, 0349, 0606, 0486, 0374, 1191, 1194, 1363, 1371, 1324
Schneider	1137, 0037, 0556, 0303, 0349, 0394, 0352, 0336, 0259, 0343, 0217, 0247, 0371, 0361, 0218, 0668, 1037, 0163, 0714, 1909, 1908, 1368, 1982, 0070, 1372
Schneider Electric	3007, 3010, 3002, 3031, 3023, 3047, 3019, 3045
Scotland	0163
Scott	1189, 0178, 0179, 1983
Sears	0178, 0179, 0146
Seaway	0634
Seeltech	3030
Seelver	0556, 1037, 0037
SEG	0037, 1163, 0668, 0217, 0487, 0009, 0349, 0163, 0264, 0634, 0036, 0102, 0247, 0362, 0314, 0216, 0552, 0218, 1909, 1149, 0624
SEI	0087, 0102, 0810, 0552, 0163, 0516, 0349, 0294, 0314, 0206, 0037, 0177
Seiki	3034
Sei-Sinudyne	0102, 0206, 0294, 0314, 0516, 0810, 0552, 0037, 0087
Seitech	1217, 1372
Seizo	3034



Brand	Code
Selecline	3012, 3019
Seleco	0206, 0363, 0259, 0362, 0163, 0411, 0673, 0551, 0371, 0036, 0264, 0346, 0435, 0630
Sencor	3034, 3015, 3012, 3022, 3014, 3010, 3011
Sencora	0009
Sens	3035
Sentra	0035, 0218, 0009, 0349
Senzu	3036
Serie Dorada	0178
Serino	0610, 0455, 0216, 0093
SeViC	1705
Sharp	0093, 0157, 0036, 0491, 0294, 0653, 0186, 0516, 0200, 0053, 2214
Sherwood	1399, 1784
Shinelco	2104
Shintoshi	0037, 0556
Shivaki	0037, 0556, 0443, 0451, 0374, 0178
Shorai	0294, 0179
Show	0418, 0009, 0072, 0698, 0264, 0706, 0037
Siarem	0552, 0163, 0087, 0102, 0516
Siemens	0191, 0535, 0554, 0200, 0195, 0327, 0328, 0157, 0037, 0556, 0361, 0146
Siera	0037, 0556, 0587
Siesta	0370
Silva	0037, 0556, 0216, 0361
Silva Schneider	0753, 1556, 0037
Silvano	0587
Silver	0036, 0037, 0455, 0556, 0361, 0179, 0715, 0163
SilverCrest	1037, 0037, 0556
SIM2 Multimedia	0673
Simpson	0186
Simz	1820
Singer	0009, 0087, 0698, 1556, 0037, 0556, 0102, 0247, 0435, 0335, 0163, 0371, 0806, 0891, 1537
Sinotec	0773, 0418, 0606, 0698

Brand	Code
Sinudyne	1372, 0177, 0087, 0235, 0102, 0294, 0552, 0163, 0361, 0516, 0349, 0810, 0314, 0206, 0037, 1908, 0606
Skantic	0356
Sky	0282, 0880, 0037, 0178, 0556, 1606, 1376, 1775, 1745, 1778, 0661, 0865
SKY Brazil	0880
Sky Media	3004
Skymaster	0105
Skysonic	0753, 0796
Skyworth	3059, 3060
Sliding	0865, 0880, 1372, 1374, 1375, 1377, 1383, 1388, 1368, 1324
SLX	0668
Smaragd	0487
Smart Tech	3019
SmartVision	1183
S-Media	1217
Snow	3023
Soemtron	0865, 1298
Sogera	0320
Sogo	1376, 0606
Solavox	0361, 0072, 0163, 0548, 0037, 0556
Sonawa	0218
Sonber	0102
Sonic	0753
Soniko	0037, 0556
Soniq	1467, 1298, 1702, 2474, 2493, 2829
Sonitron	0208, 0370, 0339, 0217
Sonix	1732
Sonneclair	0037
Sonoko	0037, 0009, 0264, 0282, 0217
Sonolor	0208, 0163, 0810, 0548, 0361, 0282
Sontec	0037, 0556, 0370, 0294, 0009
Sontech	1983
Sony	0810, 0011, 0353, 0036, 0810, 1925, 0102, 0314, 0742, 0037, 0157, 0093, 0170, 0074, 1685

Brand	Code
Sound & Vision	0102, 0218, 0374, 0037
Soundesign	0178, 0179, 0186
Soundmax	3019
Soundwave	0037, 0556, 0320, 0418, 0715
Soyea	0773
Soyo	1709
Spectra	0009
Sphere	3015
SR Standard	3006
Ssangyong	0009
Staksonic	0009
Stan Line	3013
Standard	0037, 0218, 0009, 0217, 0320, 0374, 1709
Starion	1037
Starlite	0009, 0552, 0163, 0037, 0556, 0264, 0412
Stenway	0282, 0218
Stern	0206, 0259, 0163, 0363, 0264, 0411, 0551, 0435
Stevison	1982, 1556
Strato	0037, 0556, 0264, 0009
Straus	3014
Strazus	3014
Strong	1163, 1149, 1037, 0037, 0556
Stylandia	0217
Sungoo	1248
Sungpo	3037, 3007, 3058
Sunic Line	0037
Sunkai	0294, 0355, 0321, 0455, 0218, 0235, 0610, 0037, 0556, 0487, 0531, 0865
Sunny	0037
Sunstar	0371, 0037, 0556, 0009, 0264
Sunstech	3007, 3048, 3025
Sunwatt	0455
Sunwood	0037, 0556, 0009
Super	1189
Superior	3023

Brand	Code
Superla	0516, 0216, 0217
Supersonic	0009, 0208, 0556, 0698, 0264, 0455, 0037
SuperTech	0009, 0037, 0556, 0216, 0218
Superton	0431
Supervision	0698, 0264
Supra	0178, 0374, 0009, 0037
Supratech	3038
Susumu	0335, 0218, 0287
Sutron	0009
SVA	0698, 0264, 0455, 0208, 0706, 0587, 0865, 0872
Svasa	0698, 0208, 0706, 0264, 0455
Swedx	1606
Swissline	0247
Swisstec	1606, 0880, 1376, 0865, 1709, 1745, 1778, 2104
Sydney	0216, 0217
Sylvania	0186
Symphonic	3039, 3052
Sysline	0037, 0556
Sytong	0216
T+A	0447
Tandberg	0367, 0411, 0109, 0337, 0196, 0362, 0361, 0163
Tandy	0218, 0072, 0217, 0247, 0093, 0163
Targa	1371, 1191, 0618
Tashiko	0036, 0043, 0217, 0170, 0216, 0163, 0363, 0146
Tatung	0037, 1248, 1556, 1056, 0037, 0072, 0516, 0217, 0011, 0629, 1908, 1371, 1191, 1372, 1324, 1720
Taurus	3022
TCL	1699, 0625, 0892, 6256, 6258, 6259, 6260, 6262, 6264, 6268, 6271, 6284, 8049
TCM	0714, 1289, 0808, 1308
TD Systems	3007, 3011
Teac	0698, 1523, 0037, 0512, 0712, 0668, 0455, 0217, 0264, 1909, 0178, 0009, 0412, 0349, 0721, 0282, 0336, 0418, 0431, 0755, 0170, 0714, 1149, 1755, 1203, 0587, 1621, 1363, 1770, 1709, 0624, 0892, 1637, 1529, 1794, 6004, 6041, 6197,

Brand	Code
	9055, 1795, 1820, 1983, 1985, 2241, 2607, 2714, 2761, 3084, 3163
Tec	0217, 0009, 0247, 0471, 0335, 0337, 0259, 0552, 0037, 0556, 0361, 0163
Tech Line	0037, 0556, 0668, 1163
Tech Lux	1189, 1706
Techica	0218
Technema	0320
Technica	1982
Technical	3007, 3005
Technics	0650, 0250
Technika	1585, 1865, 1983
TechniSat	0655, 0037, 0556, 0163
Technisson	0714, 1289, 1652
Techno	1585, 1037, 2267
Technol Ace	0179, 0698, 0264, 0634, 0374, 0216
Technology	3004, 3005, 3055
Technosonic	0037, 0556, 0499, 0880, 1326, 1982, 0625, 1324
Technotrend	1531, 1702
Techvision	1709, 1531, 1771
Techwood	1163, 1037
Teckton	1376
Tecnimagen	0556
Teco	1040, 1313, 1523
Tedelex	0217, 0698, 0606, 0418, 0037, 0009, 0208, 0891, 0587, 0431, 1709, 1531, 0264, 1699, 0178, 1703, 0726, 0806, 1537, 1681
Teiron	0009
Tek	0820, 0037, 0698, 0009
Teknika	0060, 0179, 0186
TELE System	0876, 1368
Teleavia	0109, 0287, 0196, 0490, 0343
Telecor	0037, 0556, 0163, 0218, 0217, 0259, 0394
Telefunken	0625, 0560, 0587, 0074, 0109, 0698, 0712, 0343, 0498, 0820, 0896, 0471, 0780, 0891, 0287, 0084, 0101, 1703,

Brand	Code
	1706, 0335, 0073, 0196, 1536, 0753, 0037, 0486, 0714, 0490, 1556, 0346, 0754, 1326, 1588, 1681
Telefusion	0037, 0556
Telegazi	0037, 0163, 0259, 0218, 0264, 0556
Telemeister	0320, 0037, 0556
Telesonic	0037, 0556
Telestar	0009, 0037, 0556, 0412
Teletech	0037, 0556, 0668, 0009, 0247, 0337, 1037
Teleton	0217, 0275, 0206, 0163, 0349, 0259, 0186, 0036, 0363
Televideon	0320, 0552, 0163, 0216
Televue	0037, 0556
Telexa	0102
Telstar	1702
Temco	0294
Tempest	0009, 0037, 0556, 0264, 0455
Tennessee	0037, 0556
Tensai	0104, 0218, 0037, 0217, 0294, 0320, 0009, 0105, 0374, 0371, 0377, 0247, 0715, 0163
Tenson	0320, 0009
Terra	3040
Terris	3005, 3025, 3012
Tesco	3009
Tesla	1037, 0037, 0668, 0714, 1652, 0715, 1137, 0630, 0371, 0753, 0556, 0238, 0610
Tevion	1248, 1298, 1523, 0037, 1190, 1556, 0808, 0865, 0668, 1137, 1771, 0714, 1289, 1800, 2023, 2241
Texet	0217, 0374, 0009, 0216, 0218
Thes	2039
Thomas	3041
Thomas America	3041
Thomson	0625, 0560, 0343, 0287, 0109, 0471, 0335, 0196, 0237, 0037, 0556, 0490, 0320, 0349, 0216, 0552, 1588
Thorn	0108, 0109, 0225, 0073, 0343, 0190, 0361, 0810, 0238, 0192, 0074, 0084, 0535, 0037, 0072, 0104, 0011, 0335, 0512, 0036, 0043, 0035, 0374, 0070, 0101, 0356

Brand	Code
Thorn-Ferguson	0104, 0108, 0109, 0190, 0192, 0238, 0361, 0499, 0335, 0073, 0035
Time	1702
Tiny	1196, 1269
TMK	0178, 0177
Tobishi	0218
Tokai	0072, 0037, 0337, 0668, 0448, 0163, 0217, 0374, 0009, 0552
Tokaido	1037
Tokyo	0216, 0035, 0448, 0303
Tomashi	0282, 0218
Tongtel	0780, 0587
Top Show	0698, 0773, 0418, 0009, 0264, 0706
Topline	1037, 0668
Toshiba	0035, 0508, 0060, 1289, 0714, 0036, 0070, 0102, 0241, 1164, 1582, 1704, 0217, 0109, 0490, 0195, 0191, 0618, 1908, 0009, 0698, 0037, 0241, 1556, 0650, 0037, 2732, 9055, 0035, 9103, 6004, 6033, 6034, 6041, 6063, 6090, 6210, 5482, 4117, 4109, 4027, 4146, 4017, 4920, 4082
Tosonic	3042
Tosumi	1982, 1770
Towada	0349, 0102, 0314, 0217, 0552
Toyoda	0009, 0371, 0264, 1709
Trakton	0009, 0264, 0217
TRANS--continents	0668, 0037, 1207, 1377, 0865, 0486, 0217, 2023
Transonic	0037, 0556, 0455, 0587, 0512, 0264, 0698, 0712, 0418, 0009, 1363, 1326, 0858, 1069, 2112, 2354
Transtec	0216
Trevi	2112
Triad	0037, 0218, 0009
Trical	0157
Trident	0516, 0217
Trio	1248, 1523
Tristan Auron	3019
Tristar	0264, 0218

Brand	Code
Triumph	0177, 0516, 0346, 0556, 0037
Tsoschi	0282
Tucson	3007, 3005
TV Star	3019, 3011
TVE	2239
TVTEXT 95	0556
Uher	0037, 0556, 0206, 0320, 0303, 0374, 0418, 0486, 0370, 0259, 0480
Ultra	0192
Ultravox	0087, 0102, 0374, 0247, 0216, 0552, 0163, 0314, 0037, 0556
U-max	3014, 3012
UMC	1606, 1775, 1745
Unic Line	0037, 0473, 0455, 0349
Uniden	2112
United	0714, 0037, 0715, 1908, 0587, 1652, 1770, 1820,1983
Unitek	1709
Universal	0714, 0037
Universum	0037, 1163, 0346, 0668, 0105, 0480, 0195, 0473, 1149, 0104, 0535, 0361, 0011, 0512, 0247, 0492, 0370, 0200, 0418, 0294, 0036, 0157, 0070, 0552, 0163, 0264, 0421, 0488, 0411, 0074, 0327, 0328, 0810, 0349, 0217, 0109, 0362, 0337, 0177, 0631, 0554, 0009, 0084, 0170, 0618, 0146
Univox	0037, 0337, 0087, 0163, 0238
Utax	0163
V2max	0865
V7 Videoseven	1755, 0178, 0880, 1376, 1217, 1666, 0618, 0810
Vanguard	0037
VD-Tech	3006, 3015
Venturer	1865
Venus	1326
VEON	3019, 3012, 3013
Vestel	1037, 1163, 1585, 0037, 0668, 0552, 0163, 0217, 0556
Vexa	0009, 0037, 0556



Brand	Code
Victor	0653, 0036, 0053, 0250
Videocon	3029, 3012, 3056
Videologic	0218, 0216
Videologique	0216, 0218, 0217
Videomac	0009
Videosat	0247
Vidoseven	3043
VideoSystem	0037, 0556
Videotechnic	0216, 0320, 0217, 0374
Videoton	0356, 0163, 0431, 0490
Vidikron	1292, 0102, 0673, 0735
Vidtech	0036, 0178
Viewpia	0876, 1784
ViewSonic	1578, 1755, 1330, 1588, 1542, 2111
Viper	0337
Visiola	0216
Vision	0037, 0264, 0556, 0320, 0488, 0217, 1730
VisionPlus	3009
Vistar	0206, 0361
Vistron	1363
Visual Innovations	3044
Vityas	3015
Vivax	1326, 1308, 0037, 1709
Vivid	3013
Vivo	1697
VMS	0314
Vortec	0037, 0556
VOX	3007
Voxson	0087, 0037, 0556, 0363, 0418, 0163, 0178, 2706
Vue	1570
Walker	1149
Waltham	0217, 0356, 0418, 0287, 0385, 0037, 0556, 0668, 0109, 1037, 0431, 0490, 0163, 0443
Wards	0179
Watson	1037, 1248, 1259, 0320, 0556, 0037, 0163, 0009, 0668,

Brand	Code
	0218, 0394, 1908, 1376, 0327, 0714
Watt Radio	0102, 0349, 0552, 0163, 0216, 0314, 0486, 0428
Wega	0037, 0556, 0036, 0087
Wegavox	0009, 0037, 0556
Wellington	3007
Welltech	0714, 1652
Weltblick	0037, 0556, 0320, 0217
Weltstar	1037
Westinghouse	3015, 3034
Weston	0037, 0556
Westwood	3023, 3005
Wharfedale	0037, 0896, 0891, 0556, 0698, 1556, 0706, 1372, 1324, 1681, 1983
White Westinghouse	0320, 0216, 0037, 0556, 0337, 1909, 0624
Wilson	0556
Windsor	0668, 1037
Windstar	0282, 0337
Windy Sam	0556
Wintel	0714, 1006
World-of-Vision	0880, 0890, 0865, 1289, 1298, 0877, 1606, 1217, 1732
Worldview	0455, 0045
Woxter	1531
Xenius	0634
Xi-En	1770
Xiron	1983
XLogic	0698
XMS	1441
Xomax	1770
Xoro	1196, 1217, 1507
Xrypton	0037, 0556
X-View	1191
Yalos	1771
Yamada	1340
Yamaha	0650, 0797, 1526, 1576
Yamishi	0282, 0455, 0218, 0037, 0217

Brand	Code
Yapshe	0250
Yokan	0037
Yoko	0217, 0037, 0218, 0264, 0009, 0431, 0421, 0370, 0339, 0216, 0247, 0373
Yorx	0218
Ytawai	1531
YU-MA-TU	0037
Yuntu	3013
Zaapa	1189
Zanela	0238
Zanussi	0206, 0363, 0217
Zenith	1909, 0624
Zenor	0339
Zephir	3013
Zepto	1585
Ziggo	1818
ZX	1908

# fetch

**[fetch.com.au](https://fetch.com.au)**

© Fetch TV Pty Limited. ABN 36 130 669 500. All rights reserved. Fetch TV Pty Limited is the owner of the trade marks Fetch. The set top box and the Fetch service may only be used lawfully and in accordance with relevant terms of use of which you are notified by your service provider. You must not use the electronic program guide, or any part of it, for any purpose other than private and domestic purposes and you must not sub-licence, sell, lease, lend, upload, download, communicate or distribute it (or any part of it) to any person.

Version: July 2021