




**Fetch Remote 4**

# Welcome to Fetch

Simple Remote Set Up .....	3
Direct Remote Set Up .....	4
Controlling the TV Volume .....	5
TV Power and AV .....	6
Reset remote to control Fetch Box only .....	7
To find out your TV brand & code from A to Z .....	8

# 1 Simple Remote Set Up

Welcome to the Fetch remote setup guide. Follow the Simple Remote Set Up steps to program your Fetch remote to control your TV. If the Simple Remote Set Up doesn't work, try the Direct Remote Set Up.

- 1 Hold down  for 3 seconds. The remote will flash twice.
- 2 Find your TV brand below and hold down the number key, until TV turns off.  
1 - Hisense 2 - LG 3 - NEC 4 - Palsonic 5 - Panasonic  
6 - Samsung 7 - Sanyo 8 - Soniq 9 - Sony 0 - Teac  
**Note:** If your TV brand is not listed or this setup did not work, you may wish to try the Direct Remote Set Up (page 4).

- 3 Press  then  to turn on TV.



## Tip:





You can set up your remote when you first start up your Fetch box or later by following the steps in this guide.



## 2 Direct Remote Set Up

Before you start, find your TV brand and related codes in the list (see page 8).

You may need to try each code to find the best match for your TV.

- 1 Hold down  and  for 3 seconds. The remote flashes twice and backlights come on.
- 2 Press the first of the 4 digit codes for your brand of TV.
  - ✓ If the code is valid, the remote flashes twice.
  - ✗ If the code is invalid, the remote flashes once only on the last digit entry.
- 3 Press  then  to turn your TV off and back on.
  - If this doesn't work, repeat from Step 1 using the next code on the list for your TV brand.
  - If you have turned the TV back on using the Fetch remote, the setup has worked.

# 3 Controlling the TV Volume



**Volume Up**



**Mute - Toggles the sound on/off**



**Volume down**

## **Switch control from the TV to the Fetch box:**


Hold down  and  until the remote flashes twice.

## **Switch control from the Fetch box to the TV:**

Hold down  and  until the remote flashes once.

# 4 TV Power and AV


## Fetch Power

Press  to turn on/off Fetch box.

## TV Power

Press  then  press to turn on/off TV.






## AV Source:

Press  then press  to change the input source, e.g. HDMI switch on TV.

Some buttons may not work with your TV. You may wish to try each code through the Direct Remote Set Up process (page 4) for your remote.

# 5 Reset remote to control Fetch Box only

Follow these steps if you want to clear the remote of the TV code programmed through Simple or Direct Set Up.

- 1 Hold down  and  on the remote for 3 seconds. The remote flashes twice and backlights come on.
- 2 Press the following buttons on your remote in order:   
- 3 After you press the 9 button, then the 7 button and then the 7 button again, the remote will flash four times.  
If you want to program the Fetch remote to control your TV again, follow the Simple Remote Set Up process. (page 3).

# 6 TV brand & code from A to Z

Find your TV brand from the list and use corresponding code to setup your remote.

Brand	Code
<b>A.R. Systems</b>	1696, 0037, 0373, 0556, 0352, 0374, 0455
<b>Accent</b>	0009, 0037, 0556
<b>Acer</b>	1339, 1509, 1403, 1644
<b>Acoustic Solutions</b>	1149, 1523, 1037, 1865
<b>Adcom</b>	0625
<b>ADL</b>	1217, 0890
<b>Admiral</b>	0093, 0363, 0418, 0087, 0163, 0264
<b>Advent</b>	0876
<b>Adyson</b>	0217, 0216
<b>AEA</b>	0037, 0556
<b>AEG</b>	0606, 1556, 1037, 1149, 1372, 1163, 1324, 2239
<b>Aftron</b>	0891
<b>Agashi</b>	0216, 0264, 0217
<b>AGB</b>	0516
<b>Agef</b>	0087
<b>Aiko</b>	0009, 0037, 0069, 0556, 0371, 0216, 0035, 0433, 0880, 0072, 0361, 0191, 0264, 0217, 1681
<b>Aim</b>	0037, 0072, 0412, 0556, 0753, 0208, 0706, 0698, 0634, 0374, 0451, 0455, 0606, 0499
<b>Airis</b>	0844, 1531
<b>Aiwa</b>	1908, 1505
<b>Akai</b>	0361, 1326, 0208, 0371, 0037, 0803, 0433, 0191, 0035, 0009, 0072, 0753, 0218, 0552, 0714, 0163, 0706, 0488, 0698, 0516, 0715, 0602, 0556, 0548, 0581, 0480, 0217, 0631, 0216, 0264, 0448, 0178, 0377, 0606, 1037, 1908, 0473, 1259, 1248, 1308, 0729, 0806, 1537, 1865



<b>Brand</b>	<b>Code</b>
<b>Akashi</b>	0009
<b>Akiba</b>	0218, 0282, 0455, 0037, 0556, 0294
<b>Akira</b>	0190, 0418, 0753, 0037, 2241
<b>Akito</b>	0037, 0556
<b>Akura</b>	0037, 0556, 0668, 1645, 1770, 0412, 0009, 0218 0282, 0358, 0264, 0714, 1982, 1363, 1709, 1820, 1983, 2239
<b>Alaron</b>	0179, 0216
<b>Alba</b>	0037, 1037, 0556, 0714, 0009, 0418, 0370, 0235, 0371, 0668, 0355, 0218, 0216, 0247, 0431, 0163, 0487, 0211, 0581, 0036, 1908, 0443, 0551, 1731, 0480, 0587, 1865, 2104
<b>Alcyon</b>	0211
<b>AlfaView</b>	1206
<b>Alkos</b>	0035
<b>Allorgan</b>	0206, 0294, 0217
<b>Allstar</b>	0037, 0556
<b>Allure</b>	2714
<b>All-Tel</b>	0865, 1269
<b>Ambassador</b>	0177
<b>Amitech</b>	1281, 0655, 1468
<b>Amoi</b>	1529
<b>Amplivision</b>	0217, 0370, 0320
<b>Amstrad</b>	0177, 0009, 0516, 0264, 0354, 0371, 0218, 0037, 0556, 0433, 0412, 0362, 1037, 0581, 1982, 1820
<b>Anam</b>	0037, 0556, 0009, 0650, 0250
<b>Anam National</b>	0037, 0556, 0650, 0250
<b>Andersson</b>	1163, 1149, 1585
<b>Anex</b>	0421
<b>Anglo</b>	0009, 0264
<b>Anitech</b>	0009, 0264, 0037, 0556, 0282, 0102
<b>Ansonic</b>	0370, 0037, 0556, 0009, 0668, 0374, 0163, 0292, 0102, 0411, 0259, 0247, 0428, 0104

<b>Brand</b>	<b>Code</b>
<b>AOC</b>	1365, 1089, 1588, 0625, 2111, 2214
<b>Apollo</b>	0473, 2239
<b>Arc En Ciel</b>	0109, 0196
<b>Arcam</b>	0216, 0217
<b>Arçelik</b>	0714
<b>Ardem</b>	0486, 0714, 0633, 0037, 0556
<b>Arena</b>	0037
<b>Aristona</b>	0556, 0037
<b>Art Mito</b>	1585, 1820
<b>Arthur Martin</b>	0163, 0237
<b>ASA</b>	0105, 0346, 0070, 0104, 0087, 0163, 0179
<b>Asberg</b>	0037, 0556, 0102
<b>ASK</b>	1747
<b>Asora</b>	0009
<b>Astra</b>	0037, 0556
<b>Asuka</b>	0218, 0217, 0216, 0264, 0282
<b>ATD</b>	0698
<b>Atec</b>	1606, 1728
<b>Atlantic</b>	0037, 0556, 0216, 0206, 0320, 0259
<b>Atori</b>	0009
<b>Auchan</b>	0163
<b>Audiosonic</b>	0009, 0037, 0374, 0820, 0556, 1800, 1308, 0109, 1703, 0714, 0715, 0217, 0370, 0337, 0264, 0218, 0486, 0428, 0858, 0865, 1681, 1802, 1983, 2104
<b>Audioton</b>	0217, 0486, 0370, 0264, 0428
<b>Audiovox</b>	0451
<b>Audioworld</b>	0698
<b>Aumark</b>	0060
<b>Auriga</b>	1531
<b>Autovox</b>	0087, 0206, 0237, 0349, 0217, 0247, 0336
<b>Avol</b>	1820
<b>AVP</b>	1908

<b>Brand</b>	<b>Code</b>
<b>Awa</b>	0011, 0036, 0009, 0157, 0374, 0451, 0412, 0037, 0556, 0216, 0606, 0217, 0108, 0264, 1985, 1376, 0178, 0698, 0888, 1681, 1813, 2039, 2241, 2480
<b>Axxent</b>	0009
<b>Axxon</b>	0714
<b>B&amp;D</b>	1217
<b>Baier</b>	0876, 1372, 2239
<b>Baird</b>	0109, 0343, 0190, 0192, 0072, 0073, 0217, 0208, 1196, 0606
<b>Bang &amp; Olufsen</b>	0565, 0087, 0275
<b>Barco</b>	0552, 0163
<b>Base</b>	1570, 0780
<b>Baseline</b>	1244
<b>Basic Line</b>	0374, 0037, 0163, 0668, 0556, 0009, 0218, 0282, 0217, 0455, 0339, 1037, 1149
<b>Bastide</b>	0217
<b>Bauer</b>	0009, 0698, 0706, 0264
<b>Bauhn</b>	1301, 1302
<b>Baur</b>	0009, 0303, 0535, 0195, 0512, 0037, 0556, 0554, 0191, 0361, 0349, 1505, 1010, 0146, 0455, 1301, 1302
<b>Bazin</b>	0217
<b>BBK</b>	1741
<b>Beaumark</b>	0178
<b>Beko</b>	0714, 0486, 0035, 0715, 0037, 0418, 0428, 1800, 0370, 0556, 0606, 0808, 1652
<b>Belson</b>	1191, 0698, 2241
<b>Bennett</b>	0556, 0037
<b>BenQ</b>	1212, 1562, 1032, 1574
<b>Bensten</b>	1570, 1326
<b>Beon</b>	0037, 0556, 0418
<b>Berthen</b>	0668
<b>Best</b>	0337, 0370, 0421

<b>Brand</b>	<b>Code</b>
<b>Bestar</b>	0037, 0556, 0370, 0374
<b>Bestar-Daewoo</b>	0374
<b>Bestwell</b>	1326
<b>Bexa</b>	2493
<b>Binatone</b>	0217
<b>Black Diamond</b>	0820, 1037, 0556, 0753, 1163, 0587
<b>Black Panther</b>	0102
<b>Black Star</b>	0247
<b>Black Strip</b>	0035
<b>Blackway</b>	0282, 0218
<b>Blaupunkt</b>	0554, 0195, 0191, 0535, 0200, 0327, 0328, 0448, 0455, 0170, 0036
<b>Blauren</b>	0374
<b>Blue Media</b>	1728, 1606
<b>Blue Sky</b>	0037, 1372, 1037, 1709, 0714, 1149, 0487, 1771, 0668, 0715, 0625, 1652, 1909, 0556, 0218, 0282, 0455, 1908, 1191, 0808, 1363, 1388, 1314, 1739, 0624, 1324
<b>Blue Star</b>	0282
<b>BlueH</b>	1745
<b>Boman</b>	1324
<b>Bondstec</b>	0247
<b>Boots</b>	0217, 0009
<b>Bork</b>	1363
<b>Bosch</b>	0320, 0327
<b>BPL</b>	0037, 0556, 0282, 0373, 0208, 0896
<b>Brandt</b>	0625, 0109, 0237, 0196, 0287, 0335, 0471, 0343, 0560, 1365, 0714
<b>Brandt Electronique</b>	0287, 0335
<b>Brimax</b>	1709
<b>Brinkmann</b>	0037, 0556, 0668, 0418, 0486
<b>Brionvega</b>	0037, 0556, 0362, 0087, 1514
<b>Britannia</b>	0216, 0217

<b>Brand</b>	<b>Code</b>
<b>Brother</b>	0264
<b>Bruns</b>	0087, 0428, 0486
<b>BSR</b>	0163, 0294, 0552, 0361
<b>BTC</b>	0218
<b>Bush</b>	1037, 1326, 0714, 0037, 0668, 1652, 0218, 0163, 0349, 0009, 0036, 0371, 0235, 0282, 0355, 0363, 0374, 0264, 0361, 0487, 0211, 0208, 0217, 1556, 0698, 0581, 0294, 0552, 0556, 1900, 1908, 0778, 1259, 1982, 1248, 1682, 1731, 1166, 0587, 1308, 0443, 1441, 1645, 1865, 1983, 2104, 2214, 2241
<b>Cameron</b>	1523, 0556
<b>Camper</b>	0037, 0556, 0486
<b>Candle</b>	0186
<b>Canton</b>	0218
<b>Capsonic</b>	0264
<b>Carad</b>	0610, 0037, 0556, 0668, 1037
<b>Carena</b>	0455, 0037, 0556
<b>Carrefour</b>	0036, 0070, 0037, 0556
<b>Carver</b>	0170
<b>Cascade</b>	0009, 0037, 0556
<b>Casio</b>	0037, 0556, 0163, 0349
<b>Cat</b>	1682, 2155
<b>Cathay</b>	0037, 0556
<b>CCE</b>	0037, 0556, 0217
<b>Celestial</b>	0820, 0819
<b>Cello</b>	1770, 1802, 1820
<b>Centrex</b>	0780, 0891, 1536, 0698, 1731, 1203, 1702
<b>Centrum</b>	1037
<b>Centurion</b>	0037, 0556
<b>Century</b>	0087, 0247, 0238
<b>CGE</b>	0074, 0084, 0418, 0247, 0552, 0370, 0163
<b>Chimei</b>	1666

<b>Brand</b>	<b>Code</b>
<b>Cimline</b>	0009, 0235, 0218
<b>Cineral</b>	0451
<b>Cinex</b>	1166, 1556
<b>Citizen</b>	0451, 0060, 0186
<b>City</b>	0009
<b>Clarivox</b>	0418, 0037, 0556, 0070, 0102
<b>Clatronic</b>	0037, 0370, 0371, 0714, 0218, 0264, 0556, 0217, 0247, 0009, 0102, 0320, 0606, 1163, 1324
<b>Clayton</b>	0385, 1037
<b>CMS</b>	0216
<b>CMS hightec</b>	0217
<b>Cobolt</b>	0891
<b>Combitech</b>	1908
<b>Concorde</b>	0009
<b>Condor</b>	0320, 0037, 0556, 0370, 0216, 0009, 0282, 0102, 0247, 0418, 0314, 0411, 0163, 0264
<b>Conia</b>	1645, 0820, 1523, 0754, 1702, 2483
<b>Conrac</b>	0808
<b>Conrad</b>	0037, 0556
<b>Contec</b>	0216, 0009, 0157, 0011, 0036, 0264, 0037, 0556
<b>Continental Edison</b>	0109, 0237, 0196, 0287, 0487
<b>Cosmel</b>	0009, 0337, 0037, 0556
<b>CPTEC</b>	0625, 1363
<b>Crosley</b>	0087, 0247, 0074, 0084, 0552, 0163
<b>Crown</b>	0009, 0712, 0370, 0486, 0037, 0556, 0487, 0714, 0606, 0715, 0421, 0373, 0418, 0208, 0653, 0339, 1037, 1652, 0668, 0053, 0412
<b>Crystal</b>	0431
<b>CS Electronics</b>	0216, 0218, 0247
<b>CTC</b>	0247
<b>Curtis Mathes</b>	0060, 0093, 0451, 0166
<b>CWR-Tech</b>	1372

<b>Brand</b>	<b>Code</b>
<b>CyberHome</b>	0794, 1176
<b>Cybertron</b>	0218
<b>Cytronix</b>	1298
<b>D.Boss</b>	1390, 0037
<b>Daewoo</b>	0634, 0661, 1203, 0499, 0374, 1909, 0037, 0556, 0009, 0216, 0218, 0217, 0451, 1137, 1908, 0880, 1218, 0876, 0865, 0698, 0714, 0706, 0624, 2098
<b>Daijitsu</b>	2804
<b>Dainichi</b>	0218, 0216
<b>Dansai</b>	0037, 0556, 0264, 0035, 0216, 0009, 0036, 0217, 0208
<b>Dansette</b>	0412
<b>Dantax</b>	0370, 0486, 1652, 0714, 0606, 0715, 1908
<b>Datsura</b>	0373, 0208
<b>Dawa</b>	0009, 0037, 0556
<b>Daytek</b>	0698, 1207, 0706, 1376, 1374, 0264, 1631
<b>Dayton</b>	1207, 1374, 0009
<b>Daytron</b>	0009, 0374, 0037, 0556
<b>De Graaf</b>	0208, 0163, 0548, 0363
<b>DEC</b>	0891, 1326, 1190, 0896, 1709
<b>Decca</b>	0072, 0516, 0037, 0556, 0217, 1137, 1908, 1056
<b>Deitron</b>	0037, 0556, 0374, 0218
<b>Dell</b>	1403
<b>Denko</b>	0264
<b>Denver</b>	0037, 1372, 0556, 0606, 1189, 0587, 1709, 1770, 1820
<b>DER</b>	0190
<b>Desmet</b>	0320, 0037, 0556, 0009, 0087
<b>Dew</b>	1770
<b>DGM</b>	1435, 2239
<b>Diamant</b>	0037, 0556
<b>Diamond</b>	0264, 0698, 0009, 0216, 0371, 0820, 0896, 0706
<b>DiBoss</b>	0037, 0556
<b>Dick Smith Electronics</b>	0698, 2241, 1326, 1985, 2658

<b>Brand</b>	<b>Code</b>
<b>Digatron</b>	0037, 0556
<b>Digihome</b>	1149
<b>Digiline</b>	0037, 0556, 0105, 0668
<b>DigiLogic</b>	0037, 0556
<b>Digimate</b>	0890
<b>DigiMax</b>	0891
<b>Digital Device</b>	1606
<b>Digital Life</b>	0891, 0872
<b>Digitek</b>	1709, 1771
<b>Digitex</b>	0820
<b>Digitor</b>	0037, 0556, 0888, 1985, 1497, 1703, 0698
<b>Digivision</b>	0361
<b>Digix Media</b>	0880
<b>DiK</b>	0037, 0556
<b>Dikom</b>	1703, 1696
<b>DiVision</b>	2239
<b>Dixi</b>	0009, 0037, 0556, 0247, 0217, 0087
<b>DK digital</b>	1662
<b>DL</b>	0891, 0780, 0037, 0587, 0865, 1363, 1326, 1203, 0872
<b>DMTECH</b>	1338
<b>Domeos</b>	0668, 0037, 1037
<b>Domland</b>	0394
<b>Doric</b>	0349
<b>Dream Vision</b>	0673, 1704
<b>DSE</b>	0888, 1556, 1261, 1985, 1497, 0820, 1277, 1703, 1166, 1563, 1631, 0698, 1682, 1326, 2155, 2241, 2480, 2484, 2658
<b>DTS</b>	0009
<b>Dual</b>	0349, 0217, 0343, 0336, 0037, 0556, 0259, 0352, 0394, 0303, 0552, 0163, 0531, 1137, 0631, 1149, 1037, 0778, 1372, 1163, 2241
<b>Dumont</b>	0087, 0104, 0102, 0217, 0070, 0072
<b>Dunai</b>	0163



<b>Brand</b>	<b>Code</b>
<b>Durabrand</b>	0037, 0556, 1652, 0714
<b>Dux</b>	0037, 0556
<b>D-Vision</b>	0037, 1982, 0556
<b>DVX</b>	0891
<b>Dynatron</b>	0037, 0556
<b>E:max</b>	0606, 1531, 1372, 1324
<b>Easy Living</b>	1248, 1259, 1553, 1709, 1217, 1308, 1631, 0877, 1166, 1556, 1666, 1294, 2023, 2104, 2157
<b>Ecco</b>	0773, 0706, 0698
<b>ECE</b>	0037
<b>Edison-Minerva</b>	0487
<b>Eiki</b>	0735
<b>Elbe</b>	0411, 0362, 0435, 0630, 0238, 0610, 0259, 0292 0370, 0163, 0037, 0556, 0218, 0191, 0551, 0217, 0516, 0361, 0552
<b>Elbe-Sharp</b>	0516
<b>Elcit</b>	0087, 0247, 0516, 0102, 0552, 0163
<b>Electrion</b>	1585
<b>Electroview</b>	2706
<b>Elekta</b>	0009, 0037, 0556, 0264, 0282
<b>Elfunk</b>	1208, 1037
<b>ELG</b>	0037, 0556
<b>Elin</b>	0216, 0037, 0556, 0105, 0104, 0548, 0361, 0448, 0349, 0163, 0009
<b>Elite</b>	0218, 0037, 0556, 0320
<b>Elman</b>	0102
<b>Elonex</b>	1776
<b>Elta</b>	0009, 0264, 0216, 0431, 1662
<b>Emco</b>	0247
<b>Emerson</b>	0177, 0714, 0178, 0179, 0087, 0247, 0037, 0556, 0371, 0070, 0282, 0320, 0361, 1909, 0486, 0370, 0163, 0321, 0668, 0624
<b>e-motion</b>	1709

<b>Brand</b>	<b>Code</b>
<b>Emperor</b>	0282
<b>Enmar</b>	2023
<b>Enzer</b>	0753, 0773
<b>Epson</b>	0833, 1379
<b>Erae</b>	1371, 1191
<b>Erisson</b>	1682
<b>Erres</b>	0037, 0556
<b>ESC</b>	0037, 0556, 0217
<b>Estèle</b>	0552, 0163
<b>Etron</b>	0037, 0556, 0820, 0009, 0163
<b>Eurofeel</b>	0264, 0217
<b>EuroLine</b>	0037
<b>Euroman</b>	0216, 0264, 0037, 0556, 0217, 0421, 0370
<b>Europa</b>	0037, 0556
<b>Europhon</b>	0037, 0516, 0102, 0163, 0217, 0556, 0314, 0247, 0552, 0431, 0216
<b>Evesham</b>	1248, 1259, 1728, 1563, 1606, 1536
<b>Excel</b>	0037, 0556
<b>Excello</b>	1037, 1326
<b>Expert</b>	0206, 0259, 0163
<b>Exquisit</b>	0037, 0556, 0247
<b>Fagor</b>	0037, 0556
<b>FairTec</b>	1191, 1373
<b>Family Life</b>	0037, 0556
<b>Fenner</b>	0374, 0009
<b>Ferguson</b>	0073, 0625, 0287, 0192, 0190, 0335, 0238, 0109, 0560, 0037, 0556, 0035, 0343, 0653, 0104, 0108, 0361, 0471, 0548, 0443, 1037, 1908, 0053, 0195, 1865
<b>Fidelity</b>	0163, 0512, 0363, 0037, 0556, 0371, 0412, 0531, 0216, 0264, 1908, 0361
<b>Filsai</b>	0217
<b>Finlandia</b>	0208, 0346, 0548, 0361, 0163, 0363, 0072, 0287,0343,

<b>Brand</b>	<b>Code</b>
	0045
<b>Finlux</b>	0105, 0104, 0037, 0556, 0714, 0346, 1585, 0217, 0072, 0552, 0163, 0516, 0715, 0070, 0087, 0179, 0102, 0314, 0411, 0631, 0492, 0480, 1556, 0629, 0473, 0418, 0606, 0808, 1248
<b>Fintec</b>	1982
<b>Firstline</b>	0037, 0556, 0374, 0668, 0714, 0163, 0009, 0294, 0321, 0216, 0385, 0247, 0552, 1909, 0314, 0102, 0217, 0411, 0349, 0531, 0238, 0072, 0235, 0208, 0361, 1037, 1191, 0808, 1363, 1163, 1388, 1371, 1308, 0624
<b>Fisher</b>	0104, 0217, 0036, 0208, 0370, 0555, 0045, 0087, 0157, 0361, 0552, 0163, 0303, 0349, 0072
<b>Flint</b>	0037, 0556, 0610, 0072, 0218, 0455, 0264
<b>FNR</b>	0102
<b>Force</b>	1149
<b>Formenti</b>	0163, 0037, 0556, 0486, 0216, 0087, 0320, 0552
<b>Formenti-Phoenix</b>	0216, 0320, 0552
<b>Fortress</b>	0093, 0087
<b>Fraba</b>	0037, 0556, 0370, 0531
<b>Friac</b>	0009, 0037, 0556, 0102, 0421, 0370, 0499, 0655, 0610
<b>Frontech</b>	0247, 0264, 0349, 0363, 0431, 0448, 0217, 0009, 0163
<b>Fuchsware</b>	0780
<b>Fujicom</b>	1709
<b>Fujimaro</b>	0865
<b>Fujitsu</b>	0179, 0683, 0853, 0186, 0809, 0206, 0072, 0102, 0314, 0217, 0163, 0009, 0352, 0037, 0556, 0361, 0259
<b>Fujitsu General</b>	0009, 0186, 0217, 0206, 0163, 0683
<b>Fujitsu Siemens</b>	1666, 1298, 1259, 1248, 1373, 1163, 0808, 0809
<b>Funai</b>	0179, 1394, 1037, 1666, 0668, 0264, 0294, 0303, 0412, 1505, 0714
<b>Futronic</b>	0264, 0698, 1531
<b>Future</b>	0037, 0556

<b>Brand</b>	<b>Code</b>
<b>Gaba</b>	1037, 0037, 0858, 1183
<b>Galaxi</b>	0102, 0037, 0556, 0361, 0163
<b>Galaxis</b>	0370, 0418, 0037, 0102, 0556
<b>Galeria</b>	0009
<b>Gateway</b>	1755
<b>GBC</b>	0552, 0163, 0009, 0374, 0218, 0363
<b>GE</b>	0343, 0735, 0178, 0282, 0451, 0560, 0287, 0109, 0335, 0625, 0093
<b>Geant Casino</b>	0163
<b>GEC</b>	0163, 0361, 0349, 0037, 0516, 0556, 0043, 0072, 0217
<b>Geloso</b>	0247, 0009, 0363, 0552, 0163, 0374
<b>General</b>	0109, 0287, 0471, 0186
<b>General Electric</b>	0343, 0287
<b>General Technic</b>	0009
<b>Genesis</b>	0009, 0037, 0556
<b>Genexxa</b>	0218, 0037, 0556, 0412, 0163, 0009
<b>Gericom</b>	0865, 1606, 1298, 1206, 1217, 0880, 0808
<b>Gevalt</b>	1371, 1191
<b>G-Hanz</b>	1363
<b>Giant</b>	0217, 0009
<b>G-Luxon</b>	0844
<b>Gold</b>	1770, 2023, 2039, 2157
<b>Goldfunk</b>	0668
<b>Goldhand</b>	0216
<b>Goldline</b>	0337
<b>GoldStar</b>	0037, 0009, 0370, 0377, 0217, 0247, 0178, 0216, 0556, 0431, 0163, 0361, 0109, 0363, 0606, 0714, 0715, 0455
<b>Gooding</b>	0487
<b>Goodmans</b>	0634, 0715, 1259, 1037, 1248, 0037, 0499, 0556, 0714, 0668, 1909, 0374, 0036, 0264, 0072, 0516, 0009, 0179, 0487, 0371, 0343, 0235, 0035, 0480, 0560, 0217, 0335, 0218, 0451, 1908, 0630, 0661, 1900, 0880, 1308, 0587,

<b>Brand</b>	<b>Code</b>
	1376, 1985, 1149, 1645, 1682, 0624, 0625, 1720, 1795, 1983
<b>Gorenje</b>	0370, 0421
<b>GP</b>	0753
<b>GPM</b>	0218
<b>Gradiente</b>	0653, 0170, 0037, 0556, 0053
<b>Graetz</b>	0714, 0361, 0371, 0163, 0037, 0339, 0556, 1163
<b>Granada</b>	0037, 0556, 0226, 0356, 0045, 0072, 0108, 0208, 0217, 0036, 0339, 0516, 0473, 0335, 0560, 0163, 0363, 0225, 0343, 0548, 0146
<b>Grandin</b>	0037, 0556, 0009, 0163, 0610, 0714, 0715, 0668, 0374, 0320, 0282, 0218, 0455, 1037, 0865, 1191, 0880, 1374, 1375, 1377, 1380, 1388, 0624
<b>Gronic</b>	0102, 0217, 0163
<b>Grundig</b>	0195, 0508, 1371, 1280, 1191, 1223, 0535, 0191, 1582, 0554, 0070, 1037, 0487, 0037, 0443, 0706, 0237, 0556, 0587, 0009, 0036, 0370, 0740, 1908, 0630, 1308, 0178, 1376, 1800, 0343, 1259, 1645, 2239
<b>Grunkel</b>	1163
<b>Grunpy</b>	0179
<b>GVA</b>	1326, 1363, 2098
<b>H&amp;B</b>	0808
<b>Haaz</b>	0706
<b>Haier</b>	0698, 0264, 0869, 0891, 1203, 1983
<b>Halifax</b>	0264, 0216, 0217
<b>Hammerstein</b>	0264, 0060
<b>Hampton</b>	0216, 0217
<b>Hanimex</b>	0218, 0294, 1908
<b>Hannspree</b>	1776
<b>Hanseatic</b>	0037, 0556, 0499, 0349, 0163, 0361, 0292, 0282, 0394, 0320, 0634, 0428, 0370, 0661, 0009, 0294, 0217, 0373, 0431, 0087, 0377, 0336, 0714, 0808, 0486, 0625
<b>Hantarex</b>	0009, 0037, 0556, 0102, 0516, 0238, 0829, 1338, 0865

<b>Brand</b>	<b>Code</b>
<b>Hantor</b>	0037, 0556
<b>Harley Davidson</b>	0179, 0043
<b>Harsper</b>	0865
<b>Harwa</b>	0773, 1196, 1269
<b>Harwood</b>	0009, 0412, 0037, 0556, 0487
<b>Hauppauge</b>	0037, 0556
<b>Havermy</b>	0093
<b>HB</b>	1324
<b>HCM</b>	0009, 0412, 0037, 0556, 0217, 0218, 0418, 0282, 0264
<b>Hedzon</b>	0556, 0037
<b>Hema</b>	0217, 0009
<b>Hemmermann</b>	0349
<b>Hicon</b>	1467, 1298, 2483
<b>Hifivox</b>	0109, 0196
<b>Higashi</b>	0216
<b>Highlander</b>	1531
<b>Highline</b>	0264, 0037, 0556
<b>Hikona</b>	0218, 1983
<b>Hinari</b>	0208, 0037, 0556, 0009, 0218, 0036, 0179, 0163, 0355, 0443, 0211, 0487, 0235, 0294, 0264, 1908
<b>Hisawa</b>	0282, 0218, 0455, 0610, 1908, 0714
<b>Hisense</b>	1363, 1314, 0208, 1026, 1073, 0698, 0891, 0780, 0009, 1069, 2098, 2341, 2371, 2658, 9088, 5486, 5485, 5417, 5415, 4149, 4156
<b>Hit</b>	0087
<b>Hitachi</b>	1576, 1772, 0481, 0578, 0150, 0225, 0349, 0108, 0744, 1585, 0356, 1037, 1484, 1481, 1225, 0634, 0473, 0036, 0163, 0552, 0343, 0196, 1163, 0576, 1194, 0499, 1149, 0797, 0043, 0194, 0480, 0516, 0072, 0037, 0556, 0109, 0363, 0548, 0178, 1137, 0105, 0492, 0361, 0512, 0629, 1960, 0877, 0217, 0563, 2214
<b>Hitachi Fujian</b>	0828, 0108, 0150, 0037, 0556, 0225, 0576, 0499

<b>Brand</b>	<b>Code</b>
<b>Hitsu</b>	0009, 0610, 0455, 0218
<b>HMV</b>	0087
<b>Hoeher</b>	0714, 1556, 0865, 1163
<b>Home Electronics</b>	0606
<b>Hornyphon</b>	0037, 0556
<b>Hoshai</b>	0218, 0455, 0282
<b>Huanyu</b>	0374, 0216
<b>Hugoson</b>	0890, 1666, 1217
<b>Humax</b>	1535
<b>HYD</b>	1631, 1376
<b>Hygashi</b>	0217, 0216
<b>Hyper</b>	0009, 0216, 0217, 0247
<b>Hypersonic</b>	0361
<b>Hypson</b>	0037, 0556, 0714, 0715, 0264, 0217, 0282, 0455, 0238, 1908, 1037, 0668, 0486
<b>Hyundai</b>	0037, 0803, 0865, 1669, 0556, 0706, 0753, 1326, 1531, 1244, 0698, 1294, 0876, 1281, 1770, 1277, 1468, 0264, 1556, 1006, 0888, 1037, 1631, 1606, 1376, 0778, 1563, 1681, 1720, 1820
<b>Iberia</b>	0037, 0556
<b>ICE</b>	0264, 0037, 0371, 0009, 0556, 0218, 0217, 0216
<b>ICeS</b>	0218, 0216
<b>Ict</b>	0037, 1137, 0556
<b>IDEAL</b>	1556
<b>IlSonic</b>	1376
<b>Iiyama</b>	1217, 0890
<b>Imperial</b>	0037, 0163, 0370, 0074, 0084, 0508, 0556, 0630, 0411, 0361, 0349, 0418, 0247, 0196, 0431, 0531, 0552, 2092
<b>Indesit</b>	0237
<b>Indiana</b>	0037, 0556
<b>InFocus</b>	0752, 1164, 1206, 1430, 1747
<b>Ingelen</b>	0487, 0610, 0714, 0163, 0361

<b>Brand</b>	<b>Code</b>
<b>Ingersoll</b>	0009
<b>Inno Hit</b>	0009, 1037, 0072, 0037, 0556, 0218, 0217, 0516, 0247, 0102, 0282, 1163, 1585
<b>Innovation</b>	0037, 0556
<b>Innowert</b>	0865, 1298
<b>Inotech</b>	0773, 0820
<b>Inspira</b>	1372, 1556
<b>Interactive</b>	0037, 0556, 0087, 0512, 0275, 0327, 0163, 0361, 0370, 0109, 0411
<b>Interbuy</b>	0009, 0037, 0264, 0247, 0512, 0556
<b>Interfunk</b>	0037, 0556, 0087, 0512, 0275, 0327, 0163, 0361, 0370, 0109, 0349, 0247, 0200
<b>Internal</b>	0037, 0556, 0499, 0374, 1909, 0624
<b>International</b>	0216
<b>Intervision</b>	0282, 0217, 0455, 0037, 0371, 0377, 0448, 0486, 0370, 0394, 0487, 0218, 0102, 0431, 0163, 0264, 0247, 0009, 0556
<b>Irradio</b>	0009, 0037, 0556, 0218, 0247, 0371, 0724
<b>Isukai</b>	0218, 0037, 0556, 0282, 0455
<b>ITC</b>	0217, 0552, 0320
<b>ITS</b>	0037, 0371, 0218, 0282, 0264, 0216, 0009, 0556
<b>ITT</b>	0163, 0480, 0349, 0361, 0473, 0548, 0346, 0339, 0208, 0179, 0610
<b>ITT Nokia</b>	0361, 0548, 0163, 0473, 0480, 0349, 0346, 0208, 0179, 0339, 0606, 0610, 0631, 0363, 0431
<b>ITV</b>	0037, 0264, 0556, 0247, 0374
<b>JDV</b>	1982
<b>Jean</b>	0036
<b>JEC</b>	0035
<b>JGC</b>	1709
<b>JMB</b>	0037, 0499, 0634, 0374, 0556, 0443, 1908
<b>JNC</b>	0876, 1536, 0896, 1702



<b>Brand</b>	<b>Code</b>
<b>Jocel</b>	0712
<b>Jouge</b>	1435
<b>Jubilee</b>	0556
<b>JVC</b>	0653, 1153, 0606, 1653, 0371, 0731, 0683, 0036, 0190, 0192, 0218, 0418, 0069, 0093, 0650, 0053, 1818, 2714
<b>Kaisui</b>	0218, 0282, 0037, 0556, 0216, 0455, 0217, 0009
<b>Kambrook</b>	0377, 0431, 0264
<b>Kamp</b>	0216
<b>Kapsch</b>	0163, 0361, 0206, 0259, 0104
<b>Karcher</b>	0037, 0556, 0421, 0370, 0610, 0163, 0282, 0102, 0314, 0264, 0778, 0714, 1556, 0606, 1982, 1308, 1324
<b>Kathrein</b>	0556, 0037, 0880
<b>Kawa</b>	0371
<b>Kawasho</b>	0216
<b>KB Aristocrat</b>	0163
<b>Kendo</b>	0610, 0037, 0556, 0163, 0512, 0370, 0377, 0363, 0428, 0411, 0102, 0235, 0247, 0362, 0551, 1585, 1037, 0486, 1149, 1163, 1137
<b>Kennedy</b>	0163, 0206, 0552, 0435
<b>Kennex</b>	1037
<b>Kenwood</b>	0105
<b>Keydo</b>	1702
<b>Keymat</b>	1771, 1326, 1570
<b>KIC</b>	0217
<b>Kingsbrook</b>	1037
<b>Kingsley</b>	0216
<b>Kiota</b>	0371, 0455
<b>Kiton</b>	0556, 0037, 0668
<b>Kneissel</b>	0037, 0385, 0370, 0610, 0411, 0374, 0499, 0556, 0435, 0259, 0292, 0238, 0362, 1908
<b>Kobra</b>	1467, 1298
<b>Koenig</b>	0037

<b>Brand</b>	<b>Code</b>
<b>Kogan</b>	5963, 5980
<b>Kolster</b>	0037, 0556, 0102, 0349, 0247, 0218
<b>Konichi</b>	0009
<b>Konka</b>	0037, 0556, 0371, 0714, 0418, 0218, 0641, 0587, 1190, 0606, 0726, 0754, 0779, 0816, 1404, 2267
<b>Kontakt</b>	0487
<b>Korpel</b>	0037, 0556
<b>Korting</b>	0087, 0421, 0370, 0320
<b>Kosmos</b>	0037, 0556
<b>Kotron</b>	0412, 0264, 1900
<b>Koyoda</b>	0009
<b>Kraking</b>	0238
<b>Kross</b>	1536
<b>KTV</b>	0217
<b>Kuba</b>	0349, 0163
<b>Kuba Electronic</b>	0303, 0349, 0163
<b>Kuro</b>	0373
<b>Kyoshu</b>	0412, 0418, 0264
<b>Kyoto</b>	0385, 0163, 0216, 0217
<b>L&amp;S Electronic</b>	0865, 0714
<b>LaSAT</b>	0486, 0370
<b>Lavis</b>	1037, 0037, 0163, 1363
<b>Leader</b>	0009
<b>Lecson</b>	0037, 0556
<b>Legend</b>	0009, 0337
<b>Lemair</b>	0411
<b>Lenco</b>	0009, 0721, 0037, 0163, 0374, 0556, 0104, 0587, 1037, 1631, 1983
<b>Lenoir</b>	0009, 1189
<b>Lenoxx</b>	1189
<b>Lentec</b>	1531, 1696
<b>Lesa</b>	0247

<b>Brand</b>	<b>Code</b>
<b>Level</b>	2023
<b>Levis Austria</b>	0037, 0556
<b>Lexsor</b>	1196, 1507
<b>Leyco</b>	0264, 0072, 0037, 0556 0294
<b>LG</b>	1423, 0178, 1232, 1319, 0037, 0876, 0370, 0377, 0009, 0556, 0714, 0217, 0216, 0431, 0163, 0606, 0109, 0698, 0715, 0823, 0829, 1637, 1146, 1148, 1191, 0247, 0361, 1149, 1681, 2182, 9155, 6208, 4084, 4119, 4149, 4019, 4003, 4051, 4088, 4131, 4149, 4171, 4009, 4261, 4093
<b>Liesenkötter</b>	0037, 0327, 0328, 0556
<b>Lifetec</b>	0037, 0668, 1037, 1137, 0374, 0009, 0512, 0655, 0556, 0714, 0218, 0264, 0683, 1248, 1259
<b>Lloyd's</b>	0009
<b>LME</b>	0431
<b>Local India TV</b>	0208
<b>Lodos</b>	1037, 1149
<b>Loewe</b>	0512, 0633, 0790, 0037, 0556, 0655, 0370, 0087, 0292, 0551, 0362, 0516, 0791
<b>Logik</b>	0011, 0698, 0060, 0773, 0009, 0264, 0371, 0880, 1217, 1037, 1645, 1865, 2241
<b>Logix</b>	0668
<b>Luker</b>	1982, 1985
<b>Luma</b>	0037, 0363, 0206, 0163, 0411, 0556, 0374, 0009, 0362, 0259
<b>Lumatron</b>	0363, 0206, 0037, 0556, 0362, 0163, 0259, 0361, 0217, 0264, 0073, 0668, 2023
<b>Lumenio</b>	0037
<b>Lux May</b>	0037, 0009, 0556, 0581
<b>Luxor</b>	0194, 1163, 0237, 0363, 0480, 0492, 0349, 0361, 0208, 0356, 0548, 0163, 0346, 0473, 0179, 1037, 0217, 0631
<b>LXI</b>	0718
<b>Madison</b>	0037, 0556

<b>Brand</b>	<b>Code</b>
<b>Magnadyne</b>	0087, 0247, 0516, 0102, 0552, 0163
<b>Magnafon</b>	0516, 0102, 0314, 0216, 0073
<b>Magnavox</b>	0037, 0556, 0036, 0179, 0780, 1139, 1203, 0753, 0729, 1069
<b>Magnum</b>	0714, 0037, 0556, 0715, 1289, 2023
<b>Mandor</b>	0264
<b>Manesth</b>	0037, 0556, 0235, 0217, 0264, 0320, 0035, 0294, 0163, 0363
<b>Manhattan</b>	0037, 0876, 0556, 0668, 1037, 0163, 0778
<b>Maqma</b>	1467, 1298, 1709, 1606, 1702
<b>Marantz</b>	0037, 0556, 0412
<b>Marelli</b>	0087
<b>Mark</b>	0037, 0556, 0217, 0216, 0374, 0009, 0714, 0715
<b>Marks and Spencer</b>	1770
<b>Mascom</b>	1556, 0556, 0037
<b>Master's</b>	0499, 0037
<b>Masuda</b>	0371, 0218, 0009, 0264, 0037, 0217, 0556
<b>Materin</b>	0858
<b>Matrix</b>	1277
<b>Matsui</b>	0037, 1163, 0556, 0487, 0443, 0009, 0235, 0177, 0011, 0355, 0072, 0036, 0211, 0217, 0354, 0294, 0371, 0433, 0363, 0455, 0163, 0349, 0516, 0035, 0431, 0208, 0045, 0195, 0191, 0335, 0714, 1908, 1037, 0629, 1666, 0880, 0744, 2155
<b>Matsushita</b>	0650, 0250
<b>Matsuiama</b>	0587
<b>Maxam</b>	0264
<b>Maxdorf</b>	0773, 0698, 0706, 0264
<b>Maxent</b>	1755
<b>Maxess</b>	2493
<b>Maxim</b>	1166, 1982, 1556
<b>MAXIVIDEO</b>	0314

<b>Brand</b>	<b>Code</b>
<b>MCE</b>	0009
<b>McMichael</b>	0043
<b>McTronics</b>	1662
<b>Medialine</b>	1206
<b>Mediator</b>	0037, 0556
<b>MediaVision</b>	1391
<b>Medion</b>	0714, 0808, 0037, 0668, 0556, 0512, 1137, 0698, 1908, 1037, 1900, 1248, 1259, 0245, 0631, 1221, 0880, 1289, 1166, 1556, 1149, 1741
<b>MegaDrive</b>	1259
<b>Megas</b>	0610
<b>Megatron</b>	0178
<b>MEI</b>	1037, 0037, 0556
<b>Melectronic</b>	0346, 0037, 0512, 0109, 0343, 0247, 0105, 0104, 0374, 0009, 0217, 0480, 0492, 0216, 0411, 0349, 0163, 0287, 0556, 0634, 0361, 0191, 0195, 0661, 0714, 1652
<b>Memorex</b>	0009, 0150, 0178, 0650, 0060, 0250
<b>Memory</b>	1983
<b>Memphis</b>	0337, 0072, 0009, 0385
<b>Mercury</b>	0037, 0009, 0698, 0264, 0556, 0706, 0060
<b>Merritt</b>	0548, 0361, 0163
<b>Metronic</b>	0625
<b>Metz</b>	0746, 0388, 0447, 0367, 0087, 1163, 0195, 0535, 0554, 0191, 0037, 0556, 0587, 0275, 0668, 1037
<b>MGA</b>	0150, 0178, 0037, 0556, 0218, 0104, 0374
<b>Micromaxx</b>	0037, 0556, 0668, 1037, 0630, 0808, 0714, 1372, 1324
<b>Microstar</b>	0808
<b>Microtek</b>	0820, 0698, 0706, 0264
<b>Mikomi</b>	1149, 1163, 0744
<b>Minato</b>	0037, 0556
<b>Minerva</b>	1248, 0487, 0535, 0195, 0070, 0191, 0554, 0237, 0516, 0108, 0150

<b>Brand</b>	<b>Code</b>
<b>Minoka</b>	0412, 0037, 0556
<b>Mirai</b>	1666, 1651
<b>Mirror</b>	1900
<b>Mitsai</b>	1556
<b>Mitsubishi</b>	0108, 0150, 0093, 0512, 0037, 0178, 0354, 0087, 0036, 0237, 0358, 0535, 0556, 0691, 0208, 1037, 1522
<b>Mitsuri General</b>	0163
<b>Mivar</b>	0292, 0370, 0216, 0609, 0516, 0217
<b>Mogen</b>	1683, 1820
<b>Monaco</b>	0009
<b>Moree</b>	0037
<b>Morgan's</b>	0037, 0556
<b>Motorola</b>	0093
<b>MTC</b>	0060, 0370, 0349, 0512, 0163, 0216, 0361, 0448
<b>MTlogic</b>	0714, 1308
<b>Multimat</b>	0314
<b>Multistandard</b>	0102, 0314
<b>Multitec</b>	0037, 0556, 0486, 0668, 1037, 1556, 1982
<b>Multitech</b>	0349, 0009, 0363, 0486, 0037, 0370, 0556, 0217, 0216, 0247, 0102, 0314, 0264, 0552
<b>Murphy</b>	0104, 0216, 0072, 0163
<b>Musikland</b>	0037, 0218, 0247, 0556
<b>Mx Onda</b>	1645, 1820, 1983
<b>MyCom</b>	1376, 0178
<b>Myrica</b>	1666
<b>Myryad</b>	0556, 0037
<b>NAD</b>	0166, 0178, 0865, 0361, 0163, 0037
<b>Naiko</b>	1982, 0037, 0606, 0556, 0753
<b>Nakimura</b>	0374, 0037, 0556
<b>Naonis</b>	0363, 0163
<b>Narita</b>	1982
<b>NAT</b>	0226, 0340, 0214

<b>Brand</b>	<b>Code</b>
<b>National</b>	0214, 0226, 0237, 0340, 6001, 6003, 6017, 6029, 4131, 6055, 6104, 6216, 6220
<b>NEC</b>	0170, 0587, 1170, 1367, 0036, 0320, 1519, 0876, 1775, 0455, 0009, 0374, 0217, 0037, 0556, 0011, 0704, 0245, 0237, 1704, 0499, 0653, 0771, 1370, 1135, 0661, 0882, 0053, 1784, 2461
<b>Neckermann</b>	0037, 0191, 0370, 1505, 1010, 0200, 0554, 0556, 0552, 0163, 0327, 0418, 0349, 0087, 0247, 0217, 0411, 0320, 0363, 0512
<b>NEI</b>	0037, 0556, 0337, 0431, 0371, 0163, 1037
<b>NEO</b>	1372, 0754, 1324
<b>Neon</b>	1732
<b>Neovia</b>	1206, 0865, 1373, 1371, 0876, 1376, 1390, 1384, 1338, 1191
<b>Nesco</b>	0247, 0179, 1908
<b>Nesx</b>	1732
<b>Netsat</b>	0037, 0556
<b>Network</b>	0337
<b>Neufunk</b>	0037, 0009, 0556, 0610, 0218, 0282, 0714
<b>New Tech</b>	0037, 0009, 0556, 0343, 0217, 0448
<b>New World</b>	0218
<b>Nicamagic</b>	0216
<b>Nikkai</b>	0072, 0218, 0037, 0556, 0217, 0264, 0035, 0337, 0216, 0009, 0036
<b>Nikkei</b>	0714, 1594
<b>Nikko</b>	0178
<b>Nintaus</b>	0891
<b>Nishi</b>	0482
<b>Nobliko</b>	0102, 0070, 0216, 0314
<b>Nogamatic</b>	0109, 0196
<b>Nokia</b>	0361, 0163, 0480, 0349, 0548, 0492, 0473, 0339, 0208, 0374, 0631, 0606, 0346, 0179, 0320, 0610, 0109, 0551
<b>Norcent</b>	1588

<b>Brand</b>	<b>Code</b>
<b>Nordic</b>	0217
<b>Nordmende</b>	0109, 0891, 0287, 0196, 0560, 0343, 0195, 0037,0556, 0335, 0163, 0471, 1259, 1248, 0714, 1289, 0490, 0443, 1585
<b>Norfolk</b>	0163
<b>Normerel</b>	0037, 0556
<b>Nortek</b>	0668
<b>Northern Star</b>	1206
<b>Novak</b>	0037, 0556
<b>Novatronic</b>	0037, 0105, 0374, 0531, 0556
<b>Novex</b>	1523
<b>Novita</b>	1384, 1585
<b>Nurnberg</b>	0163, 0361
<b>Nu-Tec</b>	0455, 0698, 0820, 0037, 0556, 0706, 0264, 2481
<b>O.K.Line</b>	1037, 1372, 1556, 1324
<b>Oceanic</b>	0163, 0361, 0294, 0208, 0473, 0548, 0480, 0563
<b>Odeon</b>	0264
<b>Odys</b>	1795
<b>Okano</b>	0370, 0037, 0556, 0264, 0072, 0488, 0009, 2982
<b>OKI</b>	1037
<b>Olidata</b>	1376
<b>Olivia</b>	1588
<b>Omega</b>	0264
<b>Omni</b>	0780, 0891, 0698, 1570, 0872
<b>Onida</b>	0053
<b>Onimax</b>	0714
<b>Onix</b>	0698
<b>Onn</b>	1149, 1709, 0556, 1770, 2112
<b>Onwa</b>	0371, 0602, 0218, 0433, 0581, 0102, 0431
<b>Onyx</b>	1709, 1770
<b>Opera</b>	0037, 0556, 0714, 1770
<b>Optimus</b>	0650, 0166, 0250



<b>Brand</b>	<b>Code</b>
<b>Optoma</b>	1622
<b>Optonica</b>	0093
<b>Orava</b>	0552, 1037
<b>Orbit</b>	0037, 0556
<b>Orion</b>	0179, 0037, 0443, 0355, 0714, 0235, 0556, 0655, 0294, 0177, 0320, 0011, 0009, 0321, 0211, 0314, 0102, 0264, 0412, 0516, 0531, 1908, 0880, 1196
<b>Orline</b>	0037, 0218, 0556
<b>Ormond</b>	0385, 0668, 1037, 0037, 0556
<b>Orsowe</b>	0516
<b>Osaki</b>	0072, 0218, 0217, 0264, 0037, 0412, 0374, 0211, 0355, 0556
<b>Osio</b>	0037, 0556
<b>Oso</b>	0218
<b>Osume</b>	0157, 0072, 0036, 0218, 0037, 0556
<b>OTIC</b>	1203, 1006, 1645, 1326, 1983
<b>Otto Versand</b>	1505, 1010, 0036, 0093, 0512, 0037, 0556, 0535, 0195, 0349, 0554, 0191, 0361, 0235, 0109, 0294, 0226, 0247, 0303, 0320, 0217, 0009, 0282, 0336, 0343, 0373, 0428, 0431, 0516, 0552
<b>Pace</b>	1908
<b>Pacific</b>	0037, 0556, 1137, 0714, 1037, 0443, 1324
<b>Packard Bell</b>	1314
<b>Pael</b>	0216
<b>Palladium</b>	0370, 0037, 0655, 0411, 0630, 0714, 1137, 0191, 1505, 1010, 0200, 0418, 0554, 0556, 0349, 0247, 0327, 0087, 0552, 0163, 0217, 0363, 1982
<b>Palsonic</b>	0264, 0412, 0037, 0217, 0377, 0218, 0698, 0556, 0448, 0488, 0773, 0418, 0778, 1489, 1196, 1507, 1269, 1705, 1326, 0779, 1183, 1795, 1813, 2461, 2481, 6217, 9055, 9066
<b>Panache</b>	1585
<b>Panama</b>	0009, 0217, 0264, 0216, 0037, 0556, 0247

<b>Brand</b>	<b>Code</b>
<b>Panasonic</b>	0650, 1636, 1650, 0108, 0226, 1310, 1210, 0340, 0214, 0361, 0853, 0237, 0367, 0516, 0037, 0556, 0163, 0548, 0771, 0250, 9066, 6004, 6208, 6229, 4002, 4003, 4009, 9002, 9003, 9025, 9031, 9094, 9096, 9123, 4065, 4064, 4065, 4101, 4141, 4021, 4151, 4019, 4152
<b>Panavision</b>	0037, 0411, 0556
<b>Papouw</b>	0037, 0556
<b>Pathe Cinema</b>	0163, 0238, 0216, 0320, 0292, 0349, 0431, 0552, 0370
<b>Pathe Marconi</b>	0109, 0196, 0237
<b>Pausa</b>	0009
<b>Perdio</b>	0072, 0320, 0163, 0037, 0216, 0282, 0556
<b>Perfekt</b>	0037, 0556
<b>Petters</b>	0037
<b>Philco</b>	0087, 0084, 0074, 0418, 0247, 0552, 0163, 0370, 0037, 0556, 0186
<b>Philex</b>	0551, 0163
<b>Philharmonic</b>	0217
<b>Philips</b>	0556, 0037, 0238, 0721, 1506, 0639, 0605, 1455, 0772, 1304, 1454, 0554, 0043, 0087, 0423, 0343, 0374, 0009, 0200, 0361, 1867, 1887
<b>Phocus</b>	1289, 1308, 0714, 1652, 1800
<b>Phoenix</b>	0037, 0556, 0370, 0486, 0163, 0087, 0072, 0216, 0320, 0385, 0552
<b>Phonola</b>	0037, 0556, 0087, 0216
<b>Phonotrend</b>	1594, 2155
<b>Pilot</b>	0556, 0037, 0712, 0706
<b>Pioneer</b>	1260, 0760, 0011, 0170, 0166, 0679, 0037, 0556, 0423, 0428, 0370, 0343, 0361, 0109, 0163, 0287, 0486, 0512, 1457
<b>Pionier</b>	0370, 0486
<b>Pixxel</b>	1529
<b>Plantron</b>	0037, 0556, 0264, 0009

<b>Brand</b>	<b>Code</b>
<b>Playsonic</b>	0714, 0037, 0217, 0339, 0715, 1800, 1652
<b>Plus</b>	0771, 1552
<b>Plustron</b>	1770
<b>Polar</b>	0037
<b>Polaroid</b>	1523, 1645, 1741, 1720
<b>Policom</b>	0102, 0109, 0196, 0206, 0237, 0238, 0275, 0361, 0163, 0070, 0074, 0084, 0087, 0535
<b>Polytron</b>	0282
<b>Poppy</b>	0009
<b>Portland</b>	0374, 1909, 0624
<b>Powerpoint</b>	0487, 0037, 0556, 0698, 1770, 1802, 1820
<b>Prandoni-Prince</b>	0247, 0516, 0361, 0363
<b>Precision</b>	0217
<b>Premier</b>	0009, 0264, 0891
<b>Prima</b>	0009, 0264, 0303, 0412, 1269, 1507, 1196, 0753
<b>PrimeView</b>	1606
<b>Princess</b>	0698, 1326, 0773
<b>Prinston</b>	1037
<b>Prinz</b>	0072, 0349, 0361, 0194
<b>Profex</b>	0009, 0163, 0431, 0361, 0363
<b>Profi</b>	0009
<b>Profilo</b>	1556
<b>Profitronic</b>	0037, 0556, 0314, 0102
<b>Proline</b>	0037, 0556, 0625, 0634, 0630, 0411, 0321, 0072, 1376, 1037
<b>Prosonic</b>	0037, 0556, 1739, 0370, 0374, 0371, 0880, 1376, 0668, 0714, 0451, 0216, 0214, 1770, 1314, 0217, 1709, 1732, 0606, 1507, 1324, 1784, 1820, 1865
<b>Protech</b>	0037, 0556, 0217, 0009, 0247, 0349, 0102, 0264, 0431, 0418, 0337, 0668, 0282, 0552, 0163, 0486, 1037
<b>Proton</b>	0178
<b>Proview</b>	1645

<b>Brand</b>	<b>Code</b>
<b>Provision</b>	0499, 0037, 0556, 1037, 0714, 1531, 1324
<b>Proxima</b>	0735, 1747
<b>PVision</b>	1191, 0876, 1218
<b>Pye</b>	0037, 0556, 0087, 0554, 0374, 0349, 0412, 2456
<b>Pymi</b>	0009
<b>QONIX</b>	1594
<b>Quadral</b>	0218
<b>Quadro</b>	0753, 1326, 0556, 0037, 1149, 1163, 0796, 1531
<b>Quasar</b>	0247, 0650, 0865, 0009, 0250
<b>Quelle</b>	0037, 1505, 1010, 0011, 0109, 0512, 0535, 0349, 0554, 0191, 0361, 0036, 0217, 0247, 0074, 0327, 0084, 0328, 0070, 0104, 0105, 0668, 0556, 0157, 0195, 0200, 0264, 1037, 0294, 0346, 0421, 0552, 0009
<b>Questa</b>	0036
<b>Radialva</b>	0109, 0218, 0431, 0163, 0037, 0556, 0287, 0337
<b>Radiola</b>	0037, 0556, 0217
<b>Radiomarelli</b>	0087, 0516, 0247, 0037, 0556
<b>RadioShack</b>	0037, 0556, 0178
<b>Radiotone</b>	0009, 0037, 0556, 0428, 0370, 0418, 0412, 0668, 0264, 1037
<b>Rank</b>	0070
<b>Rank Arena</b>	0036, 0157, 0602, 0753, 0796
<b>RBM</b>	0070
<b>RCA</b>	0625, 0093, 0560, 0335, 0343, 0753, 0796
<b>Realistic</b>	0178
<b>Recor</b>	0037, 0418, 0556
<b>Rectiligne</b>	0037, 0556
<b>Red Star</b>	1556
<b>Rediffusion</b>	0361, 0548, 0036, 0346
<b>Redstar</b>	0037, 0556
<b>Reflex</b>	0037, 0556, 1037, 0668
<b>Relisys</b>	0865, 0876, 0877, 1206, 1207, 1213, 1209, 1298, 1376, 1585,

<b>Brand</b>	<b>Code</b>
	1741, 1740, 1645
<b>Remotec</b>	0037, 0093, 0250
<b>Reoc</b>	0714, 0634, 1909
<b>Revox</b>	0037, 0808, 0556, 0370
<b>Rex</b>	0206, 0363, 0411, 0247, 0163, 0259, 0264, 0551
<b>RFT</b>	0087, 0292, 0370, 0428, 0072, 0264, 0037, 0556, 0486
<b>Rhapsody</b>	0216
<b>Ricoh</b>	0037, 0556
<b>Rinex</b>	0773, 0418, 0698, 0264, 0706
<b>R-Line</b>	0037, 0556, 0163
<b>Roadstar</b>	1037, 0715, 0009, 0418, 0037, 0556, 0714, 0668, 0218, 0264, 0282, 1189, 1900, 1326
<b>Robotron</b>	0087
<b>Rodex</b>	0037, 0556
<b>Rolsen</b>	1371, 1191, 0037, 0556
<b>Rolson</b>	0819, 2098
<b>Rover</b>	0036, 0877
<b>Rowa</b>	0264, 0698, 0217, 0712, 1441, 0009, 0706, 0216, 0587, 0037, 1006, 0556
<b>Roxy</b>	0448
<b>Royal</b>	0418, 0606
<b>Royal Lux</b>	0421, 0370, 0412, 0335
<b>Rukopir</b>	0556, 0037
<b>Saba</b>	0625, 1166, 0109, 0560, 0343, 0287, 0087, 0163, 0516, 0361, 0498, 0196, 0335, 0548, 0471, 0650, 0714, 1588, 0250
<b>Saccs</b>	0238
<b>Sagem</b>	0610, 0455, 0282, 0830, 1313, 0618
<b>Saisho</b>	0235, 0634, 0374, 0516, 0177, 0009, 0011, 0217, 0431, 0163, 0264, 0211, 0354
<b>Saivod</b>	0037, 1982, 1163, 0556, 0668, 1556, 0712, 1037

<b>Brand</b>	<b>Code</b>
<b>Sakai</b>	0163
<b>Sakura</b>	1203, 1326
<b>Sakyno</b>	0455
<b>Salora</b>	0194, 0349, 0163, 0356, 0361, 0516, 0363, 0373, 0548, 0339, 0208, 0552, 0480, 0631, 1166, 1556, 0778, 1371, 2239
<b>Salsa</b>	0335
<b>Sambers</b>	0516, 0102, 0314
<b>Sampo</b>	1755
<b>Samsung</b>	0178, 0618, 0587, 0093, 1619, 0556, 1249, 1630, 0644, 1235, 0009, 0037, 0217, 0448, 0482, 0370, 0488, 0060, 0814, 0072, 0264, 0682, 0216, 0163, 2051, 9023, 9037, 9043, 9055, 4021, 9068, 9141, 6004, 4009, 6108, 6110, 6115, 6143, 8039, 6192, 6200, 6208, 6229, 6242, 6242, 4090, 4105, 4104, 4051, 4104, 4083, 4002, 4160, 4003, 4004, 4312, 4030, 4093, 8035, 8037, 8039, 8041, 8045, 8046
<b>Sandra</b>	0216, 0217
<b>Sanela</b>	0238
<b>Sansei</b>	0451
<b>Sansui</b>	0037, 0556, 0706, 0655, 0371, 0602, 0421, 0455, 0888, 0753, 1371, 1191, 1531, 1697, 1553, 1594, 0698, 0264, 0714, 1384, 1248, 1556, 0729, 0806, 1537, 1682, 1703, 2239, 2804
<b>Santon</b>	0009
<b>Sanyo</b>	0208, 1208, 0157, 0292, 0721, 0036, 0011, 0370, 1507, 0339, 0072, 0216, 0217, 0104, 0045, 0555, 0009, 0163, 0373, 0037, 0108, 0556, 0486, 0735, 0893, 0170, 0704, 1647, 1648, 1649, 1654, 1037, 1149, 1163, 1585, 0146, 2461, 6004, 6012, 6034, 6080, 6104, 6113, 6115, 6122, 6134, 6208, 9055, 9056, 9057, 9096, 9102, 9104, 9110, 9124, 4004, 4006, 4031, 4003, 4027, 4018, 4083, 4127, 4160, 4131, 4029, 4030, 4040, 4043

<b>Brand</b>	<b>Code</b>
<b>Save</b>	0037, 0556
<b>Saville</b>	1908
<b>SBR</b>	0037, 0556, 0043
<b>Schaub Lorenz</b>	0548, 0714, 0361, 0349, 0606, 0486, 0374, 1191, 1194, 1363, 1371, 1324
<b>Schneider</b>	1137, 0037, 0556, 0303, 0349, 0394, 0352, 0336, 0259, 0343, 0217, 0247, 0371, 0361, 0218, 0668, 1037, 0163, 0714, 1909, 1908, 1368, 1982, 0070, 1372
<b>Scotland</b>	0163
<b>Scott</b>	1189, 0178, 0179, 1983
<b>Sears</b>	0178, 0179, 0146
<b>Seaway</b>	0634
<b>Seelver</b>	0556, 1037, 0037
<b>SEG</b>	1037, 0037, 1163, 0556, 0668, 0217, 0487, 0009, 0349, 0163, 0264, 0634, 0036, 0102, 0247, 0362, 0314, 0216, 0552, 0218, 1909, 1149, 0624
<b>SEI</b>	0087, 0102, 1505, 1010, 0552, 0163, 0516, 0349, 0294, 0314, 0206, 0037, 0556, 0177
<b>Sei-Sinudyne</b>	0102, 0206, 0294, 0314, 0516, 1505, 1010, 0552, 0037, 0556, 0087
<b>Seitech</b>	1217, 1372
<b>Seleco</b>	0206, 0363, 0259, 0362, 0163, 0411, 0673, 0551, 0371, 0036, 0264, 0346, 0435, 0630
<b>Sencora</b>	0009
<b>Sentra</b>	0035, 0218, 0009, 0349
<b>Serie Dorada</b>	0178
<b>Serino</b>	0610, 0455, 0216, 0093
<b>SeViC</b>	1705
<b>Sharp</b>	0093, 1193, 1659, 1586, 1393, 0157, 0036, 0491, 0294, 0653, 0186, 0516, 0200, 0053, 2214
<b>Sherwood</b>	1399, 1784
<b>Shinelco</b>	2104

<b>Brand</b>	<b>Code</b>
<b>Shintoshi</b>	0037, 0556
<b>Shivaki</b>	0037, 0556, 0443, 0451, 0374, 0178
<b>Shorai</b>	0294, 0179
<b>Show</b>	0418, 0009, 0072, 0698, 0264, 0706, 0037
<b>Siarem</b>	0552, 0163, 0087, 0102, 0516
<b>Siemens</b>	0191, 0535, 0554, 0200, 0195, 0327, 0328, 0157, 0037, 0556, 0361, 0146
<b>Siera</b>	0037, 0556, 0587
<b>Siesta</b>	0370
<b>Silva</b>	0037, 0556, 0216, 0361
<b>Silva Schneider</b>	0753, 1556, 0037
<b>Silvano</b>	0587
<b>Silver</b>	0036, 0037, 0455, 0556, 0361, 0179, 0715, 0163
<b>SilverCrest</b>	1037, 0037, 0556
<b>SIM2 Multimedia</b>	0673
<b>Simpson</b>	0186
<b>Simz</b>	1820
<b>Singer</b>	0009, 0087, 0698, 1556, 0037, 0556, 0102, 0247, 0435, 0335, 0163, 0371, 0806, 0891, 1537
<b>Sinotec</b>	0773, 0418, 0606, 0698
<b>Sinudyne</b>	1372, 0177, 0087, 0235, 0102, 0294, 0552, 0163, 0361, 0516, 0349, 1505, 1010, 0314, 0206, 0037, 0556, 1908, 0606
<b>Skantic</b>	0356
<b>Sky</b>	0282, 0880, 0037, 0178, 0556, 1606, 1376, 1775, 1745, 1778, 0661, 0865
<b>SKY Brazil</b>	0880
<b>Skymaster</b>	0105
<b>Skysonic</b>	0753, 0796
<b>Sliding</b>	0865, 0880, 1372, 1374, 1375, 1377, 1383, 1388, 1368, 1324
<b>SLX</b>	0668
<b>Smaragd</b>	0487



<b>Brand</b>	<b>Code</b>
<b>SmartVision</b>	1183
<b>S-Media</b>	1217
<b>Soemtron</b>	0865, 1298
<b>Sogera</b>	0320
<b>Sogo</b>	1376, 0606
<b>Solavox</b>	0361, 0072, 0163, 0548, 0037, 0556
<b>Sonawa</b>	0218
<b>Sonber</b>	0102
<b>Sonic</b>	0753
<b>Soniko</b>	0037, 0556
<b>Soniq</b>	1467, 1298, 1702, 2474, 2493, 2829
<b>Sonitron</b>	0208, 0370, 0339, 0217
<b>Sonix</b>	1732
<b>Sonneclair</b>	0037, 0556
<b>Sonoko</b>	0037, 0556, 0009, 0264, 0282, 0217
<b>Sonolor</b>	0208, 0163, 1505, 1010, 0548, 0361, 0282
<b>Sontec</b>	0037, 0556, 0370, 0294, 0009
<b>Sontech</b>	1983
<b>Sony</b>	1505, 1651, 1625, 1010, 1751, 0011, 0353, 0036, 0810, 1925, 0102, 0314, 0742, 0037, 0556, 0157, 0093, 0170, 0074, 1685, 1825, 6249, 9071, 6034, 6082, 6122, 6128, 4076, 4076, 4027, 4127, 4009, 4004, 4182, 4029, 4030
<b>Sound &amp; Vision</b>	0102, 0218, 0374, 0037, 0556
<b>Soundesign</b>	0178, 0179, 0186
<b>Soundwave</b>	0037, 0556, 0320, 0418, 0715
<b>Soyea</b>	0773
<b>Soyo</b>	1709
<b>Spectra</b>	0009
<b>Ssangyong</b>	0009
<b>Staksonic</b>	0009
<b>Standard</b>	0037, 0556, 1037, 0218, 0009, 0217, 0320, 0374, 1709
<b>Starion</b>	1037

<b>Brand</b>	<b>Code</b>
<b>Starlite</b>	0009, 0552, 0163, 0037, 0556, 0264, 0412
<b>Stenway</b>	0282, 0218
<b>Stern</b>	0206, 0259, 0163, 0363, 0264, 0411, 0551, 0435
<b>Stevison</b>	1982, 1556
<b>Strato</b>	0037, 0556, 0264, 0009
<b>Strong</b>	1163, 1149, 1037, 0037, 0556
<b>Stylandia</b>	0217
<b>Sungoo</b>	1248
<b>Sunic Line</b>	0037, 0556
<b>Sunkai</b>	0294, 0355, 0321, 0455, 0218, 0235, 0610, 0037, 0556, 0487, 0531, 0865
<b>Sunny</b>	0037
<b>Sunstar</b>	0371, 0037, 0556, 0009, 0264
<b>Sunwatt</b>	0455
<b>Sunwood</b>	0037, 0556, 0009
<b>Super</b>	1189
<b>Superla</b>	0516, 0216, 0217
<b>Supersonic</b>	0009, 0208, 0556, 0698, 0264, 0455, 0037
<b>SuperTech</b>	0009, 0037, 0556, 0216, 0218
<b>Superton</b>	0431
<b>Supervision</b>	0698, 0264
<b>Supra</b>	0178, 0374, 0009, 0037
<b>Susumu</b>	0335, 0218, 0287
<b>Sutron</b>	0009
<b>SVA</b>	0698, 0264, 0455, 0208, 0706, 0587, 0865, 0872
<b>Svasa</b>	0698, 0208, 0706, 0264, 0455
<b>Swedx</b>	1606
<b>Swissline</b>	0247
<b>Swisstec</b>	1606, 0880, 1376, 0865, 1775, 1776, 1745, 1778, 2104
<b>Sydney</b>	0216, 0217
<b>Sylvania</b>	0186
<b>Sysline</b>	0037, 0556

<b>Brand</b>	<b>Code</b>
<b>Sytong</b>	0216
<b>T+A</b>	0447
<b>Tandberg</b>	0367, 0411, 0109, 0337, 0196, 0362, 0361, 0163
<b>Tandy</b>	0218, 0072, 0217, 0247, 0093, 0163
<b>Targa</b>	1371, 1191, 0618
<b>Tashiko</b>	0036, 0043, 0217, 0170, 0216, 0163, 0363, 0146
<b>Tatung</b>	0037, 1553, 1248, 1556, 1056, 0556, 0072, 0516, 0217, 0011, 0629, 1908, 1371, 1259, 1191, 1563, 1372, 1324, 1720
<b>TCL</b>	1699, 0625, 0892, 2958, 6251, 6256, 6257, 6258, 6259, 6260, 6262, 6264, 6265, 6268, 6271, 6279, 6284, 8049
<b>TCM</b>	0714, 1289, 0808, 1308
<b>Teac</b>	0698, 1645, 0037, 1037, 0556, 0512, 0712, 0668, 0455, 0217, 0706, 0264, 1909, 0178, 0009, 0412, 0349, 0721, 0282, 0336, 0418, 0431, 0755, 0170, 0714, 1149, 1755, 1203, 1006, 1621, 1529, 1363, 0587, 1770, 1709, 0624, 0892, 1637, 1701, 1794, 1795, 1820, 1983, 1985, 2241, 2607, 2714, 2761, 3084, 3163, 6004, 6041, 6197, 6217, 9055
<b>Tec</b>	0217, 0009, 0247, 0471, 0335, 0337, 0259, 0552, 0037, 0556, 0361, 0163
<b>Tech Line</b>	0037, 0556, 0668, 1163
<b>Tech Lux</b>	1189, 1706
<b>Techica</b>	0218
<b>Technema</b>	0320
<b>Technica</b>	1982
<b>Technics</b>	0650, 0250
<b>Technika</b>	1585, 1865, 1983
<b>TechniSat</b>	0655, 0037, 0556, 0163, 2155
<b>Technisson</b>	0714, 1289, 1652
<b>Techno</b>	1585, 1037, 2267
<b>Technol Ace</b>	0179, 0698, 0264, 0634, 0374, 0216
<b>Technosonic</b>	0037, 0556, 0499, 0880, 1326, 1982, 0625, 1324
<b>Technotrend</b>	1531, 1702, 2155

<b>Brand</b>	<b>Code</b>
<b>Techvision</b>	1709, 1531, 1771
<b>Techwood</b>	1163, 1037
<b>Teckton</b>	1376
<b>Tecnimagen</b>	0556
<b>Teco</b>	1040, 1313, 1523
<b>Tedelex</b>	0217, 0698, 0706, 0606, 0418, 0037, 0009, 0208, 0891, 0587, 0556, 0431, 1709, 1531, 0264, 1699, 1218, 1703, 0726, 0806, 1537, 1681
<b>Teiron</b>	0009
<b>Tek</b>	0820, 0037, 0698, 0009
<b>Teknika</b>	0060, 0179, 0186
<b>TELE System</b>	0876, 1368
<b>Teleavia</b>	0109, 0287, 0196, 0490, 0343
<b>Telecor</b>	0037, 0556, 0163, 0218, 0217, 0259, 0394
<b>Telefunken</b>	0625, 0560, 0587, 0074, 0109, 0698, 0712, 0343, 0498, 0820, 0896, 0471, 0780, 0891, 0287, 0084, 0101, 1703, 1706, 0335, 0073, 0196, 1536, 0753, 0706, 0037, 0556, 0486, 0714, 0490, 1556, 0346, 0754, 0819, 1326, 1588, 1681
<b>Telefusion</b>	0037, 0556
<b>Telegazi</b>	0037, 0163, 0259, 0218, 0264, 0556
<b>Telemeister</b>	0320, 0037, 0556
<b>Telesonic</b>	0037, 0556
<b>Telestar</b>	0009, 0037, 0556, 0412
<b>Teletech</b>	0037, 0556, 0668, 0009, 0247, 0337, 1037
<b>Teleton</b>	0217, 0275, 0206, 0163, 0349, 0259, 0186, 0036, 0363
<b>Televideon</b>	0320, 0552, 0163, 0216
<b>Teleview</b>	0037, 0556
<b>Telexa</b>	0102
<b>Telstar</b>	1702
<b>Temco</b>	0294
<b>Tempest</b>	0009, 0037, 0556, 0264, 0455

<b>Brand</b>	<b>Code</b>
<b>Tennessee</b>	0037, 0556
<b>Tensai</b>	0104, 0218, 0037, 0556, 0217, 0294, 0320, 0009, 0105, 0374, 0371, 0377, 0247, 0715, 0163, 1037
<b>Tenson</b>	0320, 0009
<b>Tesla</b>	1037, 0037, 0668, 0714, 1652, 0715, 1137, 0630, 0371, 0753, 0556, 0238, 0610
<b>Tevion</b>	1248, 1298, 1645, 1259, 0037, 1190, 0556, 1556, 0808, 0865, 0668, 1137, 1771, 0714, 1037, 1585, 1741, 1289, 1800, 2023, 2241
<b>Texet</b>	0217, 0374, 0009, 0216, 0218
<b>Thes</b>	2039
<b>Thomson</b>	0625, 0560, 0343, 0287, 0109, 0471, 0335, 0196, 0237, 0037, 0556, 0490, 0320, 0349, 0216, 0552, 1588
<b>Thorn</b>	0108, 0109, 0225, 0073, 0343, 0190, 0361, 1505, 0238, 0192, 1010, 0074, 0084, 0535, 0499, 0037, 0072, 0556, 0104, 0011, 0335, 0512, 0036, 0043, 0045, 0374, 0070, 0035, 0101, 0356
<b>Thorn-Ferguson</b>	0104, 0108, 0109, 0190, 0192, 0238, 0361, 0499, 0335, 0073, 0035
<b>Time</b>	1702
<b>Tiny</b>	1196, 1269
<b>TMK</b>	0178, 0177
<b>Tobishi</b>	0218
<b>Tokai</b>	0072, 0037, 0556, 0337, 0668, 0448, 0163, 0217, 0374, 0009, 1037, 0552
<b>Tokaido</b>	1037
<b>Tokyo</b>	0216, 0035, 0448, 0303
<b>Tomashi</b>	0282, 0218
<b>Tongtel</b>	0780, 0587
<b>Top Show</b>	0698, 0773, 0418, 0009, 0264, 0706
<b>Topline</b>	1037, 0668
<b>Toshiba</b>	1508, 0508, 0060, 0035, 1289, 0714, 0036, 0070, 0102,

<b>Brand</b>	<b>Code</b>
	0241, 1164, 1582, 1704, 0217, 0109, 0490, 0195, 0191, 0618, 1908, 0009, 0698, 0037, 0832, 1556, 0650, 1037, 2732, 9055, 4164, 9103, 6004, 6033, 6034, 6041, 6063, 6090, 6210, 5482, 4117, 4109, 4027, 4146, 4017, 4920, 4082
<b>Tosumi</b>	1982, 1770
<b>Towada</b>	0349, 0102, 0314, 0217, 0552
<b>Toyoda</b>	0009, 0371, 0264, 1709
<b>Trakton</b>	0009, 0264, 0217
<b>TRANS-continents</b>	0668, 1037, 1374, 1377, 0865, 0556, 0037, 0486, 0217, 2023
<b>Transonic</b>	0037, 0556, 0455, 0587, 0512, 0264, 0698, 0712, 0418, 0009, 1363, 1326, 0858, 1069, 2112, 2354
<b>Transtec</b>	0216
<b>Trevi</b>	2112
<b>Triad</b>	0037, 0556, 0218, 0009
<b>Trical</b>	0157
<b>Trident</b>	0516, 0217
<b>Trio</b>	1563, 1553, 1645, 1248
<b>Tristar</b>	0264, 0218
<b>Triumph</b>	0177, 0516, 0346, 0556, 0037
<b>Tsoschi</b>	0282
<b>TVE</b>	2239
<b>TVTEXT 95</b>	0556
<b>Uher</b>	0037, 0556, 0206, 0320, 0303, 0374, 0418, 0486, 0370, 0259, 0480
<b>Ultra</b>	0192
<b>Ultravox</b>	0087, 0102, 0374, 0247, 0216, 0552, 0163, 0314, 0037, 0556
<b>UMC</b>	1606, 1775, 1745
<b>Unic Line</b>	0037, 0556, 0473, 0455, 0349
<b>Uniden</b>	2112

<b>Brand</b>	<b>Code</b>
<b>United</b>	0714, 0037, 0715, 0556, 1908, 1037, 0587, 1982, 1652, 1770, 1820, 1983
<b>Unitek</b>	1709
<b>Universal</b>	0714, 0037, 0556
<b>Universum</b>	1037, 0037, 1163, 0346, 0668, 0105, 0480, 0195, 0473, 1149, 0104, 0535, 0361, 0011, 0512, 0247, 0492, 0370, 0200, 0418, 0294, 0036, 0157, 0070, 0552, 0163, 0264, 0556, 0421, 0488, 0411, 0074, 0327, 0328, 1505, 1010, 0349, 0217, 0109, 0362, 0337, 0177, 0631, 0554, 0009, 0084, 0170, 0618, 0146
<b>Univox</b>	0037, 0556, 0337, 0087, 0163, 0238
<b>Utax</b>	0163
<b>V2max</b>	0865
<b>V7 Videoseven</b>	1755, 0178, 0880, 1376, 1217, 1666, 0618, 1651, 1505
<b>Vanguard</b>	0037, 0556
<b>Venturer</b>	1865
<b>Venus</b>	1326
<b>Vestel</b>	1037, 1163, 1585, 0037, 0668, 0552, 0163, 0217, 0556
<b>Vexa</b>	0009, 0037, 0556
<b>Victor</b>	0653, 0036, 0053, 0250
<b>Videologic</b>	0218, 0216
<b>Videologique</b>	0216, 0218, 0217
<b>Videomac</b>	0009
<b>Videosat</b>	0247
<b>VideoSystem</b>	0037, 0556
<b>Videotechnic</b>	0216, 0320, 0217, 0374
<b>Videoton</b>	0356, 0163, 0431, 0490
<b>Vidikron</b>	1292, 0102, 0673, 0735
<b>Vidtech</b>	0036, 0178
<b>Viewpia</b>	0876, 1784
<b>ViewSonic</b>	1578, 1755, 1330, 1588, 1542, 2111
<b>Viper</b>	0337

<b>Brand</b>	<b>Code</b>
<b>Visiola</b>	0216
<b>Vision</b>	0037, 0264, 0556, 0320, 0488, 0217, 1730
<b>Vistar</b>	0206, 0361
<b>Vistron</b>	1363
<b>Vivax</b>	1326, 1308, 0037, 1709
<b>Vivo</b>	1697
<b>VMS</b>	0314
<b>Vortec</b>	0037, 0556
<b>Voxson</b>	0087, 0037, 0556, 0363, 0418, 0163, 0178, 2706
<b>Vue</b>	1570
<b>Walker</b>	1149
<b>Waltham</b>	0217, 0356, 0418, 0287, 0385, 0037, 0556, 0668, 0109, 1037, 0431, 0490, 0163, 0443
<b>Wards</b>	0179
<b>Watson</b>	1037, 1248, 1259, 0320, 0556, 0037, 0163, 0009, 0668, 0218, 0394, 1908, 1376, 0327, 0714
<b>Watt Radio</b>	0102, 0349, 0552, 0163, 0216, 0314, 0486, 0428
<b>Wega</b>	0037, 0556, 0036, 0087
<b>Wegavox</b>	0009, 0037, 0556
<b>Welltech</b>	0714, 1652
<b>Weltblick</b>	0037, 0556, 0320, 0217
<b>Weltstar</b>	1037
<b>Weston</b>	0037, 0556
<b>Wharfedale</b>	0037, 0896, 0891, 0556, 0698, 1556, 0706, 1372, 1324, 1681, 1983
<b>White Westinghouse</b>	0320, 0216, 0037, 0556, 0337, 1909, 0624
<b>Wilson</b>	0556
<b>Windsor</b>	0668, 1037
<b>Windstar</b>	0282, 0337
<b>Windy Sam</b>	0556
<b>Wintel</b>	0714, 1006
<b>World-of-Vision</b>	0880, 0890, 0865, 1289, 1298, 0877, 1606, 1217, 1732



<b>Brand</b>	<b>Code</b>
<b>Worldview</b>	0455, 0045
<b>Woxter</b>	1531
<b>Xenius</b>	0634
<b>Xi-En</b>	1770
<b>Xiron</b>	1983
<b>XLogic</b>	0698
<b>XMS</b>	1441
<b>Xomax</b>	1770
<b>Xoro</b>	1196, 1217, 1507
<b>Xrypton</b>	0037, 0556
<b>X-View</b>	1191
<b>Yalos</b>	1771
<b>Yamada</b>	1340
<b>Yamaha</b>	0650, 0797, 1526, 1576
<b>Yamishi</b>	0282, 0455, 0218, 0037, 0556, 0217
<b>Yapshe</b>	0250
<b>Yokan</b>	0037, 0556
<b>Yoko</b>	0217, 0037, 0556, 0218, 0264, 0009, 0431, 0421, 0370, 0339, 0216, 0247, 0373
<b>Yorx</b>	0218
<b>Ytawai</b>	1531
<b>YU-MA-TU</b>	0037
<b>Zaapa</b>	1189
<b>Zanela</b>	0238
<b>Zanussi</b>	0206, 0363, 0217
<b>Zenith</b>	1909, 0624
<b>Zenor</b>	0339
<b>Zepto</b>	1585
<b>Ziggo</b>	1818
<b>ZX</b>	1908

# fetch

**[www.fetch.com.au](http://www.fetch.com.au)**

© Fetch TV Pty Limited. ABN 36 130 669 500. All rights reserved. Fetch TV Pty Limited is the owner of the trade marks Fetch. The set top box and the Fetch service may only be used lawfully and in accordance with relevant terms of use of which you are notified by your service provider. You must not use the electronic program guide, or any part of it, for any purpose other than private and domestic purposes and you must not sub-licence, sell, lease, lend, upload, download, communicate or distribute it (or any part of it) to any person.

Version: March 2019