






Fetch TV Remote 3

What's inside

Simple Remote Set Up	3
Direct Remote Set Up	4
Controlling the TV Volume	5
TV Power and AV	6
Reset remote to control Fetch TV Box only	7
To find out your TV brand & code from A to Z	8

1 Simple Remote Set Up

Welcome to the Fetch TV remote setup guide. Follow the Simple Remote Set Up steps to program your Fetch TV remote to control your TV. If the Simple Remote Set Up doesn't work, try the Direct Remote Set Up.

- 1 Hold down  for 3 seconds. The remote will flash twice.
- 2 Find your TV brand below and hold down the number key, until TV turns off.
1 - Hisense 2 - LG 3 - NEC 4 - Palsonic 5 - Panasonic
6 - Samsung 7 - Sanyo 8 - Soniq 9 - Sony 0 - Teac
Note: If your TV brand is not listed or this setup did not work, you may wish to try the Direct Remote Set Up (page 4).
- 3 Press  then  to turn on TV.



Tip:





You can set up your remote when you first start up your Fetch TV box or later by following the steps in this guide.



2 Direct Remote Set Up

Before you start, find your TV brand and related codes in the list (see page 8).

You may need to try each code to find the best match for your TV.

- 1 Hold down  and  for 3 seconds. The remote flashes twice and backlights come on.
- 2 Press the first of the 4 digit codes for your brand of TV.
 - ✓ If the code is valid, the remote flashes twice.
 - ✗ If the code is invalid, the remote flashes once only on the last digit entry.
- 3 Press  then  to turn your TV off and back on.
 - If this doesn't work, repeat from Step 1 using the next code on the list for your TV brand.
 - If you have turned the TV back on using the Fetch TV remote, the setup has worked.

3 Controlling the TV Volume



Volume Up



Mute - Toggles the sound on/off



Volume down

Switch control from the TV to the Fetch TV box:

Hold down  and  until the remote flashes twice.

Switch control from the Fetch TV box to the TV:

Hold down  and  until the remote flashes once.

4 TV Power and AV

Fetch TV Power:

Press  to turn on/off Fetch TV box.

TV Power:

Press  then press  to turn on/off TV.






AV Source:

Press  then press  to change the input source, e.g. HDMI switch on TV.

Some buttons may not work with your TV. You may wish to try each code through the Direct Remote Set Up process (page 4) for your remote.

5 Reset remote to control Fetch TV Box only

Follow these steps if you want to clear the remote of the TV code programmed through Simple or Direct Set Up.

- 1 Hold down  and  on the remote for 3 seconds. The remote flashes twice and backlights come on. This will put the remote control into programming mode, where you'll have 10 seconds to reset it.
- 2 Press the following buttons on your remote in order:    .
- 3 After you press the 9 button, then the 7 button and then the 7 button again, the remote will flash four times. If you want to program the Fetch TV remote to control your TV again, follow the Simple Remote Set Up process (page 3).

6 TV brand & code from A to Z

Find your TV brand from the list and use corresponding code to setup your remote.

Brand	Code
A.R. Systems	1696, 0037, 0373, 0556, 0352, 0374, 0455
Accent	0009, 0037, 0556
Acer	1339, 1509, 1403, 1644
Acoustic Solutions	1149, 1523, 1037, 1865
Adcom	0625
ADL	1217, 0890
Admiral	0093, 0363, 0418, 0087, 0163, 0264
Advent	0876
Adyson	0217, 0216
AEA	0037, 0556
AEG	0606, 1556, 1037, 1149, 1372, 1163, 1324, 2239
Aftron	0891
Agashi	0216, 0264, 0217
AGB	0516
Agef	0087
Aiko	0009, 0037, 0069, 0556, 0371, 0216, 0035, 0433, 0880, 0072, 0361, 0191, 0264, 0217, 1681
Aim	0037, 0072, 0412, 0556, 0753, 0208, 0706, 0698, 0634, 0374, 0451, 0455, 0606, 0499
Airis	0844, 1531
Aiwa	1908, 1505
Akai	0361, 1326, 0208, 0371, 0037, 0803, 0433, 0191, 0035, 0009, 0072, 0753, 0218, 0552, 0714, 0163, 0706, 0488, 0698, 0516, 0715, 0602, 0556, 0548, 0581, 0480, 0217, 0631, 0216, 0264, 0448, 0178, 0377, 0606, 1037, 1908, 0473, 1259, 1248, 1308, 0729, 0806, 1537, 1865

Brand	Code
Akashi	0009
Akiba	0218, 0282, 0455, 0037, 0556, 0294
Akira	0190, 0418, 0753, 0037, 2241
Akito	0037, 0556
Akura	0037, 0556, 0668, 1645, 1770, 0412, 0009, 0218 0282, 0358, 0264, 0714, 1982, 1363, 1709, 1820, 1983, 2239
Aaron	0179, 0216
Alba	0037, 1037, 0556, 0714, 0009, 0418, 0370, 0235, 0371, 0668, 0355, 0218, 0216, 0247, 0431, 0163, 0487, 0211, 0581, 0036, 1908, 0443, 0551, 1731 0480, 0587, 1865, 2104
Alcyon	0211
AlfaView	1206
Alkos	0035
Allorgan	0206, 0294, 0217
Allstar	0037, 0556
Allure	2714
All-Tel	0865, 1269
Ambassador	0177
Amitech	1281, 0655, 1468
Amoi	1529
Amplivision	0217, 0370, 0320
Amstrad	0177, 0009, 0516, 0264, 0354, 0371, 0218, 0037, 0556, 0433, 0412, 0362, 1037, 0581, 1982, 1820
Anam	0037, 0556, 0009, 0650, 0250
Anam National	0037, 0556, 0650, 0250
Andersson	1163, 1149, 1585
Anex	0421
Anglo	0009, 0264
Anitech	0009, 0264, 0037, 0556, 0282, 0102
Ansonic	0370, 0037, 0556, 0009, 0668, 0374, 0163, 0292, 0102, 0411, 0259, 0247, 0428, 0104
AOC	1365, 1089, 1588, 0625, 2111, 2214
Apollo	0473, 2239

Brand	Code
Arc En Ciel	0109, 0196
Arcam	0216, 0217
Arçelik	0714
Ardem	0486, 0714, 0633, 0037, 0556
Arena	0037
Aristona	0556, 0037
Art Mito	1585, 1820
Arthur Martin	0163, 0237
ASA	0105, 0346, 0070, 0104, 0087, 0163, 0179
Asberg	0037, 0556, 0102
ASK	1747
Asora	0009
Astra	0037, 0556
Asuka	0218, 0217, 0216, 0264, 0282
ATD	0698
Atec	1606, 1728
Atlantic	0037, 0556, 0216, 0206, 0320, 0259
Atori	0009
Auchan	0163
Audiosonic	0009, 0037, 0374, 0820, 0556, 1800, 1308, 0109, 1703, 0714, 0715, 0217, 0370, 0337, 0264, 0218, 0486, 0428, 0858, 0865, 1681, 1802, 1983, 2104
Audioton	0217, 0486, 0370, 0264, 0428
Audiovox	0451
Audioworld	0698
Aumark	0060
Auriga	1531
Autovox	0087, 0206, 0237, 0349, 0217, 0247, 0336
Avol	1820
AVP	1908
Awa	0011, 0036, 0009, 0157, 0374, 0451, 0412, 0037, 0556, 0216, 0606, 0217, 0108, 0264, 1985, 1376, 0178, 0698, 0888, 1681, 1813, 2039, 2241, 2480

Brand	Code
Axxent	0009
Axxon	0714
B&D	1217
Baier	0876, 1372, 2239
Baird	0109, 0343, 0190, 0192, 0072, 0073, 0217, 0208, 1196, 0606
Bang & Olufsen	0565, 0087, 0275
Barco	0552, 0163
Base	1570, 0780
Baseline	1244
Basic Line	0374, 0037, 0163, 0668, 0556, 0009, 0218, 0282, 0217, 0455, 0339, 1037, 1149
Bastide	0217
Bauer	0009, 0698, 0706, 0264
Baur	0009, 0303, 0535, 0195, 0512, 0037, 0556, 0554, 0191, 0361, 0349, 1505, 1010, 0146, 0455
Bazin	0217
BBK	1741
Beaumark	0178
Beko	0714, 0486, 0035, 0715, 0037, 0418, 0428, 1800, 0370, 0556, 0606, 0808, 1652
Belson	1191, 0698, 2241
Bennett	0556, 0037
BenQ	1212, 1562, 1032, 1574
Bensten	1570, 1326
Beon	0037, 0556, 0418
Berthen	0668
Best	0337, 0370, 0421
Bestar	0037, 0556, 0370, 0374
Bestar-Daewoo	0374
Bestwell	1326
Bexa	2493
Binatone	0217

Brand	Code
Black Diamond	0820, 1037, 0556, 0753, 1163, 0587
Black Panther	0102
Black Star	0247
Black Strip	0035
Blackway	0282, 0218
Blaupunkt	0554, 0195, 0191, 0535, 0200, 0327, 0328, 0448, 0455, 0170, 0036
Blauren	0374
Blue Media	1728, 1606
Blue Sky	0037, 1372, 1037, 1709, 0714, 1149, 0487, 1771, 0668, 0715, 0625, 1652, 1909, 0556, 0218, 0282, 0455, 1908, 1191, 0808, 1363, 1388, 1314, 1739, 0624, 1324
Blue Star	0282
BlueH	1745
Boman	1324
Bondstec	0247
Boots	0217, 0009
Bork	1363
Bosch	0320, 0327
BPL	0037, 0556, 0282, 0373, 0208, 0896
Brandt	0625, 0109, 0237, 0196, 0287, 0335, 0471, 0343, 0560, 1365, 0714
Brandt Electronique	0287, 0335
Brimax	1709
Brinkmann	0037, 0556, 0668, 0418, 0486
Brionvega	0037, 0556, 0362, 0087, 1514
Britannia	0216, 0217
Brother	0264
Bruns	0087, 0428, 0486
BSR	0163, 0294, 0552, 0361
BTC	0218

Brand	Code
Bush	1037, 1326, 0714, 0037, 0668, 1652, 0218, 0163, 0349, 0009, 0036, 0371, 0235, 0282, 0355, 0363, 0374, 0264, 0361, 0487, 0211, 0208, 0217, 1556, 0698, 0581, 0294, 0552, 0556, 1900, 1908, 0778, 1259, 1982, 1248, 1682, 1731, 1166, 0587, 1308, 0443, 1441, 1645, 1865, 1983, 2104, 2214, 2241
Cameron	1523, 0556
Camper	0037, 0556, 0486
Candle	0186
Canton	0218
Capsonic	0264
Carad	0610, 0037, 0556, 0668, 1037
Carena	0455, 0037, 0556
Carrefour	0036, 0070, 0037, 0556
Carver	0170
Cascade	0009, 0037, 0556
Casio	0037, 0556, 0163, 0349
Cat	1682, 2155
Cathay	0037, 0556
CCE	0037, 0556, 0217
Celestial	0820, 0819
Cello	1770, 1802, 1820
Centrex	0780, 0891, 1536, 0698, 1731, 1203, 1702
Centrum	1037
Centurion	0037, 0556
Century	0087, 0247, 0238
CGE	0074, 0084, 0418, 0247, 0552, 0370, 0163
Chimei	1666
Cimline	0009, 0235, 0218
Cineral	0451
Cinex	1166, 1556
Citizen	0451, 0060, 0186
City	0009

Brand	Code
Clarivox	0418, 0037, 0556, 0070, 0102
Clatronic	0037, 0370, 0371, 0714, 0218, 0264, 0556, 0217, 0247, 0009, 0102, 0320, 0606, 1163, 1324
Clayton	0385, 1037
CMS	0216
CMS hightec	0217
Cobolt	0891
Combitech	1908
Concorde	0009
Condor	0320, 0037, 0556, 0370, 0216, 0009, 0282, 0102, 0247, 0418, 0314, 0411, 0163, 0264
Conia	1645, 0820, 1523, 0754, 1702, 2483
Conrac	0808
Conrad	0037, 0556
Contec	0216, 0009, 0157, 0011, 0036, 0264, 0037, 0556
Continental Edison	0109, 0237, 0196, 0287, 0487
Cosmel	0009, 0337, 0037, 0556
CPTEC	0625, 1363
Crosley	0087, 0247, 0074, 0084, 0552, 0163
Crown	0009, 0712, 0370, 0486, 0037, 0556, 0487, 0714, 0606, 0715, 0421, 0373, 0418, 0208, 0653, 0339, 1037, 1652, 0668, 0053, 0412
Crystal	0431
CS Electronics	0216, 0218, 0247
CTC	0247
Curtis Mathes	0060, 0093, 0451, 0166
CWR-Tech	1372
CyberHome	0794, 1176
Cybertron	0218
Cytronix	1298
D.Boss	1390, 0037

Brand	Code
Daewoo	0634, 0661, 1203, 0499, 0374, 1909, 0037, 0556, 0009, 0216, 0218, 0217, 0451, 1137, 1908, 0880, 1218, 0876, 0865, 0698, 0714, 0706, 0624, 2098
Daijitsu	2804
Dainichi	0218, 0216
Dansai	0037, 0556, 0264, 0035, 0216, 0009, 0036, 0217, 0208
Dansette	0412
Dantax	0370, 0486, 1652, 0714, 0606, 0715, 1908
Datsura	0373, 0208
Dawa	0009, 0037, 0556
Daytek	0698, 1207, 0706, 1376, 1374, 0264, 1631
Dayton	1207, 1374, 0009
Daytron	0009, 0374, 0037, 0556
De Graaf	0208, 0163, 0548, 0363
DEC	0891, 1326, 1190, 0896, 1709
Decca	0072, 0516, 0037, 0556, 0217, 1137, 1908, 1056
Deitron	0037, 0556, 0374, 0218
Dell	1403
Denko	0264
Denver	0037, 1372, 0556, 0606, 1189, 0587, 1709, 1770, 1820
DER	0190
Desmet	0320, 0037, 0556, 0009, 0087
Dew	1770
DGM	1435, 2239
Diamant	0037, 0556
Diamond	0264, 0698, 0009, 0216, 0371, 0820, 0896, 0706
DiBoss	0037, 0556
Dick Smith Electronics	0698, 2241, 1326, 1985, 2658
Digatron	0037, 0556
Digihome	1149
Digiline	0037, 0556, 0105, 0668
DigiLogic	0037, 0556
Digimate	0890

Brand	Code
DigiMax	0891
Digital Device	1606
Digital Life	0891, 0872
Digitek	1709, 1771
Digitex	0820
Digitor	0037, 0556, 0888, 1985, 1497, 1703, 0698
Digivision	0361
Digix Media	0880
DiK	0037, 0556
Dikom	1703, 1696
DiVision	2239
Dixi	0009, 0037, 0556, 0247, 0217, 0087
DK digital	1662
DL	0891, 0780, 0037, 0587, 0865, 1363, 1326, 1203, 0872
DMTECH	1338
Domeos	0668, 0037, 1037
Domland	0394
Doric	0349
Dream Vision	0673, 1704
DSE	0888, 1556, 1261, 1985, 1497, 0820, 1277, 1703, 1166, 1563, 1631, 0698, 1682, 1326, 2155, 2241, 2480, 2484, 2658
DTS	0009
Dual	0349, 0217, 0343, 0336, 0037, 0556, 0259, 0352, 0394, 0303, 0552, 0163, 0531, 1137, 0631, 1149, 1037, 0778, 1372, 1163, 2241
Dumont	0087, 0104, 0102, 0217, 0070, 0072
Dunai	0163
Durabrand	0037, 0556, 1652, 0714
Dux	0037, 0556
D-Vision	0037, 1982, 0556
DVX	0891
Dynatron	0037, 0556
E:max	0606, 1531, 1372, 1324

Brand	Code
Easy Living	1248, 1259, 1553, 1709, 1217, 1308, 1631, 0877, 1166, 1556, 1666, 1294, 2023, 2104, 2157
Ecco	0773, 0706, 0698
ECE	0037
Edison-Minerva	0487
Eiki	0735
Elbe	0411, 0362, 0435, 0630, 0238, 0610, 0259, 0292 0370, 0163, 0037, 0556, 0218, 0191, 0551, 0217 0516, 0361, 0552
Elbe-Sharp	0516
Elcit 0087,	0247, 0516, 0102, 0552, 0163
Electrion	1585
Electroview	2706
Elekta	0009, 0037, 0556, 0264, 0282
Elfunk	1208, 1037
ELG	0037, 0556
Elin	0216, 0037, 0556, 0105, 0104, 0548, 0361, 0448, 0349, 0163, 0009
Elite	0218, 0037, 0556, 0320
Elman	0102
Elonex	1776
Elta	0009, 0264, 0216, 0431, 1662
Emco	0247
Emerson	0177, 0714, 0178, 0179, 0087, 0247, 0037, 0556, 0371, 0070, 0282, 0320, 0361, 1909, 0486, 0370, 0163, 0321, 0668, 0624
e-motion	1709
Emperor	0282
Enmar	2023
Enzer	0753, 0773
Epson	0833, 1379
Erae	1371, 1191
Erisson	1682

Brand	Code
Erres	0037, 0556
ESC	0037, 0556, 0217
Estèle	0552, 0163
Etron	0037, 0556, 0820, 0009, 0163
Eurofeel	0264, 0217
EuroLine	0037
Euroman	0216, 0264, 0037, 0556, 0217, 0421, 0370
Europa	0037, 0556
Europhon	0037, 0516, 0102, 0163, 0217, 0556, 0314, 0247, 0552, 0431, 0216
Evesham	1248, 1259, 1728, 1563, 1606, 1536
Excel	0037, 0556
Excello	1037, 1326
Expert	0206, 0259, 0163
Exquisit	0037, 0556, 0247
Fagor	0037, 0556
FairTec	1191, 1373
Family Life	0037, 0556
Fenner	0374, 0009
Ferguson	0073, 0625, 0287, 0192, 0190, 0335, 0238, 0109, 0560, 0037, 0556, 0035, 0343, 0653, 0104, 0108, 0361, 0471, 0548, 0443, 1037, 1908, 0053, 0195, 1865
Fidelity	0163, 0512, 0363, 0037, 0556, 0371, 0412, 0531, 0216, 0264, 1908, 0361
Filsai	0217
Finlandia	0208, 0346, 0548, 0361, 0163, 0363, 0072, 0287, 0343, 0045
Finlux	0105, 0104, 0037, 0556, 0714, 0346, 1585, 0217, 0072, 0552, 0163, 0516, 0715, 0070, 0087, 0179, 0102, 0314, 0411, 0631, 0492, 0480, 1556, 0629, 0473, 0418, 0606, 0808, 1248
Fintec	1982

Brand	Code
Firstline	0037, 0556, 0374, 0668, 0714, 0163, 0009, 0294, 0321, 0216, 0385, 0247, 0552, 1909, 0314, 0102, 0217, 0411, 0349, 0531, 0238, 0072, 0235, 0208, 0361, 1037, 1191, 0808, 1363, 1163, 1388, 1371, 1308, 0624
Fisher	0104, 0217, 0036, 0208, 0370, 0555, 0045, 0087, 0157, 0361, 0552, 0163, 0303, 0349, 0072
Flint	0037, 0556, 0610, 0072, 0218, 0455, 0264
FNR	0102
Force	1149
Formenti	0163, 0037, 0556, 0486, 0216, 0087, 0320, 0552
Formenti-Phoenix	0216, 0320, 0552
Fortress	0093, 0087
Fraba	0037, 0556, 0370, 0531
Friac	0009, 0037, 0556, 0102, 0421, 0370, 0499, 0655, 0610
Frontech	0247, 0264, 0349, 0363, 0431, 0448, 0217, 0009, 0163
Fuchsware	0780
Fujicom	1709
Fujimaro	0865
Fujitsu	0179, 0683, 0853, 0186, 0809, 0206, 0072, 0102, 0314, 0217, 0163, 0009, 0352, 0037, 0556, 0361, 0259
Fujitsu General	0009, 0186, 0217, 0206, 0163, 0683
Fujitsu Siemens	1666, 1298, 1259, 1248, 1373, 1163, 0808, 0809
Funai	0179, 1394, 1037, 1666, 0668, 0264, 0294, 0303, 0412, 1505, 0714
Futronic	0264, 0698, 1531
Future	0037, 0556
Gaba	1037, 0037, 0858, 1183
Galaxi	0102, 0037, 0556, 0361, 0163
Galaxis	0370, 0418, 0037, 0102, 0556
Galeria	0009
Gateway	1755
GBC	0552, 0163, 0009, 0374, 0218, 0363

Brand	Code
GE	0343, 0735, 0178, 0282, 0451, 0560, 0287, 0109, 0335, 0625, 0093
Geant Casino	0163
GEC	0163, 0361, 0349, 0037, 0516, 0556, 0043, 0072, 0217
Geloso	0247, 0009, 0363, 0552, 0163, 0374
General	0109, 0287, 0471, 0186
General Electric	0343, 0287
General Technic	0009
Genesis	0009, 0037, 0556
Genexxa	0218, 0037, 0556, 0412, 0163, 0009
Gericom	0865, 1606, 1298, 1206, 1217, 0880, 0808
Gevalt	1371, 1191
G-Hanz	1363
Giant	0217, 0009
G-Luxon	0844
Gold	1770, 2023, 2039, 2157
Goldfunk	0668
Goldhand	0216
Goldline	0337
GoldStar	0037, 0009, 0370, 0377, 0217, 0247, 0178, 0216, 0556, 0431, 0163, 0361, 0109, 0363, 0606, 0714, 0715, 0455
Gooding	0487
Goodmans	0634, 0715, 1259, 1037, 1248, 0037, 0499, 0556, 0714, 0668, 1909, 0374, 0036, 0264, 0072, 0516, 0009, 0179, 0487, 0371, 0343, 0235, 0035, 0480, 0560, 0217, 0335, 0218, 0451, 1908, 0630, 0661, 1900, 0880, 1308, 0587, 1376, 1985, 1149, 1645, 1682, 0624, 0625, 1720, 1795, 1983
Gorenje	0370, 0421
GP	0753
GPM	0218
Gradiente	0653, 0170, 0037, 0556, 0053
Graetz	0714, 0361, 0371, 0163, 0037, 0339, 0556, 1163

Brand	Code
Granada	0037, 0556, 0226, 0356, 0045, 0072, 0108, 0208, 0217, 0036, 0339, 0516, 0473, 0335, 0560, 0163, 0363, 0225, 0343, 0548, 0146
Grandin	0037, 0556, 0009, 0163, 0610, 0714, 0715, 0668, 0374, 0320, 0282, 0218, 0455, 1037, 0865, 1191, 0880, 1374, 1375, 1377, 1380, 1388, 0624
Gronic	0102, 0217, 0163
Grundig	0195, 0508, 1371, 1280, 1191, 1223, 0535, 0191, 1582, 0554, 0070, 1037, 0487, 0037, 0443, 0706, 0237, 0556, 0587, 0009, 0036, 0370, 0740, 1908, 0630, 1308, 0178, 1376, 1800, 0343, 1259, 1645, 2239
Grunkel	1163
Grunpy	0179
GVA	1326, 1363, 2098
H&B	0808
Haaz	0706
Haier	0698, 0264, 0869, 0891, 1203, 1983
Halifax	0264, 0216, 0217
Hammerstein	0264, 0060
Hampton	0216, 0217
Hanimex	0218, 0294, 1908
Hannspree	1776
Hanseatic	0037, 0556, 0499, 0349, 0163, 0361, 0292, 0282, 0394, 0320, 0634, 0428, 0370, 0661, 0009, 0294, 0217, 0373, 0431, 0087, 0377, 0336, 0714, 0808, 0486, 0625
Hantarex	0009, 0037, 0556, 0102, 0516, 0238, 0829, 1338, 0865
Hantor	0037, 0556
Harley Davidson	0179, 0043
Harsper	0865
Harwa	0773, 1196, 1269
Harwood	0009, 0412, 0037, 0556, 0487
Hauppauge	0037, 0556

Brand	Code
Havermy	0093
HB	1324
HCM	0009, 0412, 0037, 0556, 0217, 0218, 0418, 0282, 0264
Hedzon	0556, 0037
Hema	0217, 0009
Hemmermann	0349
Hicon	1467, 1298, 2483
Hifivox	0109, 0196
Higashi	0216
Highlander	1531
Highline	0264, 0037, 0556
Hikona	0218, 1983
Hinari	0208, 0037, 0556, 0009, 0218, 0036, 0179, 0163, 0355, 0443, 0211, 0487, 0235, 0294, 0264, 1908
Hisawa	0282, 0218, 0455, 0610, 1908, 0714
Hisense	1363, 1314, 0208, 1026, 1073, 0698, 0891, 0780, 0009, 1069, 2098, 2341, 2371, 2658
Hit	0087
Hitachi	1576, 1772, 0481, 0578, 0150, 0225, 0349, 0108, 0744, 1585, 0356, 1037, 1484, 1481, 1225, 0634, 0473, 0036, 0163, 0552, 0343, 0196, 1163, 0576, 1194, 0499, 1149, 0797, 0043, 0194, 0480, 0516, 0072, 0037, 0556, 0109, 0363, 0548, 0178, 1137, 0105, 0492, 0361, 0512, 0629, 1960, 0877, 0217, 0563, 2214
Hitachi Fujian	0828, 0108, 0150, 0037, 0556, 0225, 0576, 0499
Hitsu	0009, 0610, 0455, 0218
HMV	0087
Hoeher	0714, 1556, 0865, 1163
Home Electronics	0606
Hornophon	0037, 0556
Hoshai	0218, 0455, 0282
Huanyu	0374, 0216
Hugoson	0890, 1666, 1217

Brand	Code
Humax	1535
HYD	1631, 1376
Hygashi	0217, 0216
Hyper	0009, 0216, 0217, 0247
Hypersonic	0361
Hypson	0037, 0556, 0714, 0715, 0264, 0217, 0282, 0455, 0238, 1908, 1037, 0668, 0486
Hyundai	0037, 0803, 0865, 1669, 0556, 0706, 0753, 1326, 1531, 1244, 0698, 1294, 0876, 1281, 1770, 1277, 1468, 0264, 1556, 1006, 0888, 1037, 1631, 1606, 1376, 0778, 1563, 1681, 1720, 1820
Iberia	0037, 0556
ICE	0264, 0037, 0371, 0009, 0556, 0218, 0217, 0216
ICeS	0218, 0216
Ict	0037, 1137, 0556
IDEAL	1556
IIsonic	1376
Iiyama	1217, 0890
Imperial	0037, 0163, 0370, 0074, 0084, 0508, 0556, 0630, 0411, 0361, 0349, 0418, 0247, 0196, 0431, 0531, 0552, 2092
Indesit	0237
Indiana	0037, 0556
InFocus	0752, 1164, 1206, 1430, 1747
Ingelen	0487, 0610, 0714, 0163, 0361
Ingersoll	0009
Inno Hit	0009, 1037, 0072, 0037, 0556, 0218, 0217, 0516, 0247, 0102, 0282, 1163, 1585
Innovation	0037, 0556
Innowert	0865, 1298
Inotech	0773, 0820
Inspira	1372, 1556

Brand	Code
Interactive	0037, 0556, 0087, 0512, 0275, 0327, 0163, 0361, 0370, 0109, 0411
Interbuy	0009, 0037, 0264, 0247, 0512, 0556
Interfunk	0037, 0556, 0087, 0512, 0275, 0327, 0163, 0361, 0370, 0109, 0349, 0247, 0200
Internal	0037, 0556, 0499, 0374, 1909, 0624
International	0216
Intervision	0282, 0217, 0455, 0037, 0371, 0377, 0448, 0486, 0370, 0394, 0487, 0218, 0102, 0431, 0163, 0264, 0247, 0009, 0556
Irradio	0009, 0037, 0556, 0218, 0247, 0371, 0724
Isukai	0218, 0037, 0556, 0282, 0455
ITC	0217, 0552, 0320
ITS	0037, 0371, 0218, 0282, 0264, 0216, 0009, 0556
ITT	0163, 0480, 0349, 0361, 0473, 0548, 0346, 0339, 0208, 0179, 0610
ITT Nokia	0361, 0548, 0163, 0473, 0480, 0349, 0346, 0208, 0179, 0339, 0606, 0610, 0631, 0363, 0431
ITV	0037, 0264, 0556, 0247, 0374
JDV	1982
Jean	0036
JEC	0035
JGC	1709
JMB	0037, 0499, 0634, 0374, 0556, 0443, 1908
JNC	0876, 1536, 0896, 1702
Jocel	0712
Jouge	1435
Jubilee	0556
JVC	0653, 1153, 0606, 1653, 0371, 0731, 0683, 0036, 0190, 0192, 0218, 0418, 0069, 0093, 0650, 0053, 1818, 2714
Kaisui	0218, 0282, 0037, 0556, 0216, 0455, 0217, 0009
Kambrook	0377, 0431, 0264

Brand	Code
Kamp	0216
Kapsch	0163, 0361, 0206, 0259, 0104
Karcher	0037, 0556, 0421, 0370, 0610, 0163, 0282, 0102, 0314, 0264, 0778, 0714, 1556, 0606, 1982, 1308, 1324
Kathrein	0556, 0037, 0880
Kawa	0371
Kawasho	0216
KB Aristocrat	0163
Kendo	0610, 0037, 0556, 0163, 0512, 0370, 0377, 0363, 0428, 0411, 0102, 0235, 0247, 0362, 0551, 1585, 1037, 0486, 1149, 1163, 1137
Kennedy	0163, 0206, 0552, 0435
Kennex	1037
Kenwood	0105
Keydo	1702
Keymat	1771, 1326, 1570
KIC	0217
Kingsbrook	1037
Kingsley	0216
Kiota	0371, 0455
Kiton	0556, 0037, 0668
Kneissel	0037, 0385, 0370, 0610, 0411, 0374, 0499, 0556, 0435, 0259, 0292, 0238, 0362, 1908
Kobra	1467, 1298
Koenig	0037
Kolster	0037, 0556, 0102, 0349, 0247, 0218
Konichi	0009
Konka	0037, 0556, 0371, 0714, 0418, 0218, 0641, 0587, 1190, 0606, 0726, 0754, 0779, 0816, 1404, 2267
Kontakt	0487
Korpel	0037, 0556
Korting	0087, 0421, 0370, 0320
Kosmos	0037, 0556

Brand	Code
Kotron	0412, 0264, 1900
Koyoda	0009
Kraking	0238
Kross	1536
KTV	0217
Kuba	0349, 0163
Kuba Electronic	0303, 0349, 0163
Kuro	0373
Kyoshu	0412, 0418, 0264
Kyoto	0385, 0163, 0216, 0217
L&S Electronic	0865, 0714
LaSAT	0486, 0370
Lavis	1037, 0037, 0163, 1363
Leader	0009
Lecson	0037, 0556
Legend	0009, 0337
Lemair	0411
Lenco	0009, 0721, 0037, 0163, 0374, 0556, 0104, 0587, 1037, 1631, 1983
Lenoir	0009, 1189
Lenoxx	1189
Lentec	1531, 1696
Lesa	0247
Level	2023
Levis Austria	0037, 0556
Lexsor	1196, 1507
Leyco	0264, 0072, 0037, 0556 0294
LG	1423, 0178, 1232, 1319, 0037, 0876, 0370, 0377, 0009, 0556, 0714, 0217, 0216, 0431, 0163, 0606, 0109, 0698, 0715, 0823, 0829, 1637, 1146, 1148, 1191, 0247, 0361, 1149, 1681, 2182
Liesenkötter	0037, 0327, 0328, 0556

Brand	Code
Lifetec	0037, 0668, 1037, 1137, 0374, 0009, 0512, 0655, 0556, 0714, 0218, 0264, 0683, 1248, 1259
Lloyd's	0009
LME	0431
Local India TV	0208
Lodos	1037, 1149
Loewe	0512, 0633, 0790, 0037, 0556, 0655, 0370, 0087, 0292, 0551, 0362, 0516, 0791
Logik	0011, 0698, 0060, 0773, 0009, 0264, 0371, 0880, 1217, 1037, 1645, 1865, 2241
Logix	0668
Luker	1982, 1985
Luma	0037, 0363, 0206, 0163, 0411, 0556, 0374, 0009, 0362, 0259
Lumatron	0363, 0206, 0037, 0556, 0362, 0163, 0259, 0361, 0217, 0264, 0073, 0668, 2023
Lumenio	0037
Lux May	0037, 0009, 0556, 0581
Luxor	0194, 1163, 0237, 0363, 0480, 0492, 0349, 0361, 0208, 0356, 0548, 0163, 0346, 0473, 0179, 1037, 0217, 0631
LXI	0178
Madison	0037, 0556
Magnadyne	0087, 0247, 0516, 0102, 0552, 0163
Magnafon	0516, 0102, 0314, 0216, 0073
Magnavox	0037, 0556, 0036, 0179, 0780, 1139, 1203, 0753, 0729, 1069
Magnum	0714, 0037, 0556, 0715, 1289, 2023
Mandor	0264
Manesth	0037, 0556, 0235, 0217, 0264, 0320, 0035, 0294, 0163, 0363
Manhattan	0037, 0876, 0556, 0668, 1037, 0163, 0778
Maqma	1467, 1298, 1709, 1606, 1702

Brand	Code
Marantz	0037, 0556, 0412
Marelli	0087
Mark	0037, 0556, 0217, 0216, 0374, 0009, 0714, 0715
Marks and Spencer	1770
Mascom	1556, 0556, 0037
Master's	0499, 0037
Masuda	0371, 0218, 0009, 0264, 0037, 0217, 0556
Materin	0858
Matrix	1277
Matsui	0037, 1163, 0556, 0487, 0443, 0009, 0235, 0177, 0011, 0355, 0072, 0036, 0211, 0217, 0354, 0294, 0371, 0433, 0363, 0455, 0163, 0349, 0516, 0035, 0431, 0208, 0045, 0195, 0191, 0335, 0714, 1908, 1037, 0629, 1666, 0880, 0744, 2155
Matsushita	0650, 0250
Matsuiama	0587
Maxam	0264
Maxdorf	0773, 0698, 0706, 0264
Maxent	1755
Maxess	2493
Maxim	1166, 1982, 1556
MAXIVIDEO	0314
MCE	0009
McMichael	0043
McTronics	1662
Medialine	1206
Mediator	0037, 0556
MediaVision	1391
Medion	0714, 0808, 0037, 0668, 0556, 0512, 1137, 0698, 1908, 1037, 1900, 1248, 1259, 0245, 0631, 1221, 0880, 1289, 1166, 1556, 1149, 1741
MegaDrive	1259
Megas	0610

Brand	Code
Megatron	0178
MEI	1037, 0037, 0556
Melectronic	0346, 0037, 0512, 0109, 0343, 0247, 0105, 0104, 0374, 0009, 0217, 0480, 0492, 0216, 0411, 0349, 0163, 0287, 0556, 0634, 0361, 0191, 0195, 0661, 0714, 1652
Memorex	0009, 0150, 0178, 0650, 0060, 0250
Memory	1983
Memphis	0337, 0072, 0009, 0385
Mercury	0037, 0009, 0698, 0264, 0556, 0706, 0060
Merritt	0548, 0361, 0163
Metronic	0625
Metz	0746, 0388, 0447, 0367, 0087, 1163, 0195, 0535, 0554, 0191, 0037, 0556, 0587, 0275, 0668, 1037
MGA	0150, 0178, 0037, 0556, 0218, 0104, 0374
Micromaxx	0037, 0556, 0668, 1037, 0630, 0808, 0714, 1372, 1324
Microstar	0808
Microtek	0820, 0698, 0706, 0264
Mikomi	1149, 1163, 0744
Minato	0037, 0556
Minerva	1248, 0487, 0535, 0195, 0070, 0191, 0554, 0237, 0516, 0108, 0150
Minoka	0412, 0037, 0556
Mirai	1666, 1651
Mirror	1900
Mitsai	1556
Mitsubishi	0108, 0150, 0093, 0512, 0037, 0178, 0354, 0087, 0036, 0237, 0358, 0535, 0556, 0691, 0208, 1037, 1522
Mitsuri General	0163
Mivar	0292, 0370, 0216, 0609, 0516, 0217
Mogen	1683, 1820
Monaco	0009
Moree	0037
Morgan's	0037, 0556

Brand	Code
Motorola	0093
MTC	0060, 0370, 0349, 0512, 0163, 0216, 0361, 0448
MTlogic	0714, 1308
Multimat	0314
Multistandard	0102, 0314
Multitec	0037, 0556, 0486, 0668, 1037, 1556, 1982
Multitech	0349, 0009, 0363, 0486, 0037, 0370, 0556, 0217, 0216, 0247, 0102, 0314, 0264, 0552
Murphy	0104, 0216, 0072, 0163
Musikland	0037, 0218, 0247, 0556
Mx Onda	1645, 1820, 1983
MyCom	1376, 0178
Myrica	1666
Myryad	0556, 0037
NAD	0166, 0178, 0865, 0361, 0163, 0037
Naiko	1982, 0037, 0606, 0556, 0753
Nakimura	0374, 0037, 0556
Naonis	0363, 0163
Narita	1982
NAT	0226, 0340, 0214
National	0214, 0226, 0237, 0340
NEC	0170, 0587, 1170, 1367, 0036, 0320, 1519, 0876, 1775, 0455, 0009, 0374, 0217, 0037, 0556, 0011, 0704, 0245, 0237, 1704, 0499, 0653, 0771, 1370, 1135, 0661, 0882, 0053, 1784, 2461
Neckermann	0037, 0191, 0370, 1505, 1010, 0200, 0554, 0556, 0552, 0163, 0327, 0418, 0349, 0087, 0247, 0217, 0411, 0320, 0363, 0512
NEI	0037, 0556, 0337, 0431, 0371, 0163, 1037
NEO	1372, 0754, 1324
Neon	1732
Neovia	1206, 0865, 1373, 1371, 0876, 1376, 1390, 1384, 1338, 1191
Nesco	0247, 0179, 1908

Brand	Code
Nesx	1732
Netsat	0037, 0556
Network	0337
Neufunk	0037, 0009, 0556, 0610, 0218, 0282, 0714
New Tech	0037, 0009, 0556, 0343, 0217, 0448
New World	0218
Nicamagic	0216
Nikkai	0072, 0218, 0037, 0556, 0217, 0264, 0035, 0337, 0216, 0009, 0036
Nikkei	0714, 1594
Nikko	0178
Nintaus	0891
Nishi	0482
Nobliko	0102, 0070, 0216, 0314
Nogamatic	0109, 0196
Nokia	0361, 0163, 0480, 0349, 0548, 0492, 0473, 0339, 0208, 0374, 0631, 0606, 0346, 0179, 0320, 0610, 0109, 0551
Norcent	1588
Nordic	0217
Nordmende	0109, 0891, 0287, 0196, 0560, 0343, 0195, 0037, 0556, 0335, 0163, 0471, 1259, 1248, 0714, 1289, 0490, 0443, 1585
Norfolk	0163
Normerel	0037, 0556
Nortek	0668
Northern Star	1206
Novak	0037, 0556
Novatronic	0037, 0105, 0374, 0531, 0556
Novex	1523
Novita	1384, 1585
Nurnberg	0163, 0361
Nu-Tec	0455, 0698, 0820, 0037, 0556, 0706, 0264, 2481
O.K.Line	1037, 1372, 1556, 1324

Brand	Code
Oceanic	0163, 0361, 0294, 0208, 0473, 0548, 0480, 0563
Odeon	0264
Odys	1795
Okano	0370, 0037, 0556, 0264, 0072, 0488, 0009, 2982
OKI	1037
Olidata	1376
Olivia	1588
Omega	0264
Omni	0780, 0891, 0698, 1570, 0872
Onida	0053
Onimax	0714
Onix	0698
Onn	1149, 1709, 0556, 1770, 2112
Onwa	0371, 0602, 0218, 0433, 0581, 0102, 0431
Onyx	1709, 1770
Opera	0037, 0556, 0714, 1770
Optimus	0650, 0166, 0250
Optoma	1622
Optonica	0093
Orava	0552, 1037
Orbit	0037, 0556
Orion	0179, 0037, 0443, 0355, 0714, 0235, 0556, 0655, 0294, 0177, 0320, 0011, 0009, 0321, 0211, 0314, 0102, 0264, 0412, 0516, 0531, 1908, 0880, 1196
Orline	0037, 0218, 0556
Ormond	0385, 0668, 1037, 0037, 0556
Orsowe	0516
Osaki	0072, 0218, 0217, 0264, 0037, 0412, 0374, 0211, 0355, 0556
Osio	0037, 0556
Oso	0218
Osume	0157, 0072, 0036, 0218, 0037, 0556
OTIC	1203, 1006, 1645, 1326, 1983

Brand	Code
Otto Versand	1505, 1010, 0036, 0093, 0512, 0037, 0556, 0535, 0195, 0349, 0554, 0191, 0361, 0235, 0109, 0294, 0226, 0247, 0303, 0320, 0217, 0009, 0282, 0336, 0343, 0373, 0428, 0431, 0516, 0552
Pace	1908
Pacific	0037, 0556, 1137, 0714, 1037, 0443, 1324
Packard Bell	1314
Pael	0216
Palladium	0370, 0037, 0655, 0411, 0630, 0714, 1137, 0191, 1505, 1010, 0200, 0418, 0554, 0556, 0349, 0247, 0327, 0087, 0552, 0163, 0217, 0363, 1982
Palsonic	0264, 0412, 0037, 0217, 0377, 0218, 0698, 0556, 0448, 0488, 0773, 0418, 0778, 1489, 1196, 1507, 1269, 1705, 1326, 0779, 1183, 1795, 1813, 2461, 2481
Panache	1585
Panama	0009, 0217, 0264, 0216, 0037, 0556, 0247
Panasonic	0650, 1636, 1650, 0108, 0226, 1310, 1210, 0340, 0214, 0361, 0853, 0237, 0367, 0516, 0037, 0556, 0163, 0548, 0771, 0250
Panavision	0037, 0411, 0556
Papouw	0037, 0556
Pathe Cinema	0163, 0238, 0216, 0320, 0292, 0349, 0431, 0552, 0370
Pathe Marconi	0109, 0196, 0237
Pausa	0009
Perdio	0072, 0320, 0163, 0037, 0216, 0282, 0556
Perfekt	0037, 0556
Petters	0037
Philco	0087, 0084, 0074, 0418, 0247, 0552, 0163, 0370, 0037, 0556, 0186
Philex	0551, 0163
Philharmonic	0217
Philips	0556, 0037, 0238, 0721, 1506, 0639, 0605, 1455, 0772, 1304, 1454, 0554, 0043, 0087, 0423, 0343, 0374, 0009, 0200, 0361, 1867, 1887

Brand	Code
Phocus	1289, 1308, 0714, 1652, 1800
Phoenix	0037, 0556, 0370, 0486, 0163, 0087, 0072, 0216, 0320, 0385, 0552
Phonola	0037, 0556, 0087, 0216
Phonotrend	1594, 2155
Pilot	0556, 0037, 0712, 0706
Pioneer	1260, 0760, 0011, 0170, 0166, 0679, 0037, 0556, 0423, 0428, 0370, 0343, 0361, 0109, 0163, 0287, 0486, 0512, 1457
Pionier	0370, 0486
Pixxel	1529
Plantron	0037, 0556, 0264, 0009
Playsonic	0714, 0037, 0217, 0339, 0715, 1800, 1652
Plus	0771, 1552
Plustron	1770
Polar	0037
Polaroid	1523, 1645, 1741, 1720
Policom	0102, 0109, 0196, 0206, 0237, 0238, 0275, 0361, 0163, 0070, 0074, 0084, 0087, 0535
Polytron	0282
Poppy	0009
Portland	0374, 1909, 0624
Powerpoint	0487, 0037, 0556, 0698, 1770, 1802, 1820
Prandoni-Prince	0247, 0516, 0361, 0363
Precision	0217
Premier	0009, 0264, 0891
Prima	0009, 0264, 0303, 0412, 1269, 1507, 1196, 0753
PrimeView	1606
Princess	0698, 1326, 0773
Prinston	1037
Prinz	0072, 0349, 0361, 0194
Profex	0009, 0163, 0431, 0361, 0363
Profi	0009

Brand	Code
Profilo	1556
Profitronic	0037, 0556, 0314, 0102
Proline	0037, 0556, 0625, 0634, 0630, 0411, 0321, 0072, 1376, 1037
Prosonic	0037, 0556, 1739, 0370, 0374, 0371, 0880, 1376, 0668, 0714, 0451, 0216, 0214, 1770, 1314, 0217, 1709, 1732, 0606, 1507, 1324, 1784, 1820, 1865
Protech	0037, 0556, 0217, 0009, 0247, 0349, 0102, 0264, 0431, 0418, 0337, 0668, 0282, 0552, 0163, 0486, 1037
Proton	0178
Proview	1645
Provision	0499, 0037, 0556, 1037, 0714, 1531, 1324
Proxima	0735, 1747
PVision	1191, 0876, 1218
Pye	0037, 0556, 0087, 0554, 0374, 0349, 0412, 2456
Pymi	0009
QONIX	1594
Quadral	0218
Quadro	0753, 1326, 0556, 0037, 1149, 1163, 0796, 1531
Quasar	0247, 0650, 0865, 0009, 0250
Quelle	0037, 1505, 1010, 0011, 0109, 0512, 0535, 0349, 0554, 0191, 0361, 0036, 0217, 0247, 0074, 0327, 0084, 0328, 0070, 0104, 0105, 0668, 0556, 0157, 0195, 0200, 0264, 1037, 0294, 0346, 0421, 0552, 0009
Questa	0036
Radialva	0109, 0218, 0431, 0163, 0037, 0556, 0287, 0337
Radiola	0037, 0556, 0217
Radiomarelli	0087, 0516, 0247, 0037, 0556
RadioShack	0037, 0556, 0178
Radiotone	0009, 0037, 0556, 0428, 0370, 0418, 0412, 0668, 0264, 1037
Rank	0070
Rank Arena	0036, 0157, 0602, 0753, 0796

Brand	Code
RBM	0070
RCA	0625, 0093, 0560, 0335, 0343, 0753, 0796
Realistic	0178
Recor	0037, 0418, 0556
Rectiligne	0037, 0556
Red Star	1556
Rediffusion	0361, 0548, 0036, 0346
Redstar	0037, 0556
Reflex	0037, 0556, 1037, 0668
Relisys	0865, 0876, 0877, 1206, 1207, 1213, 1209, 1298, 1376, 1585, 1741, 1740, 1645
Remotec	0037, 0093, 0250
Reoc	0714, 0634, 1909
Revox	0037, 0808, 0556, 0370
Rex	0206, 0363, 0411, 0247, 0163, 0259, 0264, 0551
RFT	0087, 0292, 0370, 0428, 0072, 0264, 0037, 0556, 0486
Rhapsody	0216
Ricoh	0037, 0556
Rinex	0773, 0418, 0698, 0264, 0706
R-Line	0037, 0556, 0163
Roadstar	1037, 0715, 0009, 0418, 0037, 0556, 0714, 0668, 0218, 0264, 0282, 1189, 1900, 1326
Robotron	0087
Rodex	0037, 0556
Rolsen	1371, 1191, 0037, 0556
Rolson	0819, 2098
Rover	0036, 0877
Rowa	0264, 0698, 0217, 0712, 1441, 0009, 0706, 0216, 0587, 0037, 1006, 0556
Roxy	0448
Royal	0418, 0606
Royal Lux	0421, 0370, 0412, 0335
Rukopir	0556, 0037

Brand	Code
Saba	0625, 1166, 0109, 0560, 0343, 0287, 0087, 0163, 0516, 0361, 0498, 0196, 0335, 0548, 0471, 0650, 0714, 1588, 0250
Saccs	0238
Sagem	0610, 0455, 0282, 0830, 1313, 0618
Saisho	0235, 0634, 0374, 0516, 0177, 0009, 0011, 0217, 0431, 0163, 0264, 0211, 0354
Saivod	0037, 1982, 1163, 0556, 0668, 1556, 0712, 1037
Sakaï	0163
Sakura	1203, 1326
Sakyno	0455
Salora	0194, 0349, 0163, 0356, 0361, 0516, 0363, 0373, 0548, 0339, 0208, 0552, 0480, 0631, 1166, 1556, 0778, 1371, 2239
Salsa	0335
Sambers	0516, 0102, 0314
Sampo	1755
Samsung	0178, 0618, 0587, 0093, 1619, 0556, 1249, 1630, 0644, 1235, 0009, 0037, 0217, 0448, 0482, 0370, 0488, 0060, 0814, 0072, 0264, 0682, 0216, 0163, 2051
Sandra	0216, 0217
Sanela	0238
Sansei	0451
Sansui	0037, 0556, 0706, 0655, 0371, 0602, 0421, 0455, 0888, 0753, 1371, 1191, 1531, 1697, 1553, 1594, 0698, 0264, 0714, 1384, 1248, 1556, 0729, 0806, 1537, 1682, 1703, 2239, 2804
Santon	0009
Sanyo	0208, 1208, 0157, 0292, 0721, 0036, 0011, 0370, 1507, 0339, 0072, 0216, 0217, 0104, 0045, 0555, 0009, 0163, 0373, 0037, 0108, 0556, 0486, 0735, 0893, 0170, 0704, 1647, 1648, 1649, 1654, 1037, 1149, 1163, 1585, 0146, 2461

Brand	Code
Save	0037, 0556
Saville	1908
SBR	0037, 0556, 0043
Schaub Lorenz	0548, 0714, 0361, 0349, 0606, 0486, 0374, 1191, 1194, 1363, 1371, 1324
Schneider	1137, 0037, 0556, 0303, 0349, 0394, 0352, 0336, 0259, 0343, 0217, 0247, 0371, 0361, 0218, 0668, 1037, 0163, 0714, 1909, 1908, 1368, 1982, 0070, 1372
Scotland	0163
Scott	1189, 0178, 0179, 1983
Sears	0178, 0179, 0146
Seaway	0634
Seelver	0556, 1037, 0037
SEG	1037, 0037, 1163, 0556, 0668, 0217, 0487, 0009, 0349, 0163, 0264, 0634, 0036, 0102, 0247, 0362, 0314, 0216, 0552, 0218, 1909, 1149, 0624
SEI	0087, 0102, 1505, 1010, 0552, 0163, 0516, 0349, 0294, 0314, 0206, 0037, 0556, 0177
Sei-Sinudyne	0102, 0206, 0294, 0314, 0516, 1505, 1010, 0552, 0037, 0556, 0087
Seitech	1217, 1372
Seleco	0206, 0363, 0259, 0362, 0163, 0411, 0673, 0551, 0371, 0036, 0264, 0346, 0435, 0630
Sencora	0009
Sentra	0035, 0218, 0009, 0349
Serie Dorada	0178
Serino	0610, 0455, 0216, 0093
SeViC	1705
Sharp	0093, 1193, 1659, 1586, 1393, 0157, 0036, 0491, 0294, 0653, 0186, 0516, 0200, 0053, 2214
Sherwood	1399, 1784
Shinelco	2104
Shintoshi	0037, 0556

Brand	Code
Shivaki	0037, 0556, 0443, 0451, 0374, 0178
Shorai	0294, 0179
Show	0418, 0009, 0072, 0698, 0264, 0706, 0037
Siarem	0552, 0163, 0087, 0102, 0516
Siemens	0191, 0535, 0554, 0200, 0195, 0327, 0328, 0157, 0037, 0556, 0361, 0146
Siera	0037, 0556, 0587
Siesta	0370
Silva	0037, 0556, 0216, 0361
Silva Schneider	0753, 1556, 0037
Silvano	0587
Silver	0036, 0037, 0455, 0556, 0361, 0179, 0715, 0163
SilverCrest	1037, 0037, 0556
SIM2 Multimedia	0673
Simpson	0186
Simz	1820
Singer	0009, 0087, 0698, 1556, 0037, 0556, 0102, 0247, 0435, 0335, 0163, 0371, 0806, 0891, 1537
Sinotec	0773, 0418, 0606, 0698
Sinudyne	1372, 0177, 0087, 0235, 0102, 0294, 0552, 0163, 0361, 0516, 0349, 1505, 1010, 0314, 0206, 0037, 0556, 1908, 0606
Skantic	0356
Sky	0282, 0880, 0037, 0178, 0556, 1606, 1376, 1775, 1745, 1778, 0661, 0865
SKY Brazil	0880
Skymaster	0105
Skysonic	0753, 0796
Sliding	0865, 0880, 1372, 1374, 1375, 1377, 1383, 1388, 1368, 1324
SLX	0668
Smaragd	0487
SmartVision	1183

Brand	Code
S-Media	1217
Soemtron	0865, 1298
Sogera	0320
Sogo	1376, 0606
Solavox	0361, 0072, 0163, 0548, 0037, 0556
Sonawa	0218
Sonber	0102
Sonic	0753
Soniko	0037, 0556
Soniq	1467, 1298, 1702, 2474, 2493, 2829
Sonitron	0208, 0370, 0339, 0217
Sonix	1732
Sonneclair	0037, 0556
Sonoko	0037, 0556, 0009, 0264, 0282, 0217
Sonolor	0208, 0163, 1505, 1010, 0548, 0361, 0282
Sontec	0037, 0556, 0370, 0294, 0009
Sontech	1983
Sony	1505, 1651, 1625, 1010, 1751, 0011, 0353, 0036, 0810, 1925, 0102, 0314, 0742, 0037, 0556, 0157, 0093, 0170, 0074, 1685, 1825
Sound & Vision	0102, 0218, 0374, 0037, 0556
Soundesign	0178, 0179, 0186
Soundwave	0037, 0556, 0320, 0418, 0715
Soyea	0773
Soyo	1709
Spectra	0009
Ssangyong	0009
Staksonic	0009
Standard	0037, 0556, 1037, 0218, 0009, 0217, 0320, 0374, 1709
Starion	1037
Starlite	0009, 0552, 0163, 0037, 0556, 0264, 0412
Stenway	0282, 0218
Stern	0206, 0259, 0163, 0363, 0264, 0411, 0551, 0435

Brand	Code
Stevison	1982, 1556
Strato	0037, 0556, 0264, 0009
Strong	1163, 1149, 1037, 0037, 0556
Stylandia	0217
Sungoo	1248
Sunic Line	0037, 0556
Sunkai	0294, 0355, 0321, 0455, 0218, 0235, 0610, 0037, 0556, 0487, 0531, 0865
Sunny	0037
Sunstar	0371, 0037, 0556, 0009, 0264
Sunwatt	0455
Sunwood	0037, 0556, 0009
Super	1189
Superla	0516, 0216, 0217
Supersonic	0009, 0208, 0556, 0698, 0264, 0455, 0037
SuperTech	0009, 0037, 0556, 0216, 0218
Superton	0431
Supervision	0698, 0264
Supra	0178, 0374, 0009, 0037
Susumu	0335, 0218, 0287
Sutron	0009
SVA	0698, 0264, 0455, 0208, 0706, 0587, 0865, 0872
Svasa	0698, 0208, 0706, 0264, 0455
Swedx	1606
Swissline	0247
Swisstec	1606, 0880, 1376, 0865, 1775, 1776, 1745, 1778, 2104
Sydney	0216, 0217
Sylvania	0186
Sysline	0037, 0556
Sytong	0216
T+A	0447
Tandberg	0367, 0411, 0109, 0337, 0196, 0362, 0361, 0163
Tandy	0218, 0072, 0217, 0247, 0093, 0163

Brand	Code
Targa	1371, 1191, 0618
Tashiko	0036, 0043, 0217, 0170, 0216, 0163, 0363, 0146
Tatung	0037, 1553, 1248, 1556, 1056, 0556, 0072, 0516, 0217, 0011, 0629, 1908, 1371, 1259, 1191, 1563, 1372, 1324, 1720
TCL	1699, 0625, 0892, 2958
TCM	0714, 1289, 0808, 1308
Teac	0698, 1645, 0037, 1037, 0556, 0512, 0712, 0668, 0455, 0217, 0706, 0264, 1909, 0178, 0009, 0412, 0349, 0721, 0282, 0336, 0418, 0431, 0755, 0170, 0714, 1149, 1755, 1203, 1006, 1621, 1529, 1363, 0587, 1770, 1709, 0624, 0892, 1637, 1701, 1794, 1795, 1820, 1983, 1985, 2241, 2607, 2714, 2761, 3084, 3163
Tec	0217, 0009, 0247, 0471, 0335, 0337, 0259, 0552, 0037, 0556, 0361, 0163
Tech Line	0037, 0556, 0668, 1163
Tech Lux	1189, 1706
Techica	0218
Technema	0320
Technica	1982
Technics	0650, 0250
Technika	1585, 1865, 1983
TechniSat	0655, 0037, 0556, 0163, 2155
Technisson	0714, 1289, 1652
Techno	1585, 1037, 2267
Technol Ace	0179, 0698, 0264, 0634, 0374, 0216
Technosonic	0037, 0556, 0499, 0880, 1326, 1982, 0625, 1324
Technotrend	1531, 1702, 2155
Techvision	1709, 1531, 1771
Techwood	1163, 1037
Teckton	1376
Tecnimagen	0556
Teco	1040, 1313, 1523

Brand	Code
Tedelex	0217, 0698, 0706, 0606, 0418, 0037, 0009, 0208, 0891, 0587, 0556, 0431, 1709, 1531, 0264, 1699, 1218, 1703, 0726, 0806, 1537, 1681
Teiron	0009
Tek	0820, 0037, 0698, 0009
Teknika	0060, 0179, 0186
TELE System	0876, 1368
Teleavia	0109, 0287, 0196, 0490, 0343
Telecor	0037, 0556, 0163, 0218, 0217, 0259, 0394
Telefunken	0625, 0560, 0587, 0074, 0109, 0698, 0712, 0343, 0498, 0820, 0896, 0471, 0780, 0891, 0287, 0084, 0101, 1703, 1706, 0335, 0073, 0196, 1536, 0753, 0706, 0037, 0556, 0486, 0714, 0490, 1556, 0346, 0754, 0819, 1326, 1588, 1681
Telefusion	0037, 0556
Telegazi	0037, 0163, 0259, 0218, 0264, 0556
Telemeister	0320, 0037, 0556
Telesonic	0037, 0556
Telestar	0009, 0037, 0556, 0412
Teletech	0037, 0556, 0668, 0009, 0247, 0337, 1037
Teleton	0217, 0275, 0206, 0163, 0349, 0259, 0186, 0036, 0363
Televideon	0320, 0552, 0163, 0216
Television	0037, 0556
Telexa	0102
Telstar	1702
Temco	0294
Tempest	0009, 0037, 0556, 0264, 0455
Tennessee	0037, 0556
Tensai	0104, 0218, 0037, 0556, 0217, 0294, 0320, 0009, 0105, 0374, 0371, 0377, 0247, 0715, 0163, 1037
Tenson	0320, 0009
Tesla	1037, 0037, 0668, 0714, 1652, 0715, 1137, 0630, 0371, 0753, 0556, 0238, 0610

Brand	Code
Tevion	1248, 1298, 1645, 1259, 0037, 1190, 0556, 1556, 0808, 0865, 0668, 1137, 1771, 0714, 1037, 1585, 1741, 1289, 1800, 2023, 2241
Texet	0217, 0374, 0009, 0216, 0218
Thes	2039
Thomson	0625, 0560, 0343, 0287, 0109, 0471, 0335, 0196, 0237, 0037, 0556, 0490, 0320, 0349, 0216, 0552, 1588
Thorn	0108, 0109, 0225, 0073, 0343, 0190, 0361, 1505, 0238, 0192, 1010, 0074, 0084, 0535, 0499, 0037, 0072, 0556, 0104, 0011, 0335, 0512, 0036, 0043, 0045, 0374, 0070, 0035, 0101, 0356
Thorn-Ferguson	0104, 0108, 0109, 0190, 0192, 0238, 0361, 0499, 0335, 0073, 0035
Time	1702
Tiny	1196, 1269
TMK	0178, 0177
Tobishi	0218
Tokai	0072, 0037, 0556, 0337, 0668, 0448, 0163, 0217, 0374, 0009, 1037, 0552
Tokaido	1037
Tokyo	0216, 0035, 0448, 0303
Tomashi	0282, 0218
Tongtel	0780, 0587
Top Show	0698, 0773, 0418, 0009, 0264, 0706
Topline	1037, 0668
Toshiba	1508, 0508, 0060, 0035, 1289, 0714, 0036, 0070, 0102, 0241, 1164, 1582, 1704, 0217, 0109, 0490, 0195, 0191, 0618, 1908, 0009, 0698, 0037, 0832. 1556, 0650, 1037, 2732
Tosumi	1982, 1770
Towada	0349, 0102, 0314, 0217, 0552
Toyoda	0009, 0371, 0264, 1709
Trakton	0009, 0264, 0217

Brand	Code
TRANS-continents	0668, 1037, 1374, 1377, 0865, 0556, 0037, 0486, 0217, 2023
Transonic	0037, 0556, 0455, 0587, 0512, 0264, 0698, 0712, 0418, 0009, 1363, 1326, 0858, 1069, 2112, 2354
Transtec	0216
Trevi	2112
Triad	0037, 0556, 0218, 0009
Trical	0157
Trident	0516, 0217
Trio	1563, 1553, 1645, 1248
Tristar	0264, 0218
Triumph	0177, 0516, 0346, 0556, 0037
Tsoschi	0282
TVE	2239
TVTEXT 95	0556
Uher	0037, 0556, 0206, 0320, 0303, 0374, 0418, 0486, 0370, 0259, 0480
Ultra	0192
Ultravox	0087, 0102, 0374, 0247, 0216, 0552, 0163, 0314, 0037, 0556
UMC	1606, 1775, 1745
Unic Line	0037, 0556, 0473, 0455, 0349
Uniden	2112
United	0714, 0037, 0715, 0556, 1908, 1037, 0587, 1982, 1652, 1770, 1820, 1983
Unitek	1709
Universal	0714, 0037, 0556
Universum	1037, 0037, 1163, 0346, 0668, 0105, 0480, 0195, 0473, 1149, 0104, 0535, 0361, 0011, 0512, 0247, 0492, 0370, 0200, 0418, 0294, 0036, 0157, 0070, 0552, 0163, 0264, 0556, 0421, 0488, 0411, 0074, 0327, 0328, 1505, 1010, 0349, 0217, 0109, 0362, 0337, 0177, 0631, 0554, 0009, 0084, 0170, 0618, 0146

Brand	Code
Univox	0037, 0556, 0337, 0087, 0163, 0238
Utax	0163
V2max	0865
V7 Videoseven	1755, 0178, 0880, 1376, 1217, 1666, 0618, 1651, 1505
Vanguard	0037, 0556
Venturer	1865
Venus	1326
Vestel	1037, 1163, 1585, 0037, 0668, 0552, 0163, 0217, 0556
Vexa	0009, 0037, 0556
Victor	0653, 0036, 0053, 0250
Videologic	0218, 0216
Videologique	0216, 0218, 0217
Videomac	0009
Videosat	0247
VideoSystem	0037, 0556
Videotechnic	0216, 0320, 0217, 0374
Videoton	0356, 0163, 0431, 0490
Vidikron	1292, 0102, 0673, 0735
Vidtech	0036, 0178
Viewpia	0876, 1784
ViewSonic	1578, 1755, 1330, 1588, 1542, 2111
Viper	0337
Visiola	0216
Vision	0037, 0264, 0556, 0320, 0488, 0217, 1730
Vistar	0206, 0361
Vistron	1363
Vivax	1326, 1308, 0037, 1709
Vivo	1697
VMS	0314
Vortec	0037, 0556
Voxson	0087, 0037, 0556, 0363, 0418, 0163, 0178, 2706
Vue	1570
Walker	1149

Brand	Code
Waltham	0217, 0356, 0418, 0287, 0385, 0037, 0556, 0668, 0109, 1037, 0431, 0490, 0163, 0443
Wards	0179
Watson	1037, 1248, 1259, 0320, 0556, 0037, 0163, 0009, 0668, 0218, 0394, 1908, 1376, 0327, 0714
Watt Radio	0102, 0349, 0552, 0163, 0216, 0314, 0486, 0428
Wega	0037, 0556, 0036, 0087
Wegavox	0009, 0037, 0556
Welltech	0714, 1652
Weltblick	0037, 0556, 0320, 0217
Weltstar	1037
Weston	0037, 0556
Wharfedale	0037, 0896, 0891, 0556, 0698, 1556, 0706, 1372, 1324, 1681, 1983
White Westinghouse	0320, 0216, 0037, 0556, 0337, 1909, 0624
Wilson	0556
Windsor	0668, 1037
Windstar	0282, 0337
Windy Sam	0556
Wintel	0714, 1006
World-of-Vision	0880, 0890, 0865, 1289, 1298, 0877, 1606, 1217, 1732
Worldview	0455, 0045
Woxter	1531
Xenius	0634
Xi-En	1770
Xiron	1983
XLogic	0698
XMS	1441
Xomax	1770
Xoro	1196, 1217, 1507
Xrypton	0037, 0556
X-View	1191
Yalos	1771

Brand	Code
Yamada	1340
Yamaha	0650, 0797, 1526, 1576
Yamishi	0282, 0455, 0218, 0037, 0556, 0217
Yapshe	0250
Yokan	0037, 0556
Yoko	0217, 0037, 0556, 0218, 0264, 0009, 0431, 0421, 0370, 0339, 0216, 0247, 0373
Yorx	0218
Ytawai	1531
YU-MA-TU	0037
Zaapa	1189
Zanela	0238
Zanussi	0206, 0363, 0217
Zenith	1909, 0624
Zenor	0339
Zepto	1585
Ziggo	1818
ZX	1908



www.fetchtv.com.au

© Fetch TV Pty Limited. ABN 36 130 669 500. All rights reserved. Fetch TV Pty Limited is the owner of the trade marks Fetch TV. The set top box and the Fetch TV service may only be used lawfully and in accordance with relevant terms of use of which you are notified by your service provider. You must not use the electronic program guide, or any part of it, for any purpose other than private and domestic purposes and you must not sub-licence, sell, lease, lend, upload, download, communicate or distribute it (or any part of it) to any person.

Version: July 2016