









Fetch TV Remote 1

Direct Remote Set Up

Welcome to the Fetch TV remote setup guide. Follow these steps to program your Fetch TV remote to control your TV.

Before you start, find your TV brand and related codes in the list ([see Page 4](#)). You may need to try each code to find the best match for your TV.





- 1 Press  .
- 2 Hold down  for 3 seconds until  flashes once, then, after a pause, twice more.
- 3 On your remote, press the first of the 4 digit codes for your brand of TV.
 - If the code is valid,  flashes twice.
 - If the code is invalid,  flashes once only on the last digit entry. You will need to repeat from Step 2.
- 4 Turn your TV on or off using the  button.
 - If this does not work, repeat from Step 2 using the next code on the list for your TV brand.
 - If you have turned the TV on or off using the Fetch TV remote, the setup has been a success.




How to use your remote





After setting up your Fetch TV remote, you can control many functions of your TV.


 **TV Mode** – Press this button to control your TV. It will flash once to indicate the remote is in TV mode.

 **Volume Up/Down** - Turn the volume up or down on the TV.


 **STB Mode** – Press this button to control your set top box. You can tell if you are in TV mode or STB mode by seeing which button –  or  – lights up when you use the remote.

 **Mute** – Toggle the sound on or off on your TV

 **AV Source** – Changes the input source – e.g. HDMI – on your TV.

 Some buttons may not work with your TV. You may wish to try each code through the Direct Remote Set Up process. ([see Page 2](#))

To find out your **TV brand & code** from A to Z.

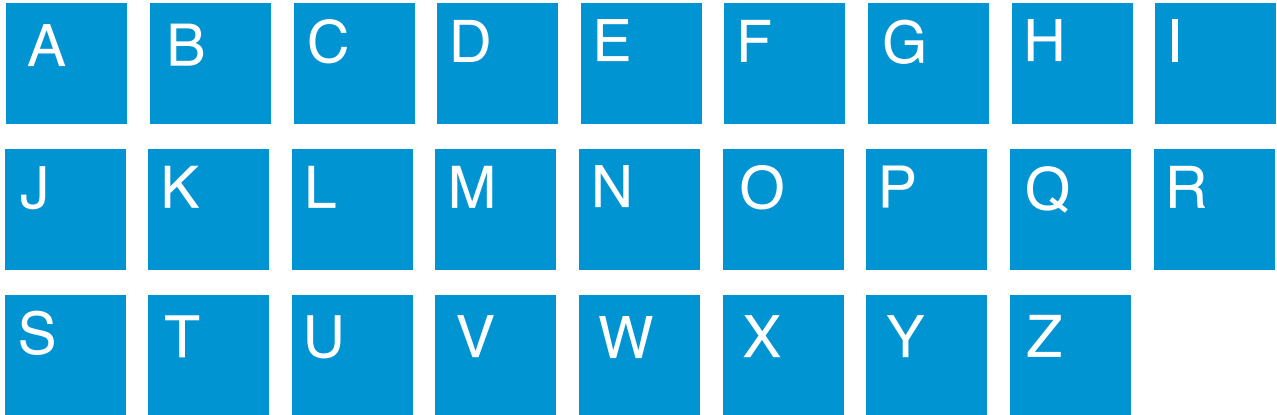

eg. if your TV brand is “Universum”, click on “U”.

To find out your **DVD brands & codes**, click on

[DVD brands & codes list](#)

To find out your **Satellite codes**, click on

[Satellite code list](#)

TV brands and codes

- A -

A.R. Systems	1726, 0067, 0403, 0586, 0382, 0404, 0485
Accent	0039, 0067, 0586
Acer	1369, 1539, 1433, 1674
Acoustic Solutions	1179, 1553, 1067
Adcom	0655
ADL	1247, 0920
Admiral	0123, 0393, 0448, 0117, 0193, 0294
Advent	0906
Adyson	0247, 0246
AEA	0067, 0586
AEG	0636, 1586, 1067, 1179, 1402, 1193
Aftron	0921
Agashi	0246, 0294, 0247
AGB	0546
Agef	0117
Aiko	0039, 0067, 0099, 0586, 0401, 0246, 0065, 0463 0910, 0102, 0391, 0221, 0294, 0247

Aim	0067, 0102, 0442, 0586, 0783, 0238, 0736, 0728 0664, 0404, 0481, 0485, 0636, 0529
Airis	0874, 1561
Aiwa	1938, 1535
Akai	0391, 1356, 0238, 0401, 0067, 0833, 0463, 0221 0065, 0039, 0102, 0783, 0248, 0582, 0744, 0193 0736, 0518, 0728, 0546, 0745, 0632, 0586, 0578 0611, 0510, 0247, 0661, 0246, 0294, 0478, 0208 0407, 0636, 1067, 1938, 0503, 1289, 1278, 1338
Akashi	0039
Akiba	0248, 0312, 0485, 0067, 0586, 0324
Akira	0220, 0448, 0783, 0067
Akito	0067, 0586
Akura	0067, 0586, 0698, 1675, 1800, 0442, 0039, 0248 0312, 0388, 0294, 0744, 2012, 1393
Alaron	0209, 0246
Alba	0067, 1067, 0586, 0744, 0039, 0448, 0400, 0265 0401, 0698, 0385, 0248, 0246, 0277, 0461, 0193 0517, 0241, 0611, 0066, 1938, 0473, 0581, 1761
Alcyon	0241
AlfaView	1236
Alkos	0065

Allorgan	0236, 0324, 0247
Allstar	0067, 0586
All-Tel	0895, 1299
Ambassador	0207
Amitech	1311, 0685, 1498
Amoi	1559
Amplivision	0247, 0400, 0350
Amstrad	0207, 0039, 0546, 0294, 0384, 0401, 0248, 0067 0586, 0463, 0442, 0392, 1067, 0611, 2012
Anam	0067, 0586, 0039, 0680
Anam National	0067, 0586, 0680
Andersson	1193, 1179, 1615
Anex	0451
Anglo	0039 0294
Anitech	0039, 0294, 0067, 0586, 0312, 0132
Ansonic	0400, 0067, 0586, 0039, 0698, 0404, 0193, 0322 0132, 0441, 0289, 0277, 0458, 0134
AOC	1395, 1119, 1618
Apollo	0503
Arc en Ciel	0139, 0226

Arcam	0246, 0247
Arçelik	0744
Ardem	0516, 0744, 0663, 0067, 0586
Arena	0067
Aristona	0586, 0067
Art Mito	1615
Arthur Martin	0193, 0267
ASA	0135, 0376, 0100, 0134, 0117, 0193, 0209
Asberg	0067, 0586, 0132
ASK	1777
Asora	0039
Astra	0067, 0586
Asuka	0248, 0247, 0246, 0294, 0312
ATD	0728
Atec	1636, 1758
Atlantic	0067, 0586, 0246, 0236, 0350, 0289
Atori	0039
Auchan	0193

Audiosonic	0039, 0067, 0404, 0850, 0586, 1830, 1338, 0139 1733, 0744, 0745, 0247, 0400, 0367, 0294, 0248 0516, 0458
Audioton	0247, 0516, 0400, 0294, 0458
Audiovox	0481
Audioworld	0728
Aumark	0090
Autovox	0117, 0236, 0267, 0379, 0247, 0277, 0366
AVP	1938
AWA	0041, 0066, 0039, 0187, 0404, 0481, 0442, 0067 0586, 0246, 0636, 0247, 0138, 0294, 2015, 1406 0208, 0728
Axxent	0039
Axxon	0744

[Go Back](#)

TV brands and codes

- B -

B&D	1247
Baier	0906, 1402
Baird	0139, 0373, 0220, 0222, 0102, 0103, 0247, 0238 1226, 0636
Bang & Olufsen	0595, 0117, 0305
Barco	0582, 0193
Base	1600, 0810
Baseline	1274
Basic Line	0404, 0067, 0193, 0698, 0586, 0039, 0248, 0312 0247, 0485, 0369, 1067
Bastide	0247
Bauer	0039, 0728, 0736, 0294
Baur	0039, 0333, 0565, 0225, 0542, 0067, 0586, 0584 0221, 0391, 0379, 1535, 1040
Bazin	0247
BBK	1771
Beaumark	0208
Beko	0744, 0516, 0065, 0745, 0067, 0448, 0458, 1830 0400, 0586, 0636, 0838, 1682
Belson	1221

Bennett	0586, 0067
BenQ	1242, 1592, 1062
Bensten	1600, 1356
Beon	0067, 0586, 0448
Berthen	0698
Best	0367, 0400, 0451
Bestar	0067, 0586, 0400, 0404
Bestar-Daewoo	0404
Bestwell	1356
Binatone	0247
Black Diamond	0850, 1067, 0586, 0783, 1193, 0617
Black Panther	0132
Black Star	0277
Black Strip	0065
Blackway	0312, 0248
Blaupunkt	0584, 0225, 0221, 0565, 0230, 0357, 0358, 0478 0485, 0200, 0066
Blauren	0404
Blue Media	1758, 1636

Blue Sky	0067, 1402, 1067, 1739, 0744, 1179, 0517, 1801 0698, 0745, 0655, 1682, 1939, 0586, 0248, 0312 0485, 1938, 1221, 0838, 1393, 1418, 1344, 1769
Blue Star	0312
BlueH	1775
Bondstec	0277
Boots	0247, 0039
Bork	1393
Bosch	0350, 0357
BPL	0067, 0586, 0312, 0403
Brandt	0655, 0139, 0267, 0226, 0317, 0365, 0501, 0373 0590, 1395
Brandt Electronique	0317, 0365
Brimax	1739
Brinkmann	0067, 0586, 0698, 0448, 0516
Brionvega	0067, 0586, 0392, 0117, 1544
Britannia	0246, 0247
Brother	0294
Bruns	0117, 0458, 0516
BSR	0193, 0324, 0582, 0391

BTC

0248

Bush

1067, 1356, 0744, 0067, 0698, 1682, 0248, 0193
0379, 0039, 0066, 0401, 0265, 0312, 0385, 0393
0404, 0294, 0391, 0517, 0241, 0238, 0247, 1586
0728, 0611, 0324, 0582, 0586, 1930, 1938, 0808
1289, 2012, 1278, 1712, 1761, 1196, 0617, 1338

[Go Back](#)

TV brands and codes

- C -

Cameron	1553, 0586
Camper	0067, 0586, 0516
Candle	0216
Canton	0248
Capsonic	0294
Carad	0640, 0067, 0586, 0698, 1067
Carena	0485, 0067, 0586
Carrefour	0066, 0100, 0067, 0586
Carver	0200
Cascade	0039, 0067, 0586
Casio	0067, 0586, 0193, 0379
CAT	1712
Cathay	0067, 0586
CCE	0067, 0586, 0247
Celestial	0850
cello	1800
Centrex	0810, 0921, 1566, 0728, 1761

Centrum	1067
Centurion	0067, 0586
Century	0117, 0277, 0268
CGE	0104, 0114, 0448, 0277, 0582, 0400, 0193
Cimline	0039, 0265, 0248
Cineral	0481
Cinex	1196, 1586
Citizen	0481, 0090, 0216
City	0039
Clarivox	0448, 0067, 0586, 0100, 0132
Clatronic	0067, 0400, 0401, 0744, 0248, 0294, 0586, 0247 0277, 0039, 0132, 0350, 0636, 1193
Clayton	0415, 1067
CMS	0246
CMS hightec	0247
Cobolt	0921
Combitech	1938
Concorde	0039
Condor	0350, 0067, 0586, 0400, 0246, 0039, 0312, 0132 0277, 0448, 0344, 0441, 0193, 0294

Conia	1675, 0850, 1553
Conrac	0838
Conrad	0067, 0586
Contec	0246, 0039, 0187, 0041, 0066, 0294, 0067, 0586
Continental Edison	0139, 0267, 0226, 0317, 0517
Cosmel	0039, 0367, 0067, 0586
Crosley	0117, 0277, 0104, 0114, 0582, 0193
Crown	0039, 0742, 0400, 0516, 0067, 0586, 0517, 0744 0636, 0745, 0451, 0403, 0448, 0238, 0683, 0369 1067, 1682, 0698
Crystal	0461
CS Electronics	0246, 0248, 0277
CTC	0277
Curtis Mathes	0090, 0123, 0481, 0196
CWR-Tech	1402
CyberHome	0824, 1206
Cybertron	0248
Cytronix	1328

[Go Back](#)

TV brands and codes

- D -

D.Boss	1420, 0067
Daewoo	0664, 0691, 1233, 0529, 0404, 1939, 0067, 0586 0039, 0246, 0248, 0247, 0481, 1167, 1938, 0910 1248, 0906, 0895, 0728, 0744, 0736
Dainichi	0248, 0246
Dansai	0067, 0586, 0294, 0065, 0246, 0039, 0066, 0247 0238
Dansette	0442
Dantax	0400, 0516, 1682, 0744, 0636, 0745, 1938
Datsura	0403, 0238
Dawa	0039, 0067, 0586
Daytek	0728, 1237, 0736, 1406, 1404, 0294, 1661
Dayton	1237, 1404
Daytron	0039, 0404, 0067, 0586
de Graaf	0238, 0193, 0578, 0393
DEC	0921, 1356, 1220, 0926
Decca	0102, 0546, 0067, 0586, 0247, 1167, 1938, 1086
Deitron	0067, 0586, 0404, 0248

Dell	1433
Denko	0294
Denver	0067, 1402, 0586, 0636, 1219, 0617, 1739
DER	0220
Desmet	0350, 0067, 0586, 0039, 0117
DGM	1465
Diamant	0067, 0586
Diamond	0294, 0728, 0039, 0246, 0401, 0850, 0926, 0736
DiBoss	0067, 0586
Digatron	0067, 0586
Digihome	1179
Digiline	0067, 0586, 0135, 0698
DigiLogic	0067, 0586
Digimate	0920
Digital Device	1636
Digitek	1739, 1801
Digitex	0850
Digitor	0067, 0586, 0918, 2015, 1527, 1733
Digivision	0391

DigiX	0910
DiK	0067, 0586
Dikom	1733, 1726
Dixi	0039, 0067, 0586, 0277, 0247, 0117
DK digital	1692
DL	0921, 0810, 0067, 0617, 0895, 1393, 1356, 1233
DMTECH	1368
Domeos	0698, 0067, 1067
Domland	0424
Doric	0379
Dream Vision	0703, 1734
DSE	0918, 1586, 1291, 2015, 1527, 0850, 1307, 1733 1196, 1593, 1661, 0728, 1712
DTS	0039
Dual	0379, 0247, 0373, 0366, 0067, 0586, 0289, 0382 0424, 0333, 0582, 0193, 0561, 1167, 0661, 1179 1067, 0808, 1402, 1193
Dumont	0117, 0134, 0132, 0247, 0100 0102
Dunai	0193
Durabrand	0067, 0586, 1682

Dux	0067, 0586
D-Vision	0067, 2012, 0586
DVX	0921
Dynatron	0067, 0586

[Go Back](#)

TV brands and codes

- E -

e:max	0636, 1561, 1402
Easy Living	1278, 1289, 1583, 1739, 1247, 1338, 1661, 0907 1196, 1586, 1696, 1324
Ecco	0803, 0736, 0728
Edison-Minerva	0517
Eiki	0765
Elbe	0441, 0392, 0465, 0660, 0268, 0640, 0289, 0322 0400, 0193, 0067, 0586, 0248, 0221, 0581, 0247 0546, 0391, 0582
Elbe-Sharp	0546
Elcit	0117, 0277, 0546, 0132, 0582, 0193
Electrion	1615
Elekta	0039, 0067, 0586, 0294, 0312
Elfunk	1238, 1067
ELG	0067, 0586
Elin	0246, 0067, 0586, 0135, 0134, 0578, 0391, 0478 0379, 0193, 0039
Elite	0248, 0067, 0586, 0350
Elman	0132

Elonex	1806
Elta	0039, 0294, 0246, 0461, 1692
Emco	0277
Emerson	0207, 0744, 0208, 0209, 0117, 0277, 0067, 0586 0401, 0100, 0312, 0350, 0391, 1939, 0516, 0400 0193, 0351, 0698
e-motion	1739
Emperor	0312
Enzer	0783, 0803
Epson	0863, 1409
Erae	1401, 1221
Erisson	1712
Erres	0067, 0586
ESC	0067, 0586, 0247
Estèle	0582, 0193
Etron	0067, 0586, 0850, 0039, 0193
Eurofeel	0294, 0247
EuroLine	0067
Euroman	0246, 0294, 0067, 0586, 0247, 0451, 0400
Europa	0067, 0586

Europhon

0067, 0546, 0132, 0193, 0247, 0586, 0344, 0277
0582, 0461, 0246

Evesham

1278, 1289, 1758, 1593, 1636, 1566

Excel

0067, 0586

Excello

1067

Expert

0236, 0289, 0193

Exquisit

0067, 0586, 0277

[Go Back](#)

TV brands and codes

- F -

Fagor	0067, 0586
FairTec	1221, 1403
Family Life	0067, 0586
Fenner	0404, 0039
Ferguson	0103, 0655, 0317, 0222, 0220, 0365, 0268, 0139 0590, 0067, 0586, 0065, 0373, 0683, 0134, 0138 0391, 0501, 0578, 0473, 1067, 1938
Fidelity	0193, 0542, 0393, 0067, 0586, 0401, 0442, 0561 0246, 0294, 1938, 0391
Filsai	0247
Finlandia	0238, 0376, 0578, 0391, 0193, 0393, 0102, 0317 0373, 0075
Finlux	0135, 0134, 0067, 0586, 0744, 0376, 1615, 0247 0102, 0582, 0193, 0546, 0745, 0100, 0117, 0209 0132, 0344, 0441, 0661, 0522, 0510, 1586, 0659 0503, 0448, 0636, 0838, 1278
Fintec	2012
Firstline	0067, 0586, 0404, 0698, 0744, 0193, 0039, 0324 0351, 0246, 0415, 0277, 0582, 1939, 0344, 0132 0247, 0441, 0379, 0561, 0268, 0102, 0265, 0238 0391, 1067, 1221, 0838, 1393, 1193, 1418, 1401 1338

Fisher	0134, 0247, 0066, 0238, 0400, 0585, 0075, 0117 0187, 0391, 0582, 0193, 0333, 0379, 0102
Flint	0067, 0586, 0640, 0102, 0248, 0485, 0294
FNR	0132
Force	1179
Formenti	0193, 0067, 0586, 0516, 0246, 0117, 0350, 0582
Formenti-Phoenix	0246, 0350, 0582
Fortress	0123, 0117
Fraba	0067, 0586, 0400, 0561
Friac	0039, 0067, 0586, 0132, 0451, 0400, 0529, 0685 0640
Frontech	0277, 0294, 0379, 0393, 0461, 0478, 0247, 0039 0193
Fuchsware	0810
Fujicom	1739
Fujimaro	0895
Fujitsu	0209, 0713, 0883, 0216, 0839, 0236, 0102, 0132 0344, 0247, 0193, 0039, 0382, 0067, 0586, 0391 0289
Fujitsu General	0039, 0216, 0247, 0236, 0193

Fujitsu Siemens

1696, 1328, 1289, 1278, 1403, 1193, 0838, 0839

Funai

0209, 1424, 1067, 1696, 0698, 0294 ,0324, 0333
0442, 1535, 0744

Futronic

0294, 0728

Future

0067, 0586

[Go Back](#)

TV brands and codes

- G -

Gaba	1067, 0067
Galaxi	0132, 0067, 0586, 0391, 0193
Galaxis	0400, 0448, 0067, 0132, 0586
Galeria	0039
GBC	0582, 0193, 0039, 0404, 0248, 0393
GE	0373, 0765, 0208, 0312, 0481, 0590, 0317, 0139 0365, 0655
Geant Casino	0193
GEC	0193, 0391, 0379, 0067, 0546, 0586, 0073, 0102 0247
Geloso	0277, 0039, 0393, 0582, 0193, 0404
General	0139, 0317, 0501, 0216
General Electric	0373, 0317
General Technic	0039
Genesis	0039, 0067, 0586
Genexxa	0248, 0067, 0586, 0442, 0193, 0039
Gericom	0895, 1636, 1328, 1236, 1247, 0910, 0838
Gevalt	1401, 1221

G-Hanz	1393
Giant	0247, 0039
G-Luxon	0874
Gold	1800
Goldfunk	0698
Goldhand	0246
Goldline	0367
GoldStar	0067, 0039, 0400, 0407, 0247, 0277, 0208, 0246 0586, 0461, 0193, 0391, 0139, 0393, 0636, 0744 0745, 0485
Gooding	0517
Goodmans	0664, 0745, 1289, 1067, 1278, 0067, 0529, 0586 0744, 0698, 1939, 0404, 0066, 0294, 0102, 0546 0039, 0209, 0517, 0401, 0373, 0265, 0065, 0510 0590, 0247, 0365, 0248, 0481, 1938, 0660, 0691 1930, 0910, 1338, 0617, 1406, 2015, 1179, 1675 1712
Gorenje	0400, 0451
GP	0783
GPM	0248
Gradiente	0683, 0200, 0067, 0586
Graetz	0744, 0391, 0401, 0193, 0067, 0369, 0586, 1193

Granada 0067, 0586, 0256, 0386, 0075, 0102, 0138, 0238
0247, 0066, 0369, 0546, 0503, 0365, 0590, 0193
0393, 0255, 0373, 0578

Grandin 0067, 0586, 0039, 0193, 0640, 0744, 0745, 0698
0404, 0350, 0312, 0248, 0485, 1067, 0895, 1221
0910, 1404, 1405, 1407, 1410, 1418

Gronic 0132, 0247, 0193

Grundig 0225, 0538, 1401, 1310, 1221, 1253, 0565, 0221
1612, 0584, 0100, 1067, 0517, 0067, 0473, 0736
0267, 0586, 0617, 0039, 0066, 0400, 0770, 1938
0660, 1338, 0208, 1406, 1830, 0373, 1289

Grunkel 1193

Grunpy 0209

[Go Back](#)

TV brands and codes

- H -

H&B	0838
Haaz	0736
Haier	0728, 0294
Halifax	0294, 0246, 0247
Hammerstein	0294, 0090
Hampton	0246, 0247
Hanimex	0248, 0324, 1938
Hannspree	1806
Hanseatic	0067, 0586, 0529, 0379, 0193, 0391, 0322, 0312 0424, 0350, 0664, 0458, 0400, 0691, 0039, 0324 0247, 0403, 0461, 0117, 0407, 0366, 0744, 0838 0516, 0655
Hantarex	0039, 0067, 0586, 0132, 0546, 0268, 0859, 1368
Hantor	0067, 0586
Harley Davidson	0209, 0073
Harsper	0895
Harwa	0803, 1226, 1299
Harwood	0039, 0442, 0067, 0586, 0517

Hauppauge	0067, 0586
HCM	0039, 0442, 0067, 0586, 0247, 0248, 0448, 0312 0294
Hedzon	0586, 0067
Hema	0247, 0039
Hemmermann	0379
Hicon	1497, 1328
Hifivox	0139, 0226
Higashi	0246
Highlander	1561
Highline	0294, 0067, 0586
Hikona	0248
Hinari	0238, 0067, 0586, 0039, 0248, 0066, 0209, 0193 0385, 0473, 0241, 0517, 0265, 0324, 0294, 1938
Hisawa	0312, 0248, 0485, 0640, 1938, 0744
Hisense	1393, 1344, 0238, 1056, 1103, 0728, 0921, 0810
Hit	0117
Hitachi	1606, 1802, 0511, 0608, 0180, 0255, 0379, 0138 0774, 1615, 0386, 1067, 1514, 1511, 1255, 0664 0503, 0066, 0193, 0582, 0373, 0226, 1193, 0606 1224, 0529, 1179, 0827, 0073, 0224, 0510, 0546

Hitachi	0102, 0067, 0586, 0139, 0393, 0578, 0208, 1167 0135, 0522, 0391, 0542, 0659, 1990, 0907, 0247
Hitachi Fujian	0858, 0138, 0180, 0067, 0586, 0255, 0606, 0529
Hitsu	0039, 0640, 0485, 0248
HMV	0117
Höher	0744, 1586, 0895, 1193
Home Electronics	0636
Hornyphon	0067, 0586
Hoshai	0248, 0485, 0312
Huanyu	0404, 0246
Hugoson	0920, 1696, 1247
Humax	1565
HYD	1661, 1406
Hygashi	0247, 0246
Hyper	0039, 0246, 0247, 0277
Hypersonic	0391
Hypson	0067, 0586, 0744, 0745, 0294, 0247, 0312, 0485 0268, 1938, 1067, 0698, 0516

Hyundai

0067, 0833, 0895, 1699, 0586, 0736, 0783, 1356
1561, 1274, 0728, 1324, 0906, 1311, 1800, 1307
1498, 0294, 1586, 1036, 0918, 1067, 1661, 1636
1406, 0808, 1593

[Go Back](#)

TV brands and codes

- | -

Iberia	0067, 0586
ICE	0294, 0067, 0401, 0039, 0586, 0248, 0247, 0246
Ices	0248, 0246
Ict	0067, 1167, 0586
iDEAL	1586
IIsonic	1406
Iiyama	1247, 0920
Imperial	0067, 0193, 0400, 0104, 0114, 0538, 0586, 0660 0441, 0391, 0379, 0448, 0277, 0226, 0461, 0561 0582
Indesit	0267
Indiana	0067, 0586
InFocus	0782, 1194, 1236, 1460, 1777
Ingelen	0517, 0640, 0744, 0193, 0391
Ingersoll	0039
Inno Hit	0039, 1067, 0102, 0067, 0586, 0248, 0247, 0546 0277, 0132, 0312, 1193, 1615
Innovation	0067, 0586

Innowert	0895, 1328
Inotech	0803, 0850
Inspira	1402, 1586
Interactive	0067, 0586, 0117, 0542, 0305, 0357, 0193, 0391 0400, 0139, 0441
Interbuy	0039, 0067, 0294, 0277, 0542, 0586
Interfunk	0067, 0586, 0117, 0542, 0305, 0357, 0193, 0391 0400, 0139, 0379, 0277, 0230
Internal	0067, 0586, 0529, 0404, 1939
International	0246
Intervision	0312, 0247, 0485, 0067, 0401, 0407, 0478, 0516 0400, 0424, 0517, 0248, 0132, 0461, 0193, 0294 0277, 0039, 0586
Irradio	0039, 0067, 0586, 0248, 0277, 0401, 0754
Isukai	0248, 0067, 0586, 0312, 0485
ITC	0247, 0582, 0350
ITS	0067, 0401, 0248, 0312, 0294, 0246, 0039, 0586
ITT	0193, 0510, 0379, 0391, 0503, 0578, 0376, 0369 0238, 0209, 0640
ITT Nokia	0391, 0578, 0193, 0503, 0510, 0379, 0376, 0238 0209, 0369, 0636, 0640, 0661, 0393, 0461
ITV	0067, 0294, 0586, 0277, 0404

TV brands and codes

- J -

JDV	2012
Jean	0066
JEC	0065
JGC	1739
JMB	0067, 0529, 0664, 0404, 0586, 0473, 1938
JNC	0906, 1566, 0926
Jocel	0742
Jouge	1465
Jubilee	0586
JVC	0683, 1183, 0636, 1683, 0401, 0761, 0713, 0066 0220, 0222, 0248, 0448, 0099, 0123, 0680

[Go Back](#)

TV brands and codes

- K -

Kaisui	0248, 0312, 0067, 0586, 0246, 0485, 0247, 0039
Kambrook	0407, 0461, 0294
Kamp	0246
Kapsch	0193, 0391, 0236, 0289, 0134
Karcher	0067, 0586, 0451, 0400, 0640, 0193, 0312, 0132 0344, 0294, 0808, 0744, 1586, 0636, 2012, 1338
Kathrein	0586, 0067, 0910
Kawa	0401
Kawasho	0246
KB Aristocrat	0193
Kendo	0640, 0067, 0586, 0193, 0542, 0400, 0407, 0393 0458, 0441, 0132, 0265, 0277, 0392, 0581, 1615 1067, 0516, 1179, 1193, 1167
Kennedy	0193, 0236, 0582, 0465
Kennex	1067
Kenwood	0135
Keymat	1801, 1356, 1600
KIC	0247

Kingsbrook	1067
Kingsley	0246
Kiton	0586, 0067, 0698
Kneissel	0067, 0415, 0400, 0640, 0441, 0404, 0529, 0586 0465, 0289, 0322, 0268, 0392, 1938
Kobra	1497, 1328
Kolster	0067, 0586, 0132, 0379, 0277, 0248
Konichi	0039
Konka	0067, 0586, 0401, 0744, 0448, 0248, 0671, 0617 1220, 0636
Kontakt	0517
Korpel	0067, 0586
Korting	0117, 0451, 0400, 0350
Kosmos	0067, 0586
Kotron	0442, 0294, 1930
Koyoda	0039
Kraking	0268
Kross	1566
KTV	0247
Kuba	0379, 0193

Kuba Electronic

0333, 0379, 0193

Kuro

0403

Kyoshu

0442, 0448, 0294

Kyoto

0415, 0193, 0246, 0247

[Go Back](#)

TV brands and codes

- L -

L&S Electronic	0895, 0744
LaSAT	0516, 0400
Lavis	1067, 0067, 0193
Leader	0039
Lecson	0067, 0586
Legend	0039, 0367
Lemair	0441
Lenco	0039, 0751, 0067, 0193, 0404, 0586, 0134, 0617 1067, 1661
Lenoir	0039, 1219
Lenoxx	1219
Lentec	1561, 1726
Lesa	0277
Levis Austria	0067, 0586
Lexsor	1226, 1537
Leyco	0294, 0102, 0067, 0586 0324

LG	1453, 0208, 1262, 1349, 0067, 0906, 0400, 0407 0039, 0586, 0744, 0247, 0246, 0461, 0193, 0636 0139, 0728, 0745, 0853, 0859, 1667, 1176, 1178 1221, 0277, 0391
Liesenkötter	0067, 0357, 0358, 0586
Lifetec	0067, 0698, 1067, 1167, 0404, 0039, 0542, 0685 0586, 0744, 0248, 0294, 0713, 1278, 1289
Lloyd's	0039
LME	0461
Lodos	1067, 1179
Loewe	0542, 0663, 0820, 0067, 0586, 0685, 0400, 0117 0322, 0581, 0392, 0546, 0821
Logik	0041, 0728, 0090, 0803, 0039, 0294, 0401, 0910 1247, 1067, 1675
Logix	0698
Luker	2012, 2015
Luma	0067, 0393, 0236, 0193, 0441, 0586, 0404, 0039 0392, 0289
Lumatron	0393, 0236, 0067, 0586, 0392, 0193, 0289, 0391 0247, 0294, 0103
Lux May	0067, 0039, 0586, 0611
Luxor	0224, 1193, 0267, 0393, 0510, 0522, 0379, 0391 0238, 0386, 0578, 0193, 0376, 0503, 0209, 1067 0247, 0661

[Go Back](#)

TV brands and codes

- M -

Madison	0067, 0586
Magnadyne	0117, 0277, 0546, 0132, 0582, 0193
Magnafon	0546, 0132, 0344, 0246, 0103
Magnavox	0067, 0586, 0066, 0209, 0810, 1169, 1233, 0783
Magnum	0744, 0067, 0586, 0745, 1319
Mandor	0294
Manesth	0067, 0586, 0265, 0247, 0294, 0350, 0065, 0324 0193, 0393
Manhattan	0067, 0906, 0586, 0698, 1067, 0193, 0808
Maqma	1497, 1328, 1739, 1636
Marantz	0067, 0586, 0442
Marelli	0117
Mark	0067, 0586, 0247, 0246, 0404, 0039, 0744, 0745
Marks and Spencer	1800
Mascom	1586, 0586, 0067
Master's	0529, 0067
Masuda	0401, 0248, 0039, 0294, 0067, 0247, 0586

Matrix	1307
Matsui	0067, 1193, 0586, 0517, 0473, 0039, 0265, 0207 0041, 0385, 0102, 0066, 0241, 0247, 0384, 0324 0401, 0463, 0393, 0485, 0193, 0379, 0546, 0065 0461, 0238, 0075, 0225, 0221, 0365, 0744, 1938 1067, 0659, 1696, 0910
Matsushita	0680
Matsuiama	0617
Maxam	0294
Maxdorf	0803, 0728, 0736, 0294
Maxim	1196, 2012, 1586
MAXIVIDEO	0344
MCE	0039
McMichael	0073
McTronics	1692
Medialine	1236
Mediator	0067, 0586
MediaVision	1421
Medion	0744, 0838, 0067, 0698, 0586, 0542, 1167, 0728 1938, 1067, 1930, 1278, 1289, 0275, 0661, 1251 0910, 1319, 1196, 1586, 1179, 1771
MegaDrive	1289

Megas	0640
Megatron	0208
MEI	1067, 0067, 0586
Melectronic	0376, 0067, 0542, 0139, 0373, 0277, 0135, 0134 0404, 0039, 0247, 0510, 0522, 0246, 0441, 0379 0193, 0317, 0586, 0664, 0391, 0221, 0225, 0691 0744, 1682
Memorex	0039, 0180, 0208, 0680, 0090
Memphis	0367, 0102, 0039, 0415
Mercury	0067, 0039, 0728, 0294, 0586, 0736, 0090
Merritt	0578, 0391, 0193
Metz	0776, 0418, 0477, 0397, 0117, 1193, 0225, 0565 0584, 0221, 0067, 0586, 0617, 0305, 0698, 1067
MGA	0180, 0208, 0067, 0586, 0248, 0134
Micromaxx	0067, 0586, 0698, 1067, 0660, 0838, 0744, 1402
Microstar	0838
MicroTEK	0850, 0728, 0736, 0294
Mikomi	1179, 1193, 0774
Minato	0067, 0586
Minerva	1278, 0517, 0565, 0225, 0100, 0221, 0584, 0267 0546, 0138, 0180

Minoka	0442, 0067, 0586
Mirai	1696, 1681
Mirror	1930
Mitsai	1586
Mitsubishi	0138, 0180, 0123, 0542, 0067, 0208, 0384, 0117 0066, 0267, 0388, 0565, 0586, 0721, 0238, 1067 1552
Mitsuri General	0193
Mivar	0322, 0400, 0246, 0639, 0546, 0247
Mogen	1713
Monaco	0039
Moree	0067
Morgan's	0067, 0586
Motorola	0123
MTC	0090, 0400, 0379, 0542, 0193, 0246, 0391, 0478
MTlogic	0744, 1338
Multimat	0344
Multistandard	0132, 0344
Multitec	0067, 0586, 0516, 0698, 1067, 1586, 2012

Multitech

0379, 0039, 0393, 0516, 0067, 0400, 0586, 0247
0246, 0277, 0132, 0344, 0294, 0582

Murphy

0134, 0246, 0102, 0193

Musikland

0067, 0248, 0277, 0586

Mx Onda

1675

MyCom

1406, 0208

Myryad

0586, 0067

[Go Back](#)

TV brands and codes

- N -

NAD	0196, 0208, 0895, 0391, 0193
Naiko	2012, 0067, 0636, 0586
Nakimura	0404, 0067, 0586
Naonis	0393, 0193
Narita	2012
NAT	0256, 0370, 0244
National	0244, 0256, 0267, 0370
NEC	0200, 0617, 1200, 1397, 0066, 0350, 1549, 0906 1805, 0485, 0039, 0404, 0247, 0067, 0586, 0041 0734, 0275, 0267, 1734, 0529, 0683, 0801, 1400 1165, 0691, 0912
Neckermann	0067, 0221, 0400, 1535, 1040, 0230, 0584, 0586 0582, 0193, 0357, 0448, 0379, 0117, 0277, 0247 0441, 0350, 0393, 0542
NEI	0067, 0586, 0367, 0461, 0401, 0193, 1067
NEO	1402
Neon	1762
Neovia	1236, 0895, 1403, 1401, 0906, 1406, 1420, 1414 1368, 1221
Nesco	0277, 0209, 1938

Nesx	1762
Netsat	0067, 0586
Network	0367
Neufunk	0067, 0039, 0586, 0640, 0248, 0312, 0744
New Tech	0067, 0039, 0586, 0373, 0247, 0478
New World	0248
Nicamagic	0246
Nikkai	0102, 0248, 0067, 0586, 0247, 0294, 0065, 0367 0246, 0039, 0066
Nikkei	0744, 1624
Nikko	0208
Nintaus	0921
Nishi	0512
Nobliko	0132, 0100, 0246, 0344
Nogamatic	0139, 0226
Nokia	0391, 0193, 0510, 0379, 0578, 0522, 0503, 0369 0238, 0404, 0661, 0636, 0376, 0209, 0350, 0640 0139, 0581
Nordic	0247

Nordmende 0139, 0921, 0317, 0226, 0590, 0373, 0225, 0067
0586, 0365, 0193, 0501, 1289, 1278, 0744, 1319
0520, 0473, 1615

Norfolk 0193

Normerel 0067, 0586

Northern Star 1236

Novak 0067, 0586

Novatronic 0067, 0135, 0404, 0561, 0586

Novex 1553

Novita 1414, 1615

Nurnberg 0193, 0391

NU-TEC 0485, 0728, 0850, 0067, 0586, 0736, 0294

[Go Back](#)

TV brands and codes

- O -

O.K.Line	1067, 1402, 1586
Oceanic	0193, 0391, 0324, 0238, 0503, 0578, 0510
Odeon	0294
Okano	0400, 0067, 0586, 0294, 0102, 0518, 0039
OKI	1067
Olidata	1406
Olivia	1618
Omega	0294
Omni	0810, 0921, 0728, 1600
Onn	1179, 1739, 0586, 1800
Onwa	0401, 0632, 0248, 0463, 0611, 0132, 0461
Onyx	1739, 1800
Opera	0067, 0586
Optimus	0680, 0196
Optoma	1652
Optonica	0123
Orava	0582, 1067

Orbit	0067, 0586
Orion	0209, 0067, 0473, 0385, 0744, 0265, 0586, 0685 0324, 0207, 0350, 0041, 0039, 0351, 0241, 0344 0132, 0294, 0442, 0546, 0561, 1938, 0910, 1226
Orline	0067, 0248, 0586
Ormond	0415, 0698, 1067, 0067, 0586
Orsowe	0546
Osaki	0102, 0248, 0247, 0294, 0067, 0442, 0404, 0241 0385, 0586
Osio	0067, 0586
Oso	0248
Osume	0187, 0102, 0066, 0248, 0067, 0586
OTIC	1233, 1036, 1675
Otto Versand	1535, 1040, 0066, 0123, 0542, 0067, 0586, 0565 0225, 0379, 0584, 0221, 0391, 0265, 0139, 0324 0256, 0277, 0333, 0350, 0247, 0039, 0312, 0366 0373, 0403, 0458, 0461, 0546, 0582

[Go Back](#)

Pace	1938
Pacific	0067, 0586, 1167, 0744, 1067, 0473
Packard Bell	1344
Pael	0246
Palladium	0400, 0067, 0685, 0441, 0660, 0744, 1167, 0221 1535, 1040, 0230, 0448, 0584, 0586, 0379, 0277 0357, 0117, 0582, 0193, 0247, 0393, 2012
Palsonic	0294, 0442, 0067, 0247, 0407, 0248, 0728, 0586 0478, 0518, 0803, 0448, 0808, 1519, 1226, 1537 1299, 1735, 1356
Panache	1615
Panama	0039, 0247, 0294, 0246, 0067, 0586, 0277
Panasonic	0680, 1666, 1680, 0138, 0256, 1340, 1240, 0370 0244, 0391, 0883, 0267, 0397, 0546, 0067, 0586 0193, 0578, 0801
Panavision	0067, 0441, 0586
Papouw	0067, 0586
Pathe Cinema	0193, 0268, 0246, 0350, 0322, 0379, 0461, 0582 0400
Pathe Marconi	0139, 0226, 0267

Pausa	0039
Perdio	0102, 0350, 0193, 0067, 0246, 0312, 0586
Perfekt	0067, 0586
Philco	0117, 0114, 0104, 0448, 0277, 0582, 0193, 0400 0067, 0586, 0216
Philex	0581, 0193
Philharmonic	0247
Philips	0586, 0067, 0268, 0751, 1536, 0669, 0635, 1485 0802, 1334, 1484, 0584, 0073, 0117, 0453, 0373 0404, 0039, 0230, 0391
Phocus	1319, 1338, 0744, 1682, 1830
Phoenix	0067, 0586, 0400, 0516, 0193, 0117, 0102, 0246 0350, 0415, 0582
Phonola	0067, 0586, 0117, 0246
Phonotrend	1624
Pilot	0586, 0067, 0742, 0736
Pioneer	1290, 0790, 0041, 0200, 0196, 0709, 0067, 0586 0453, 0458, 0400, 0373, 0391, 0139, 0193, 0317 0516, 0542
Pionier	0400, 0516
Pixxel	1559
Plantron	0067, 0586, 0294, 0039

Playsonic	0744, 0067, 0247, 0369, 0745, 1830, 1682
Plus	0801, 1582
Polar	0067
Polaroid	1553, 1675, 1771
Policom	0132, 0139, 0226, 0236, 0267, 0268, 0305, 0391 0193, 0100, 0104, 0114, 0117, 0565
Polytron	0312
Poppy	0039
Portland	0404, 1939
Powerpoint	0517, 0067, 0586, 0728, 1800
Prandoni-Prince	0277, 0546, 0391, 0393
Precision	0247
Premier	0039, 0294, 0921
Prima	0039, 0294, 0333, 0442, 1299, 1537, 1226
PrimeView	1636
Princess	0728, 1356
Prinston	1067
Prinz	0102, 0379, 0391, 0224
Profex	0039, 0193, 0461, 0391, 0393

Profi	0039
Profilo	1586
Profitronic	0067, 0586, 0344, 0132
Proline	0067, 0586, 0655, 0664, 0660, 0441, 0351, 0102 1406, 1067
Prosonic	0067, 0586, 1769, 0400, 0404, 0401, 0910, 1406 0698, 0744, 0481, 0246, 0244, 1800, 1344, 0247 1739, 1762, 0636, 1537
Protech	0067, 0586, 0247, 0039, 0277, 0379, 0132, 0294 0461, 0448, 0367, 0698, 0312, 0582, 0193, 0516 1067
Proton	0208
Proview	1675
Provision	0529, 0067, 0586, 1067, 0744, 1561
Proxima	0765, 1777
PVision	1221, 0906, 1248
Pye	0067, 0586, 0117, 0584, 0404, 0379, 0442
Pymi	0039

[Go Back](#)

QONIX	1624
Quadral	0248
Quadro	0783, 1356, 0586, 0067, 1179, 1193
Quasar	0277, 0680, 0895, 0039
Quelle	0067, 1535, 1040, 0041, 0139, 0542, 0565, 0379 0584, 0221, 0391, 0066, 0247, 0277, 0104, 0357 0114, 0358, 0100, 0134, 0135, 0698, 0586, 0187 0225, 0230, 0294, 1067, 0324, 0376, 0451, 0582 0039
Questa	0066

[Go Back](#)

TV brands and codes

- R -

Radialva	0139, 0248, 0461, 0193, 0067, 0586, 0317, 0367
Radiola	0067, 0586, 0247
Radiomarelli	0117, 0546, 0277, 0067, 0586
RadioShack	0067, 0586, 0208
Radiotone	0039, 0067, 0586, 0458, 0400, 0448, 0442, 0698 0294, 1067
Rank	0100
Rank Arena	0066, 0187, 0632, 0783
RBM	0100
RCA	0655, 0123, 0590, 0365, 0373, 0783
Realistic	0208
Recor	0067, 0448, 0586
Rectiligne	0067, 0586
Red Star	1586
Rediffusion	0391, 0578, 0066, 0376
Redstar	0067, 0586
Reflex	0067, 0586, 1067, 0698

Relisys	0895, 0906, 0907, 1236, 1237, 1243, 1239, 1328 1406, 1615, 1771, 1770, 1675
Reoc	0744, 0664, 1939
Revox	0067, 0838, 0586, 0400
Rex	0236, 0393, 0441, 0277, 0193, 0289, 0294, 0581
RFT	0117, 0322, 0400, 0458, 0102, 0294, 0067, 0586 0516
Rhapsody	0246
Ricoh	0067, 0586
Rinex	0803, 0448, 0728, 0294, 0736
R-Line	0067, 0586, 0193
Roadstar	1067, 0745, 0039, 0448, 0067, 0586, 0744, 0698 0248, 0294, 0312, 1219, 1930, 1356
Robotron	0117
Rodex	0067, 0586
Rolsen	1401, 1221, 0067, 0586
Rover	0066, 0907
Rowa	0294, 0728, 0247, 0742, 1471, 0039, 0736, 0246 0617, 0067, 1036, 0586
Roxy	0478
Royal	0448, 0636

Royal Lux

0451, 0400, 0442, 0365

Rukopir

0586, 0067

[Go Back](#)

Saba	0655, 1196, 0139, 0590, 0373, 0317, 0117, 0193 0546, 0391, 0528, 0226, 0365, 0578, 0501, 0680 0744, 1618
Sacccs	0268
Sagem	0640, 0485, 0312, 0860, 1343, 0648
Saisho	0265, 0664, 0404, 0546, 0207, 0039, 0041, 0247 0461, 0193, 0294, 0241, 0384
Saivod	0067, 2012, 1193, 0586, 0698, 1586, 0742, 1067
Sakai	0193
Sakura	1233
Sakyno	0485
Salora	0224, 0379, 0193, 0386, 0391, 0546, 0393, 0403 0578, 0369, 0238, 0582, 0510, 0661, 1196, 1586 0808, 1401
Salsa	0365
Sambers	0546, 0132, 0344
Samsung	0208, 0648, 0617, 0123, 1649, 0586, 1279, 1660 0674, 1265, 0039, 0067, 0247, 0478, 0512, 0400 0518, 0090, 0844, 0102, 0294, 0712, 0246 ,0193
Sandra	0246, 0247

Sanela	0268
Sansei	0481
Sansui	0067, 0586, 0736, 0685, 0401, 0632, 0451, 0485 0918, 0783, 1401, 1221, 1561, 1727, 1583, 1624 0728, 0294, 0744, 1414, 1278, 1586
Santon	0039
Sanyo	0238, 1238, 0187, 0322, 0751, 0066, 0041, 0400 1537, 0369, 0102, 0246, 0247, 0134, 0075, 0585 0039, 0193, 0403, 0067, 0138, 0586, 0516, 0765 0923, 0200, 0734, 1677, 1678, 1679, 1684, 1067 1179, 1193, 1615
Save	0067, 0586
Saville	1938
SBR	0067, 0586, 0073
Schaub Lorenz	0578, 0744, 0391, 0379, 0636, 0516, 0404, 1221 1224, 1393, 1401
Schneider	1167, 0067, 0586, 0333, 0379, 0424, 0382, 0366 0289, 0373, 0247, 0277, 0401, 0391, 0248, 0698 1067, 0193, 0744, 1939, 1938, 1398, 2012, 0100 1402
Scotland	0193
Scott	1219, 0208, 0209
Sears	0208, 0209
Seaway	0664

Seelver	0586, 1067, 0067
SEG	1067, 0067, 1193, 0586, 0698, 0247, 0517, 0039 0379, 0193, 0294, 0664, 0066, 0132, 0277, 0392 0344, 0246, 0582, 0248, 1939, 1179
SEI	0117, 0132, 1535, 1040, 0582, 0193, 0546, 0379 0324, 0344, 0236, 0067, 0586, 0207
Sei-Sinudyne	0132, 0236, 0324, 0344, 0546, 1535, 1040, 0582 0067, 0586, 0117
Seitech	1247, 1402
Seleco	0236, 0393, 0289, 0392, 0193, 0441, 0703, 0581 0401, 0066, 0294, 0376, 0465, 0660
Sencora	0039
Sentra	0065, 0248, 0039, 0379
Serie Dorada	0208
Serino	0640, 0485, 0246, 0123
SeViC	1735
Sharp	0123, 1223, 1689, 1616, 1423, 0187, 0066, 0521 0324, 0683, 0216, 0546, 0230
Sherwood	1429
Shintoshi	0067, 0586
Shivaki	0067, 0586, 0473, 0481, 0404, 0208
Shorai	0324, 0209

Show	0448, 0039, 0102, 0728, 0294, 0736, 0067
Siarem	0582, 0193, 0117, 0132, 0546
Siemens	0221, 0565, 0584, 0230, 0225, 0357, 0358, 0187 0067, 0586, 0391
Siera	0067, 0586, 0617
Siesta	0400
Silva	0067, 0586, 0246, 0391
Silva Schneider	0783, 1586
Silver	0066, 0067, 0485, 0586, 0391, 0209, 0745, 0193
SilverCrest	1067, 0067, 0586
SIM2 Multimedia	0703
Simpson	0216
Singer	0039, 0117, 0728, 1586, 0067, 0586, 0132, 0277 0465, 0365, 0193
Sinotec	0803, 0448, 0636, 0728
Sinudyne	1402, 0207, 0117, 0265, 0132, 0324, 0582, 0193 0391, 0546, 0379, 1535, 1040, 0344, 0236, 0067 0586, 1938, 0636
Skantic	0386
Sky	0312, 0910, 0067, 0208, 0586, 1636, 1406, 1805 1775, 1808, 0691, 0895

Skymaster	0135
Skysonic	0783
Sliding	0895, 0910, 1402, 1404, 1405, 1407, 1413, 1418, 1398
SLX	0698
Smaragd	0517
S-Media	1247
Soemtron	0895, 1328
Sogera	0350
Sogo	1406
Solavox	0391, 0102, 0193, 0578, 0067, 0586
Sonawa	0248
Sonber	0132
Sonic	0783
Soniko	0067, 0586
Soniq	1497, 1328
Sonitron	0238, 0400, 0369, 0247
Sonix	1762
Sonneclair	0067, 0586
Sonoko	0067, 0586, 0039, 0294, 0312, 0247

Sonoror	0238, 0193, 1535, 1040, 0578, 0391, 0312
Sontec	0067, 0586, 0400, 0324, 0039
Sony	1535, 1681, 1655, 1040, 1781, 0041, 0383, 0066 0840, 1955, 0132, 0344, 0772, 0067, 0586, 0187 0123, 0200, 0104
Sound & Vision	0132, 0248, 0404, 0067, 0586
Soundesign	0208, 0209, 0216
Soundwave	0067, 0586, 0350, 0448, 0745
Soyea	0803
Soyo	1739
Spectra	0039
Ssangyong	0039
Staksonic	0039
Standard	0067, 0586, 1067, 0248, 0039, 0247, 0350, 0404
Starion	1067
Starlite	0039, 0582, 0193, 0067, 0586, 0294, 0442
Stenway	0312, 0248
Stern	0236, 0289, 0193, 0393, 0294, 0441, 0581, 0465
Stevison	2012, 1586
Strato	0067, 0586, 0294, 0039

Strong	1193, 1179, 1067, 0067, 0586
Stylandia	0247
Sunic Line	0067, 0586
Sunkai	0324, 0385, 0351, 0485, 0248, 0265, 0640, 0067 0586, 0517, 0561, 0895
Sunny	0067
Sunstar	0401, 0067, 0586, 0039, 0294
Sunwatt	0485
Sunwood	0067, 0586, 0039
Super	1219
Superla	0546, 0246, 0247
Supersonic	0039, 0238, 0586, 0728, 0294, 0485, 0067
SuperTech	0039, 0067, 0586, 0246, 0248
Superton	0461
Supervision	0728, 0294
Supra	0208, 0404, 0039, 0067
Susumu	0365, 0248, 0317
Sutron	0039
SVA	0728, 0294, 0485, 0238, 0736
Svasa	0728, 0238, 0736, 0294

Swedx	1636
Swissline	0277
Swisstec	1636, 0910, 1406, 0895, 1805, 1806, 1775, 1808
Sydney	0246, 0247
Sylvania	0216
Sysline	0067, 0586
Sytong	0246

[Go Back](#)

TV brands and codes

- T -

T+A	0477
Tandberg	0397, 0441, 0139, 0367, 0226, 0392, 0391, 0193
Tandy	0248, 0102, 0247, 0277, 0123, 0193
Targa	1401, 1221, 0648
Tashiko	0066, 0073, 0247, 0200, 0246, 0193, 0393
Tatung	0067, 1583, 1278, 1586, 1086, 0586, 0102, 0546 0247, 0041, 0659, 1938, 1401, 1289, 1221, 1593 1402
TCL	1729, 0655
TCM	0744, 1319, 0838, 1338
Teac	0728, 1675, 0067, 1067, 0586, 0542, 0742, 0698 0485, 0247, 0736, 0294, 1939, 0208, 0039, 0442 0379, 0751, 0312, 0366, 0448, 0461, 0785, 0200 0744, 1179, 1785, 1233, 1036, 1651, 1559, 1393 0617, 1800, 1739
TEC	0247, 0039, 0277, 0501, 0365, 0367, 0289, 0582 0067, 0586, 0391, 0193
Tech Line	0067, 0586, 0698, 1193
Tech Lux	1219, 1736
Techica	0248

Technema	0350
Technica	2012
Technics	0680
Technika	1615
TechniSat	0685, 0067, 0586, 0193
Technisson	0744, 1319, 1682
Techno	1615, 1067
Technol Ace	0209, 0728, 0294, 0664, 0404, 0246
Technosonic	0067, 0586, 0529, 0910, 1356, 2012
Technotrend	1561
Techvision	1739, 1561, 1801
Techwood	1193, 1067
Teckton	1406
Tecnimagen	0586
Teco	1070, 1343, 1553
Tedelex	0247, 0728, 0736, 0636, 0448, 0067, 0039, 0238 0921, 0617, 0586, 0461, 1739, 1561, 0294, 1729 1248, 1733
Teiron	0039
Tek	0850, 0067, 0728, 0039

Teknika	0090, 0209, 0216
TELE System	0906, 1398
Teleavia	0139, 0317, 0226, 0520, 0373
Telecor	0067, 0586, 0193, 0248, 0247, 0289, 0424
Telefunken	0655, 0590, 0617, 0104, 0139, 0728, 0742, 0373 0528, 0850, 0926, 0501, 0810, 0921, 0317, 0114 0131, 1733, 1736, 0365, 0103, 0226, 1566, 0783 0736, 0067, 0586, 0516, 0744, 0520, 1586, 0376
Telefusion	0067, 0586
Telegazi	0067, 0193, 0289, 0248, 0294, 0586
Telemeister	0350, 0067, 0586
Telesonic	0067, 0586
Telestar	0039, 0067, 0586, 0442
Teletech	0067, 0586, 0698, 0039, 0277, 0367, 1067
Teleton	0247, 0305, 0236, 0193, 0379, 0289, 0216, 0066 0393
Televideon	0350, 0582, 0193, 0246
Teleview	0067, 0586
Telexa	0132
Temco	0324
Tempest	0039, 0067, 0586, 0294

Tennessee	0067, 0586
Tensai	0134, 0248, 0067, 0586, 0247, 0324, 0350, 0039 0135, 0404, 0401, 0407, 0277, 0745, 0193, 1067
Tenson	0350, 0039
Tesla	1067, 0067, 0698, 0744, 1682, 0745, 1167, 0660 0401, 0783, 0586, 0268, 0640
Tevion	1278, 1328, 1675, 1289, 0067, 1220, 0586, 1586 0838, 0895, 0698, 1167, 1801, 0744, 1067, 1615 1771, 1319, 1830
Textet	0247, 0404, 0039, 0246, 0248
Thomson	0655, 0590, 0373, 0317, 0139, 0501, 0365, 0226 0267, 0067, 0586, 0520, 0350, 0379, 0246, 0582 1618
Thorn	0138, 0139, 0255, 0103, 0373, 0220, 0391, 1535 0268, 0222, 1040, 0104, 0114, 0565, 0529, 0067 0102, 0586, 0134, 0041, 0365, 0542, 0066, 0073 0075, 0404, 0100, 0065, 0131, 0386
Thorn-Ferguson	0134, 0138, 0139, 0220, 0222, 0268, 0391, 0529 0365, 0103, 0065
Tiny	1226, 1299
TMK	0208, 0207
Tobishi	0248
Tokai	0102, 0067, 0586, 0367, 0698, 0478, 0193, 0247 0404, 0039, 1067, 0582

Tokaido	1067
Tokyo	0246, 0065, 0478, 0333
Tomashi	0312 ,0248
Tongtel	0810, 0617
Top Show	0728, 0803, 0448, 0039, 0294, 0736
Topline	1067, 0698
Toshiba	1538, 0538, 0090, 0065, 1319, 0744, 0066, 0100 0132 ,0271, 1194, 1612, 1734, 0247, 0139, 0520 0225, 0221, 0648, 1938, 0039, 0728, 0067, 0862 1586, 0680, 1067
Tosumi	2012, 1800
Towada	0379, 0132, 0344, 0247, 0582
Toyoda	0039, 0401, 0294
Trakton	0039, 0294, 0247
TRANS-continents	0698, 1067, 1404, 1407, 0895, 0586, 0067, 0516 0247
Transonic	0067, 0586, 0485, 0617, 0542, 0294, 0728, 0742 0448, 0039, 1393, 1356
Transtec	0246
Triad	0067, 0586, 0248, 0039
Trical	0187

Trident	0546, 0247
Trio	1593, 1583, 1675, 1278
Tristar	0294, 0248
Triumph	0207, 0546, 0376, 0586, 0067
Tsoschi	0312
TVTEXT 95	0586

[Go Back](#)

TV brands and codes

- U -

Uher 0067, 0586, 0236, 0350, 0333, 0404, 0448, 0516
0400, 0289, 0510

Ultra 0222

Ultravox 0117, 0132, 0404, 0277, 0246, 0582, 0193, 0344
0067, 0586

UMC 1636, 1805, 1775

Unic Line 0067, 0586, 0503, 0485, 0379

United 0744, 0067, 0745, 0586, 1938, 1067, 0617, 2012
1682, 1800

Universal 0744, 0067, 0586

Universum 1067, 0067, 1193, 0376, 0698, 0135, 0510, 0225
0503, 1179, 0134, 0565, 0391, 0041, 0542, 0277
0522, 0400, 0230, 0448, 0324, 0066, 0187, 0100
0582, 0193, 0294, 0586, 0451, 0518, 0441, 0104
0357, 0358, 1535, 1040, 0379, 0247, 0139, 0392
0367, 0207, 0661, 0584, 0039, 0114, 0200, 0648

Univox 0067, 0586, 0367, 0117, 0193, 0268

Utax 0193

[Go Back](#)

TV brands and codes

- V -

V7 Videoseven	1785, 0208, 0910, 1406, 1247, 1696, 0648, 1681 1535
Vanguard	0067, 0586
Venus	1356
Vestel	1067, 1193, 1615, 0067, 0698, 0582, 0193, 0247 0586
Vexa	0039, 0067, 0586
Victor	0683
Videologic	0248, 0246
Videologique	0246, 0248, 0247
Videosat	0277
VideoSystem	0067, 0586
Videotechnic	0246, 0350, 0247, 0404
Videoton	0386, 0193, 0461, 0520
Vidikron	1322, 0132, 0703, 0765
Vidtech	0066, 0208
Viewpia	0906
ViewSonic	1608, 1785, 1360, 1618

Viper	0367
Visiola	0246
Vision	0067, 0294, 0586, 0350, 0518, 0247, 1760
Vistar	0236, 0391
Vistron	1393
Vivax	1356, 1338, 0067, 1739
Vivo	1727
VMS	0344
Vortec	0067, 0586
Voxson	0117, 0067, 0586, 0393, 0448, 0193, 0208
Vue	1600

[Go Back](#)

TV brands and codes

- W -

Walker	1179
Waltham	0247, 0386, 0448, 0317, 0415, 0067, 0586, 0698 0139, 1067, 0461, 0520, 0193, 0473
Wards	0209
Watson	1067, 1278, 1289, 0350, 0586, 0067, 0193, 0039 0698, 0248, 0424, 1938, 1406, 0357
Watt Radio	0132, 0379, 0582, 0193, 0246, 0344, 0516, 0458
Wega	0067, 0586, 0066, 0117
Wegavox	0039, 0067, 0586
Welltech	0744, 1682
Weltblick	0067, 0586, 0350, 0247
Weltstar	1067
Weston	0067, 0586
Wharfedale	0067, 0926, 0921, 0586, 0728, 1586, 0736, 1402
White Westinghouse	0350, 0246, 0067, 0586, 0367, 1939
Wilson	0586
Windsor	0698, 1067
Windstar	0312, 0367

Windy Sam	0586
Wintel	0744, 1036
World-of-Vision	0910, 0920, 0895, 1319, 1328, 0907, 1636, 1247 1762
Worldview	0485, 0075
Woxter	1561

[Go Back](#)

TV brands and codes

- X -

Xeniusv	0664
XLogic	0728
XMS	1471
Xomax	1800
Xoro	1226, 1247, 1537
Xrypton	0067, 0586
X-View	1221

[Go Back](#)

Yalos	1801
Yamada	1370
Yamaha	0680, 0827, 1556, 1606
Yamishi	0312, 0485, 0248, 0067, 0586, 0247
Yokan	0067, 0586
Yoko	0247, 0067, 0586, 0248, 0294, 0039, 0461, 0451 0400, 0369, 0246, 0277, 0403
Yorx	0248
Ytawai	1561
YU-MA-TU	0067

[Go Back](#)


TV brands and codes

- Z -

Zaapa	1219
Zanela	0268
Zanussi	0236, 0393, 0247
Zenith	1939
Zenor	0369
Zepto	1615
ZX	1938

[Go Back](#)

To find out your **DVD brands & codes** from A to Z.

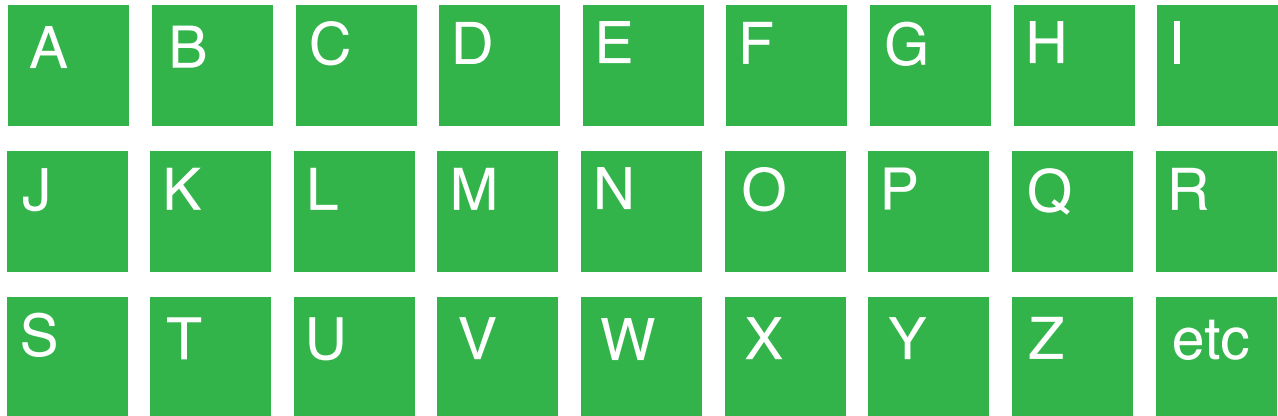

eg. if your DVD brand is “EagleTec”, click on “E”.

To go back to **TV brands & codes**, click on

[TV brands & codes list](#)

To find out your **Satellite codes**, click on

[Satellite code list](#)

DVD brands and codes

- A -

Acoustic Solutions	0760, 2112, 2148, 0743, 1272, 1258
Advance Acoustic	1579
AEG	0818, 0800, 0820, 1464, 1263, 1953, 0705, 2203
AFK	1228, 1258, 1182, 1953, 1081
Afreey	0728
AG Electronics	1258
Aim	0808, 1195, 1207, 0729, 0702, 0820
Airis	1254, 1351, 0702, 1035, 1396, 1375, 1137, 1652
Aiwa	0671, 0725, 0899, 0563, 1273, 2050, 2073
Akai	0820, 0809, 0818, 1145, 0928, 0796, 0746, 0914 0743, 0882, 0735, 2005, 1119, 1425, 1725, 1263 1721, 1587
Akashi	0868
AKI	0883, 1035, 0810
Akira	0729, 1650, 0808, 1351
Akura	1201, 2142, 1200, 0928, 1081, 1397, 1170
Alba	0747, 0729, 0743, 0753, 0725, 0760, 0813, 0569 0702, 1170, 1081, 1521, 1560, 1725, 1865

Alize	1181
All-Tel	0820, 1481
Amitech	0152, 0800, 0880
Amoi	0882
Amoisonic	0794
Amstrad	0743, 1145, 1181, 1397, 1601, 1695, 1203, 0820 1519, 1186, 0800
AMW	0902
Ansonic	0789, 0861
Apex Digital	0702, 0829, 1086, 1284
Arena	0882, 1145
Aria	0923
Arianet	0923
Aristona	0569, 0676
Art Mito	1451
ASCOMTEC	1953
Asono	1254
ATACOM	1254
ATD	0911

Atlantis Land	0828
A-Trend	0744
Audiola	1650
Audiosonic	1670, 1953, 1557
Audioworld	0820
Audix	1134, 1182, 2119, 0743
Autovox	0743
Auvio	0873, 1120
Auvion	1518
Avious	1195
AWA	0760, 0902, 1693, 1585, 0152
Axion	0760

[Go Back](#)

DVD brands and codes

- B -

Baier	0782
Base	1481, 2118
Basic Line	0743, 2024
Baze	1195, 0928, 0702
BBK	0892, 1254, 1114
Beep	1193
Bellagio	0902, 1275, 1034
Belson	1953, 1660, 2122, 0618
Best Buy	0887, 1119
Binatone	1953
Biostek	1035
Black Diamond	0743, 0796, 0914, 1371, 0863
Blaupunkt	0747, 1069
Blu:sens	1519, 1263, 1351
Blue Sky	0743, 0729, 0725, 0834, 0702, 0873, 0808, 0681 0820, 0914
BlueTinum	1203
BNI	1351

Boghe	1034, 1251
Boman	0813, 0818, 0928, 1035
Bose	2053
Brainwave	0800, 1145, 1265
Brandt	0681, 0581, 0533
BSkyB	2010
Buffalo	1912
Bush	0743, 0725, 0863, 1725, 0760, 0861, 0729, 0747 0808, 0546, 0706, 0848, 0909, 0914, 0753, 1195 1466, 1449, 1513, 1170, 1862, 1207, 1397, 1186 1560, 0146

[Go Back](#)

DVD brands and codes

- C -

Cambridge Audio	1139, 1114, 0781, 0726
Cambridge Soundworks	0726
Campomatic Digital	1081
CAT	0729, 0816, 0819, 1844
CCE	1947
Celestial	0702, 1050
Celestron	2005
cello	1472, 1488, 1760, 2142
Centrex	0702, 1034, 1945
Centrum	0743, 0819, 0809, 0923, 2024, 1035, 1953, 1535 0705
CGV	0800 ,0781
Cinea	0871
Cinetec	0743, 0902
cineULTRA	0729
CineVision	0906
CJ Digital	2203
Classic	0760, 1947, 1760

Clatronic	0818, 0809, 0848, 0702, 1195, 1871, 1207, 1464 0705, 1263
Clayton	0743
Coby	0808, 0760, 1137, 0882
Codex	1263
Compacks	1396, 1137, 1689
Conia	0702, 0882, 1660, 0794, 0546, 1155, 1351
Contel	0818
Continental Edison	0902, 0861
CrossWood	1183
Crown	0800, 0681, 1186
Crypto	1258
C-Tech	0828, 0798, 1182
Cybercom	0861
CyberHome	0744, 0846, 1053
Cytron	0746, 0681, 0735, 0861, 1377

[Go Back](#)

DVD brands and codes

- D -

Daenyx	0902
Daewoo	0862, 0863, 1513, 0735, 0800, 0744, 1948, 1466 0902, 1171, 1871, 1471, 0808, 1102, 1693
Dalton	0816, 1066
Dansai	0800, 0777, 0813, 1145, 1725
Dantax	0753, 0725, 1119, 0743
Daytek	0902, 1035
Dayton	0902
Daytron	1070
DCE	0861
DEC	0808, 0729, 0848, 1720
Decca	0800
Denca	1186
Denon	0664, 1664, 1874, 0520
Denver	0808, 0729, 0818, 0928, 0848, 1137, 1351, 1445 1480, 1953, 1086, 1871, 1295, 0702, 1207
Denzel	0695
Diamond	0681, 0798, 0808, 0781, 1186, 0753, 0820, 1182 0800, 1145

Digihome	0743
DigiLogic	0743, 1693
digiRED	0747
Digital	2203
Digital i	0923
Digitech	1862
Digitek	0152
Digitor	0157, 1035, 0681
Digitrex	1945, 0702, 1086, 1034
DigiX	1859
DiK	0861
Dimarson	1696, 1263
Dinamic	0818
Disney	1253, 0861
DiViDo	0735
DK digital	0861, 1140, 0870, 1276, 1284, 1587
DL	0883
DMTECH	0813, 0820, 2076, 1301, 1541, 1102
Dragon	0861

DSE 1760, 0863, 1182, 1427, 1425, 1859, 1557, 0152
0705

DTS 0829

Dual 0861, 0743, 0695, 0681, 0760, 0813, 0809, 0820
1053, 1466, 1560, 0914, 1145

Durabrand 0861, 0705, 0743, 1560, 1693

D-Vision 1145, 1397, 1521, 1203

DVX 0798, 1862, 1182

[Go Back](#)

DVD brands and codes

- E -

e:max	1263, 1351, 1588, 0360, 2203, 0800
EagleTec	0744
eBench	1182
E-Boda	0753
Ecco	1585, 2135
Eclipse	0753, 0781
Ecron	1445
E-Dem	1254
Elco	1186
Electro	1119
Electrohome	0800
Elenberg	1258, 1862
Elfunk	0880, 0914, 0743, 0793
Elin	0800
Ellion	0880, 1451, 0152
Elta	0800, 0818, 0820, 2021, 1145, 1181, 1140, 1263 1081, 1203, 1689, 2203
Eltax	0796, 1650, 1351, 2017

Emerson

0621, 0735, 0899

Encore

0728

Enzer

0695, 1258, 0796, 1035, 1390, 0800

EuroLine

0818, 1145, 1263, 1914, 1585, 0705

Eurostar

1425

[Go Back](#)

DVD brands and codes

- F -

Fenner	1425
Ferguson	0681, 1760, 0928, 0743, 0914, 1725, 1158
Finlux	0771, 0800, 0813, 0621, 0702, 0781, 1177, 1195 1914, 0706, 0292
Fintec	0743, 1560, 1397
Firstline	0829, 0899, 0681, 1560
Funai	0725, 0705
Futronic	0923, 1035

[Go Back](#)

GE	0747
Germatic	1081
Giec	1251
Global Link	1254
Global Solutions	0798, 1182
Global Sphère	0798, 1182
Go Video	0813
Gold	2142
GoldStar	0621, 0771
Goodmans	0743, 1034, 0753, 0781, 0813, 0760, 0681, 0820 0848, 0909, 0863, 2044, 1251, 1170, 1284, 1953 1760, 1207, 0146, 2010, 1560
GP Audio	1170
GPX	0771
Graetz	0695
Gran Prix	0861, 0928
Grandin	0746, 1284, 0702, 1203, 0743, 2203

Grundig

0725, 0805, 0569, 0681, 0820, 0735, 0743, 0700
0753, 2076, 1725, 1034, 0581, 1760, 1950, 1466
1513, 1862, 1207

Grunkel

0800, 1186, 0861

GVA

1689

[Go Back](#)

DVD brands and codes

- H -

H&B	0848, 0743, 0871, 0880, 1263, 1265, 1451, 0152
Haaz	0798, 0781
Haier	0873, 1120
Hanseatic	0771, 0813, 1183, 0820, 1914, 1301
Harman/Kardon	0732
Haus	0816
HCM	0818
HDT	0735
HE	0760, 1193, 1953
Henß	0743
Hicon	0702
Hikona	1200
Himage	0855, 1119
HiMAX	0887, 0873
Hitachi	0694, 0809, 1950, 2024, 0695, 0603, 0887, 0743 1865, 1778, 0171, 0914
Hiteker	0702, 1953
Höher	0861, 1034, 1254, 2203, 0743, 1560

Home Electronics

0760, 0800

Home Tech Industries

1254, 1953

HYD

1263

Hyundai

0813, 0880, 1186, 1258, 0796, 2076, 1557, 0818
1451, 0798, 1182, 2142, 0863

[Go Back](#)

DVD brands and codes

- | -

ICP	1182, 1183
lekei	1371, 1137
IIsonic	2132
Ingelen	0818
Inno Hit	0743
Inotech	0624
International	1693
Irradio	0771, 1145, 1254, 1263, 0899, 0870, 0800
ISP	0725
it's	0747

[Go Back](#)

DVD brands and codes

- J -

Jamo	1066
Jay-tech	1265
JBL	0732, 1956
JDB	0760
JDV	1397, 1258, 1585
Jeken	0729, 0808
Jepssen	1213
Jeutech	0796
JGC	1696, 1560
Jindian	0829
JMB	0725
JNC	1301
JNL	0765
Jocel	0810
JVC	0653, 0588, 1931, 1970, 1194, 0569, 0533, 0668 0897, 1271, 1890, 1893
jWIN	1081

[Go Back](#)

DVD brands and codes

- K -

Kansai	1137
Kansas Technologies	1263, 1560
Karcher	0813, 1397
Kendo	0743, 0729, 0861, 0702, 1377, 1725
Kennex	0800, 0870, 0743, 0928
Kenwood	0564, 0520, 1936
KeyPlug	0800
Kiiri	0800, 0810, 0883
King D'Home	0829, 0863
Kingavon	0848
Kiss	0871, 1553, 0695, 0426
Koda	0848
Koss	0681
Kotron	0881, 0909
KXD	0887, 1137, 1351, 1953

[Go Back](#)

DVD brands and codes

- L -

Labway	0561
Lasonic	0828
Lawson	0735, 0746, 0798, 1182
Lecson	0726, 0777
Leiker	0902
Lenco	0729, 0681, 0800, 0808, 0848, 0743, 0861, 1195 1535, 0618, 1207
Lenoir	1258
Lenoxx	2044, 0868, 1035, 1953
Lenoxx Sound	2044
Lexia	0729, 1182, 0798
Lexicon	0701
LG	1920, 0771, 1936, 0899, 2032, 0621
Lifetec	0681, 0861, 1377
Limit	0746, 1182, 0798
LiteOn	1486, 1188, 1446, 1088, 1768, 1674
Lodos	0743
Loewe	0569, 0771

Logic3	0802
LogicLab	0798, 1182
Logik	0743, 0914, 1862
Logix	0735, 0813
Luker	1397
Lumatron	0735, 1145, 0771, 0863, 1351, 0743, 0760, 0928 1862
Luxman	0603, 1121, 2136
Luxor	1034, 0743, 1760, 0760, 1275, 0747, 0914

[Go Back](#)

DVD brands and codes

- M -

Magnat	2076, 1914
Magnavox	0848, 0533, 0705, 1170, 1207, 0569, 0743, 1251 1384
Magnex	0753, 1195, 1519
Magnum	2044, 1466, 1535
Majestic	1137, 1375, 1186, 1650
Manhattan	0735, 0743
Marantz	0569
Mark	0743, 0725, 1725, 0914
Marks and Spencer	2142
Marquant	0800, 1481, 0618, 1521
Mastec	1036, 1464, 1251
Master-G	1186
Matrix	1272
Matsui	0743, 0681, 0702, 0725, 2131, 0914, 1102, 1760 1488
Maxdorf	0818
Maxim	0855, 0743, 1272, 1425, 1397

Maya	1375
Maytag	1445
MBO	0760, 1947
MDS	0729, 0808
Mebeteck	0592
Mecotek	0800
Medialine	1301
Mediencom	0883, 0781
Medion	0861, 0813, 1377, 0681, 0746, 0788, 1375, 0909 0660, 2042, 1120, 1195, 1036, 1579 ,1446, 1674 0771, 2106
MEI	0820
Memorex	0861
Memory	0760, 1081
Metz	0601, 0555, 0743, 2024
MiCO	0753, 0781, 1251, 1253, 1209, 1284
Micromaxx	1725, 0725, 1377
Micromedia	0533, 0569
Micromega	0569
Microsoft	0552, 1738

Microstar	0861
Minato	0782
Minax	0743
Minerva	0735
Minoka	0800, 1145
Minowa	1195
Mirror	0909, 0782
Mitsubishi	0743
Mizuda	0848, 0887, 1481
Monbel	1425
Monyka	0695
MPX	0873
MTlogic	1295
Multitec	1397
Mustek	1947, 0760, 1760
Muvid	2203
Mx Onda	0681, 2010, 0781, 0753, 1209, 1253, 1284
Myryad	1284
Mystral	0861, 1186

[Go Back](#)

DVD brands and codes

- N -

NAD	0771, 1857
Naiko	0800, 1397, 1034
Narita	1397
NEC	0899, 0621, 1948, 0771
Neon	0152
Neovia	1301, 2005
NeoXeo	2151
Netway	1519
Neufunk	0695
Nevir	0861, 0800, 0702
Nexius	0820
Nikenny	1119
Nikkai	1953
Nikkei	1284
Nintaus	0823, 1081
Nordmende	0861, 1560
Noriko	0782

Nortek	2203
NorthQ	1518
Nowa	0873
NU-TEC	0546, 1258, 1472, 0624

[Go Back](#)

DVD brands and codes

- O -

Okano	0782
Omni	0728, 0870, 0729, 0808, 0863, 1095, 1134, 1862 1258, 2135, 2118
Onix	0868
Onkyo	0657, 0533, 1799
Onn	2142
Onyx	2142
Oopla	1188
Optim	0777, 0873
Optimus	0601, 0555
Orava	0848, 1519
Orbit	0902
Orion	0725, 1158, 1725, 1036, 1263, 1449, 0928
Oritron	0681
OTIC	1371

[Go Back](#)

DVD brands and codes

- P -

P&B	0848, 1481
Pacific	0820, 1182, 0798, 0789, 0834, 0743, 0861
Packard Bell	0861
Palladium	0725, 0809, 0743, 1397
Palsonic	0702, 0882, 1086, 1584, 2094, 0863
Panasonic	0520, 1864, 1938, 1935, 0662, 1937, 1040, 1041 1609, 1668
Panda	0747, 0813, 1137
Papouw	0563
Paramount Pictures	0809
peeKTON	0155, 1070, 1254, 2130, 0928
Philips	0569, 0676, 1370, 1384, 0915, 1941, 0705, 1536 1842, 1843, 2086, 0533, 1188, 0701, 1876, 2079 2123
Philo	1375
Phocus	1722
Phonotrend	0729, 1195, 1871, 1207
Pioneer	0601, 1995, 0661, 0555, 0668, 1930, 1932, 0662 1841, 1601, 1490

Playgo	1295
Plu2	1120, 0880
Pointer	0800
Portland	0800
Powerpoint	0883, 0902, 0788, 0810, 1035, 1670, 2142
Prima	0796, 1258, 1472
Prima Electronic	0796
Prinston	1519
Prinz	0861
Prism	1036, 1183, 0861, 1695, 1119
Pro2	1302, 1375
ProCaster	1034
Prodisma	0883
Proel	1871
Proline	0681, 2112, 0702, 0820, 1034, 1513, 0863, 1945 1768, 2119
Proscan	0552
Proson	0743, 1114, 1035
Prosonic	0729, 1137, 2142, 0782, 1953, 1471

Provision

0729, 0848, 1193, 1953, 1351, 1137, 0760, 1207
1302

Pye

0676, 0569

[Go Back](#)

DVD brands and codes

- Q -

QONIX	1207, 0808, 1081, 1689
--------------	------------------------

QVision	1696
----------------	------

[Go Back](#)

DVD brands and codes

- R -

Radionette	0771, 0899, 2054, 1936, 0671
Radiotone	0743
Raite	0695
Rank Arena	0810, 1209
RCA	0552, 0681
REC	0796, 0520
Red Star	0789, 0793, 0800, 0818, 0928, 0836, 1070, 1953 1137, 1375
Redbell	1535
Redpoint	1284
Relisys	1377, 2121
Reoc	0798, 1182, 0782
Revoy	0729, 0871
Rex	0868
Richmond	1579, 1263
Rimax	1181
Ritech	1390

Roadstar 0729, 0743, 0848, 1069, 0760, 1081, 0928, 0863
2044, 1859, 1959, 1257, 1207, 1862, 1464

Rocksonic 0819

Rolsen 2005

Ronin 0902

Rotel 0653, 0588

Rowa 0789, 1034, 0546, 0555, 0747

Rowsonic 0819, 0753

[Go Back](#)

S&V	1195
Saba	0681, 2203, 0581
Sabaki	0828, 0798
Saivod	0861, 0789, 1397, 0800
Sakyno	1182, 0798
Salora	0771
Sampo	0728, 0782, 1377
Samsung	0603, 0774, 1962, 0850, 1105, 1966, 2038, 0520 1603, 1665, 1778, 0328, 2137, 2143
Sansui	0725, 0746, 0798, 0800, 1182, 0753, 0781, 1258 1371, 0881, 1579, 1862, 1914, 1725, 2017, 1859 0152, 1081, 1145, 0793, 1693, 1521
Sanyo	0700, 1471, 0862, 0725, 0820, 1693, 0903, 0743 1258
SAST	0836
Scan	0735, 0880
ScanMagic	0760, 1760
ScanSonic	0887
SCE	0819

Schaub Lorenz	0818, 1195, 0800, 1265, 1182
Schneider	0813, 0861, 0809, 0569, 0735, 0834, 0818, 0743 0681, 0899, 0820, 1183, 1914, 1397, 0676, 1535 0292, 1257
Schöntech	0743
Schwaiger	0782
Scientific Labs	0798, 1182
Scott	0810, 0681, 0702, 0911, 0883, 1066, 2044, 1263 1660, 2203
Seeltech	1254, 1481
SEG	0743, 0695, 0798, 1182, 0828, 0914, 0902, 0793 2024, 2005, 1560, 1203, 1513
SeViC	2094
Shanghai	0702
Sharp	0660, 0782, 0743, 0725, 2045, 1286, 1449, 2054
Sherwood	0747, 0771
Shinco	0747
Siemssen	1412
Sigmathek	0887, 1254, 1518, 2135
Siltex	1254
Silva	0818, 0928, 0861

Silva Schneider	0861, 1936, 0771
SilverCrest	1182, 1398, 0798, 0156, 0161, 2203
Singer	0746, 0753, 0781, 0798, 1182
Sinotec	0794, 0800, 1145
Sinudyne	1170, 1284
Sistemas	0702
Sky	0152, 2010, 2154
Skymaster	0760, 0798, 1182
Skysonic	0796
Skyworth	0928, 0796
Sliding	1145
Slim Art	0800
Slim Devices	0563
SM Electronic	0760, 0798
Smart	0735, 0743
Sogo	0883
Solavox	2119
Sonashi	0746, 0861
Soniko	0818

Soniq	1689
Sontech	1186
Sonwa	1034
Sony	0563, 1100, 2011, 1663, 2050, 1933, 0894, 0802 1964, 1063, 1099, 1047, 2073, 1897, 1566, 1854 2162
Sound Color	1263
Soundmaster	0798, 1182
Soundmax	0798, 1182
Soundwave	0813, 1560
Spectra	0902
Standard	0681, 1182, 0798, 0818, 0861, 0928
Star Clusters	0798, 1257, 1182, 0828
Star Sound	1472
StarLogic	1035
Starmedia	0848, 0923, 0911, 1254, 1035
Stevison	1397, 0706
Strato	1557, 1412, 2133, 1182
Strong	0743
Sumvision	1472, 1696

Sunfly	0887
Sunkai	0800, 0880
Sunstech	0861, 1102, 1650, 1541, 1301
Sunwood	0818
Supervision	0760, 0798
Supratech	0923
SVA	0702, 0782
Swisstec	2154
Symphonic	0705
Synn	0798, 1182
Sytech	0155

[Go Back](#)

DVD brands and codes

- T -

T.D.E. Systems	1186
Tandberg	0743, 1725
Tangent	2017, 1351
Targa	1188, 1257, 1649, 1674, 0146, 2106, 0771, 1936
Tatung	0800
Tchibo	0771
TCM	0771
Teac	0747, 0771, 0820, 0546, 0601, 0798, 0788, 1036 1182, 0765, 0621, 0789, 1959, 0863, 1966, 1257 0680, 1195, 0705, 1254, 1258, 1943, 1689, 2142 1693
TEC	0928
Technica	1203, 1397
Technics	0520, 1935, 1937, 1938
Technika	0800, 1145, 0861, 1660, 1560, 1195, 1519, 0157 1182
Technosonic	1081, 1145, 1579, 1397
Techwood	0743, 1560, 0569, 2024
Tecnimagen	1263

Tedex	1034, 1258, 0798, 0800, 1182
Telefunken	0820, 0819, 0818, 1258, 1953, 1862, 1720, 0680 0863, 1513, 1145, 0788, 0800, 0624, 1375, 1585
Teletech	0743, 0914, 1182, 0798
Tensai	0681, 0800
TerraTec	0855
Tevion	1066, 0681, 0828, 1412, 1451, 1200, 1535, 1182 1693, 0798, 1034, 1959, 2044, 1257, 0863, 1377 1760, 1660
Theta Digital	0601
Thomson	0581, 0552, 0147, 1284, 2010, 0861
Time	0152, 1541
Tiny	1519
Tokai	0928, 0695, 0728, 1587, 0818, 1263
Tokaido	0728
Tokiwa	0735, 0746
Tom-Tec	0819, 0863, 1480
Tongtel	0794
Top Suxess	1254
Toshiba	0533, 0788, 1075, 1540, 2036, 1667, 1799

Tosumi	1397, 2142
TProgress	0782
TRANS-continent	0902, 0861, 1357, 1195, 1263, 0863
Transonic	0702, 1195, 1469
Tredex	0829, 0873
Trevi	0861
Trio	0800
Tripox	1518
TruVision	0887, 1481
TSM	1254, 1579
TVE	0743

[Go Back](#)

DVD brands and codes

- U -

Umax	0561, 1181
Unimade	0152
United	0818, 0760, 0820, 1258, 0702, 1371, 1195, 0725 1145, 0729, 0798, 1263, 1203, 1519, 1585, 0743 0914, 1182, 1862, 1397, 2021, 0705, 1689, 1102 2142
Universal	1588
Universal Multimedia	0798, 1182
Universum	0771, 0743, 0621, 0809, 1948, 1943, 1257, 1859 0820, 1560
Uptek	0793, 0923
upXus	1310, 1375

[Go Back](#)

DVD brands and codes

- V -

Venturer	0820, 2112, 1799
-----------------	------------------

Vestel	0743, 1560, 2024
---------------	------------------

Vieta	0735, 1295
--------------	------------

Viewmaster	1114, 0892, 1254
-------------------	------------------

Voxson	0760, 0861
---------------	------------

VTrek	1258
--------------	------

[Go Back](#)

DVD brands and codes

- W -

Waitec	1254, 1947, 0760
Walkvision	0747, 1069, 0618
Waltham	1560
Welkin	0861
Wellington	0743
Welltech	0618, 1251
Weltstar	0743
Wesder	0729
Wharfedale	0798, 0726, 1862, 0728, 0753, 0820, 1182, 0781 0782, 0800, 1865, 1145
Wilson	0861, 1263
Windy Sam	0603
Wintel	1160
Wistar	1469
Woxter	1181, 0911, 1254, 1521

[Go Back](#)

DVD brands and codes

- X -

XBox	0552, 1738
Xenon	1953
XEOS	1579
XLogic	1862, 0911, 0800, 0798, 1182, 0828, 1258, 1445
XMS	0818, 1352, 0800
Xomax	2142
Xoro	1213, 1203, 0836, 1251, 1521
Xwave	0561

[Go Back](#)

DVD brands and codes

- Y -

Yakumo	1034,1086
Yamada	1034, 0902, 1181, 1446, 1086, 1519, 1188, 1521 2135
Yamaha	0569, 0676, 0847, 0520, 1188
Yamakawa	0695, 1579, 0902, 1134, 1519
Yelo	0810
Yukai	0760, 1947

[Go Back](#)

DVD brands and codes

- Z -

Zenith	0533, 0621, 0771
---------------	------------------

Zennox	1295
---------------	------

Zeus	0881
-------------	------

[Go Back](#)

DVD brands and codes

- etc -

3 Plus	0520
3D LAB	0569, 1579
4Kus	1188

[Go Back](#)

Satellite

Bush

1267

[Go Back](#)

www.fetchtv.com.au

©Fetch TV Pty Limited. ABN 36 130 669 500. All rights reserved. Fetch TV Pty Limited is the owner of the trade marks Fetch TV. The set top box and the Fetch TV service may only be used lawfully and in accordance with relevant terms of use of which you are notified by your service provider. You may only use the recording functionality of the set top box for the purpose of viewing programs at your address at a more convenient time. You must not use any recording or the electronic program guide, or any part of it, for any purpose other than private and domestic purposes and you must not sub-licence, sell, lease, lend, upload, download, communicate or distribute it (or any part of it) to any person.

Version: 09102012